
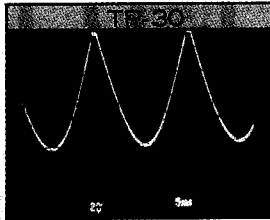
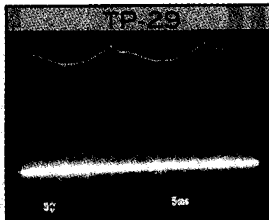
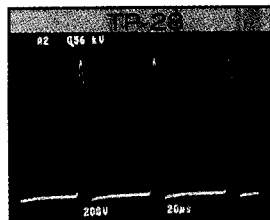
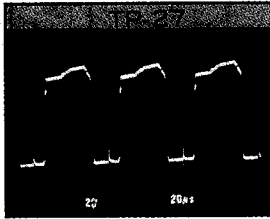
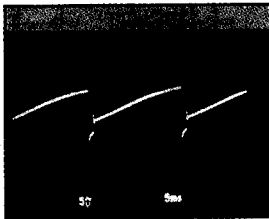
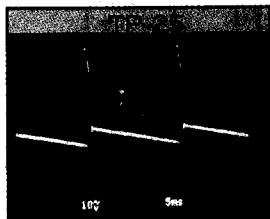
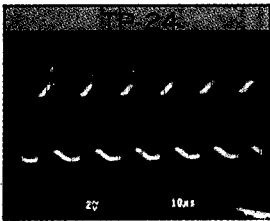
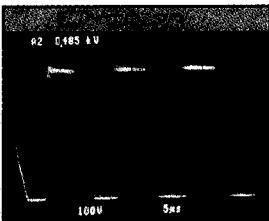
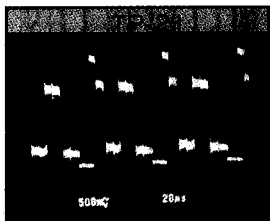
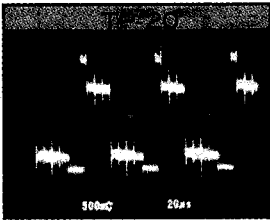
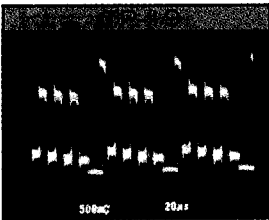
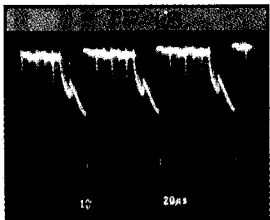
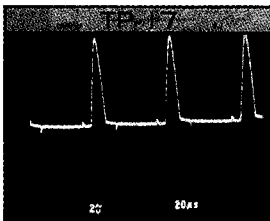
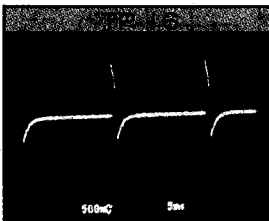
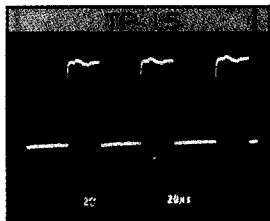
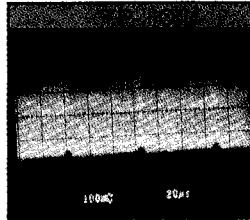
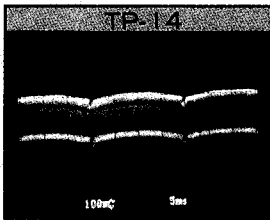
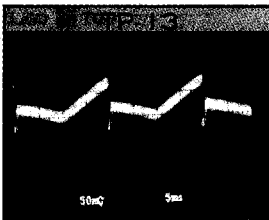


SAMSUNG


Mod. TVC - CX 6837 AN AW
CX 6840 AW

telaio Z 68

www.DataSheet.in

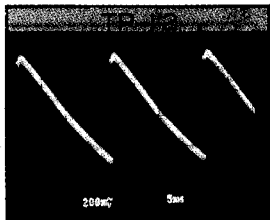


PWB-CRT

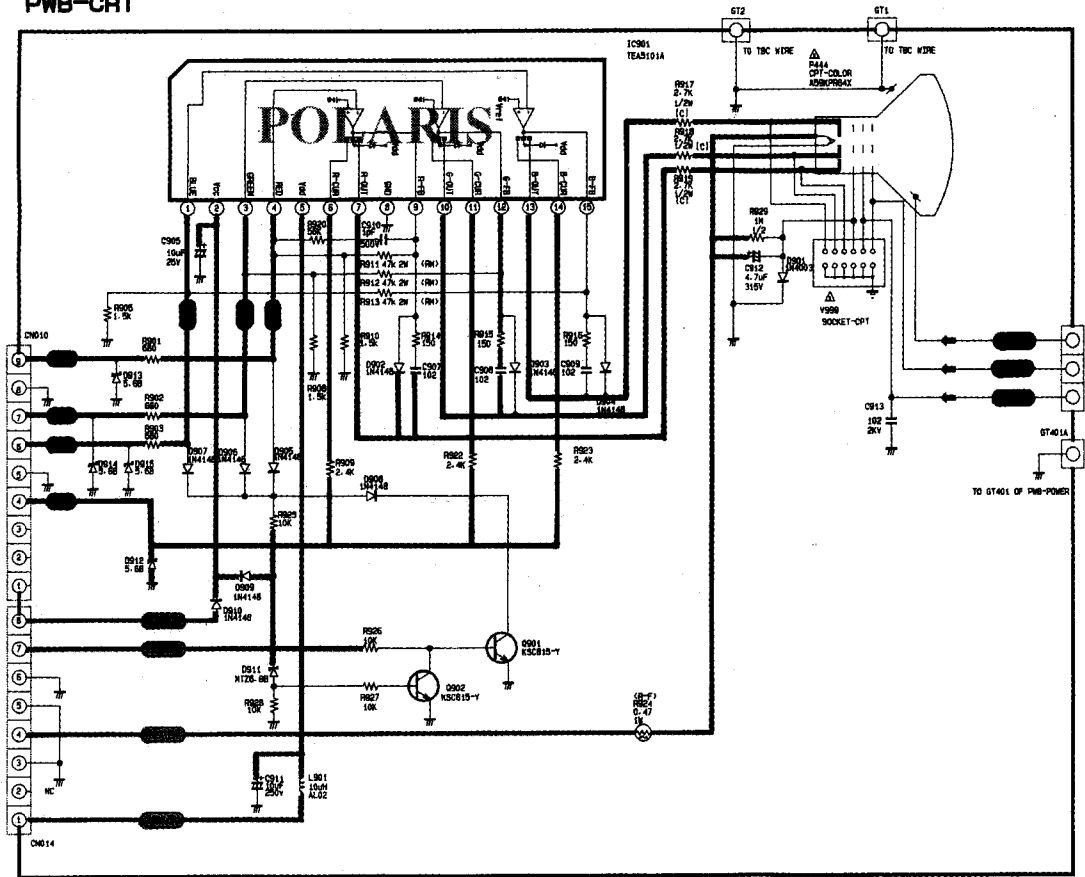

www.DataSheet.in

PWB-TRANSMITTER

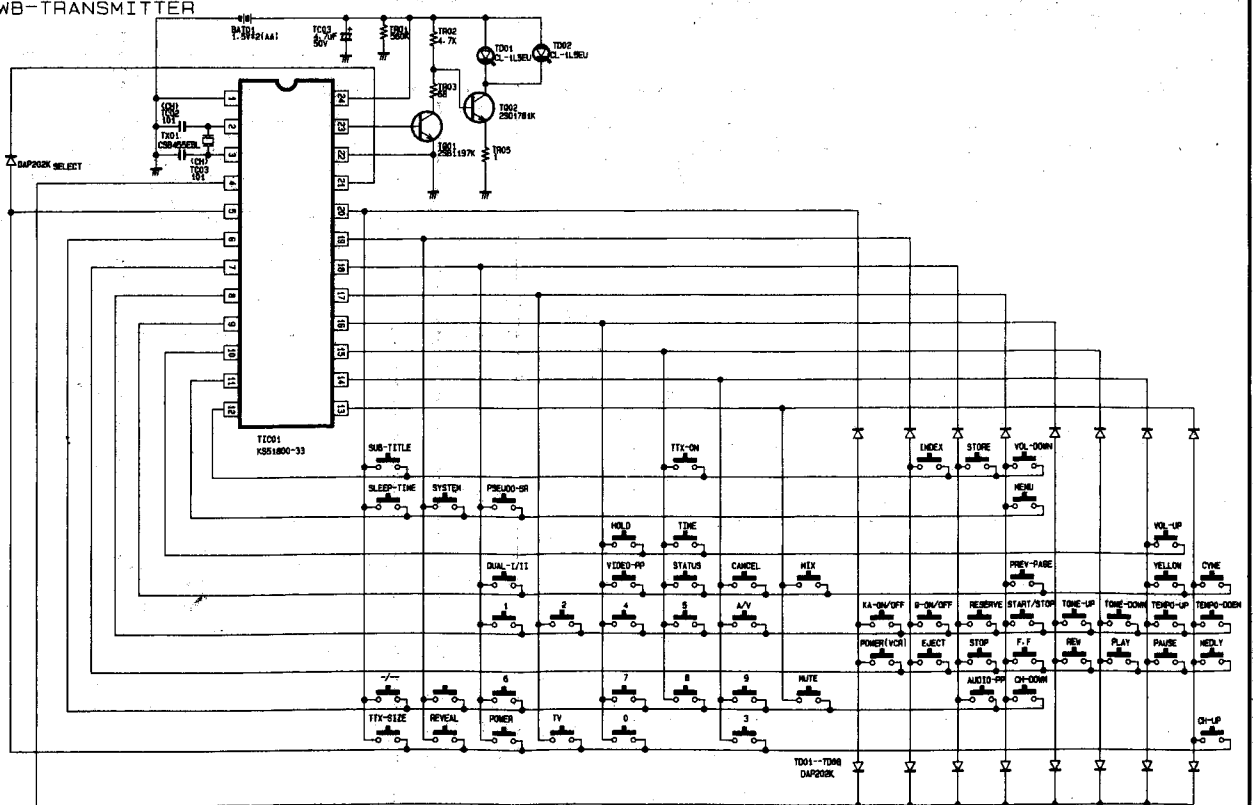




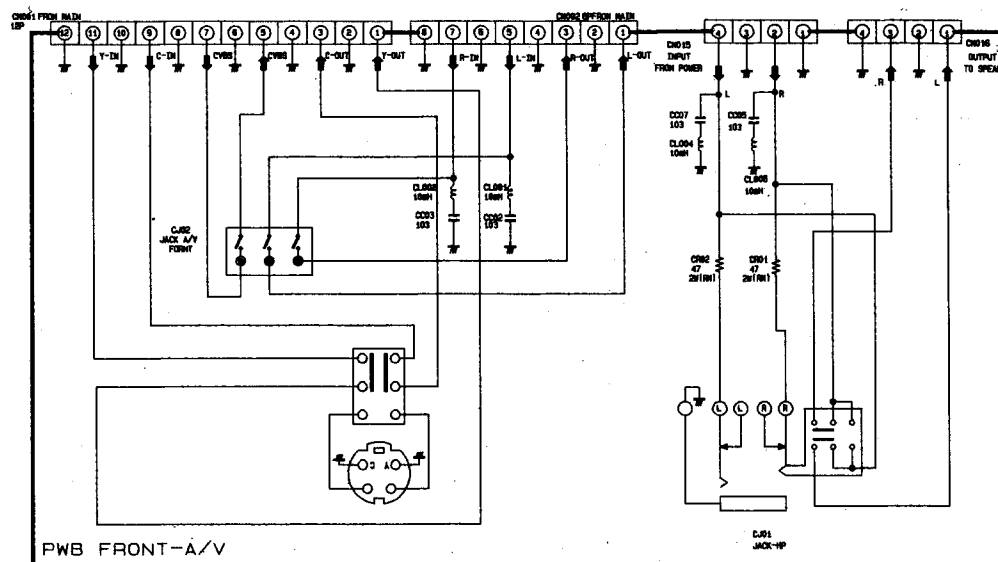
[illegible]

Diagram of the PCB control panel showing various switches and their functions:

- SW03**: CH/DOWN
- SW04**: CH/UP
- SW02**: VOL/UP
- SW01**: VOL/DOWN
- SW05**: FUNCTION
- SW06**: PCB-CONTROL
- CH02**: 5 3 6 4 1 2
- Z68**: 5937/6837
- P012000**

36029-0112-000

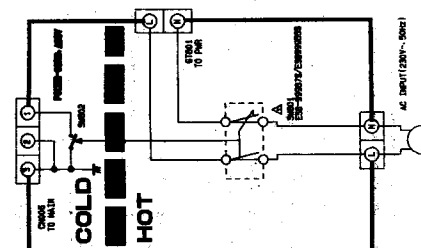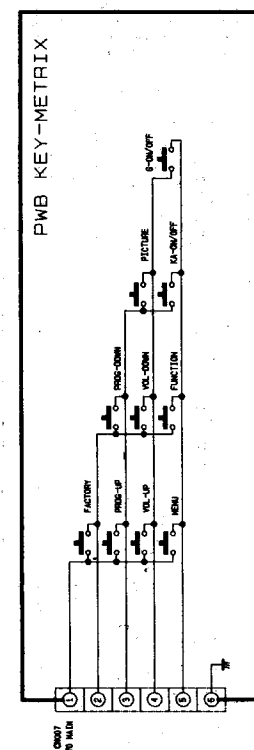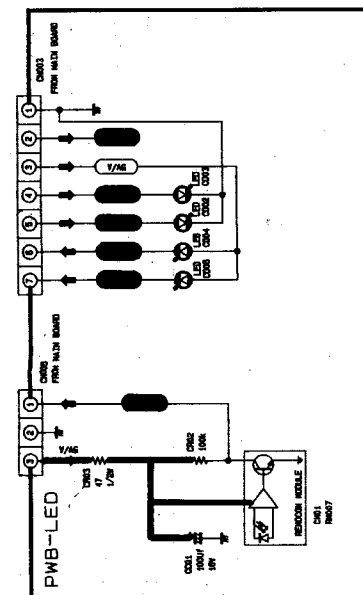

PWB-POWER

