

NEC

User's Manual

IE-789842-NS-EM1

Emulation Board

Target Devices

μ PD789842 Subseries

Document No. U14545EJ2V0UM00 (2nd edition)
Date Published December 2002 N CP(K)

© NEC Electronics Corporation 2000
Printed in Japan

[MEMO]

Windows is either a registered trademark or a trademark of Microsoft Corporation in the United States and/or other countries.

PC/AT is a trademark of International Business Machines Corporation.

• **The information in this document is current as of September, 2002. The information is subject to change without notice. For actual design-in, refer to the latest publications of NEC Electronics data sheets or data books, etc., for the most up-to-date specifications of NEC Electronics products. Not all products and/or types are available in every country. Please check with an NEC Electronics sales representative for availability and additional information.**

• No part of this document may be copied or reproduced in any form or by any means without the prior written consent of NEC Electronics. NEC Electronics assumes no responsibility for any errors that may appear in this document.

• NEC Electronics does not assume any liability for infringement of patents, copyrights or other intellectual property rights of third parties by or arising from the use of NEC Electronics products listed in this document or any other liability arising from the use of such products. No license, express, implied or otherwise, is granted under any patents, copyrights or other intellectual property rights of NEC Electronics or others.

• Descriptions of circuits, software and other related information in this document are provided for illustrative purposes in semiconductor product operation and application examples. The incorporation of these circuits, software and information in the design of a customer's equipment shall be done under the full responsibility of the customer. NEC Electronics assumes no responsibility for any losses incurred by customers or third parties arising from the use of these circuits, software and information.

• While NEC Electronics endeavors to enhance the quality, reliability and safety of NEC Electronics products, customers agree and acknowledge that the possibility of defects thereof cannot be eliminated entirely. To minimize risks of damage to property or injury (including death) to persons arising from defects in NEC Electronics products, customers must incorporate sufficient safety measures in their design, such as redundancy, fire-containment and anti-failure features.

• NEC Electronics products are classified into the following three quality grades: "Standard", "Special" and "Specific".

The "Specific" quality grade applies only to NEC Electronics products developed based on a customer-designated "quality assurance program" for a specific application. The recommended applications of an NEC Electronics product depend on its quality grade, as indicated below. Customers must check the quality grade of each NEC Electronics product before using it in a particular application.

"Standard": Computers, office equipment, communications equipment, test and measurement equipment, audio and visual equipment, home electronic appliances, machine tools, personal electronic equipment and industrial robots.

"Special": Transportation equipment (automobiles, trains, ships, etc.), traffic control systems, anti-disaster systems, anti-crime systems, safety equipment and medical equipment (not specifically designed for life support).

"Specific": Aircraft, aerospace equipment, submersible repeaters, nuclear reactor control systems, life support systems and medical equipment for life support, etc.

The quality grade of NEC Electronics products is "Standard" unless otherwise expressly specified in NEC Electronics data sheets or data books, etc. If customers wish to use NEC Electronics products in applications not intended by NEC Electronics, they must contact an NEC Electronics sales representative in advance to determine NEC Electronics' willingness to support a given application.

(Note)

(1) "NEC Electronics" as used in this statement means NEC Electronics Corporation and also includes its majority-owned subsidiaries.

(2) "NEC Electronics products" means any product developed or manufactured by or for NEC Electronics (as defined above).

Regional Information

Some information contained in this document may vary from country to country. Before using any NEC Electronics product in your application, please contact the NEC Electronics office in your country to obtain a list of authorized representatives and distributors. They will verify:

- Device availability
- Ordering information
- Product release schedule
- Availability of related technical literature
- Development environment specifications (for example, specifications for third-party tools and components, host computers, power plugs, AC supply voltages, and so forth)
- Network requirements

In addition, trademarks, registered trademarks, export restrictions, and other legal issues may also vary from country to country.

NEC Electronics America, Inc. (U.S.)

Santa Clara, California
Tel: 408-588-6000
800-366-9782
Fax: 408-588-6130
800-729-9288

NEC Electronics (Europe) GmbH

Duesseldorf, Germany
Tel: 0211-65 03 01
Fax: 0211-65 03 327

• Sucursal en España

Madrid, Spain
Tel: 091-504 27 87
Fax: 091-504 28 60

• Succursale Française

Vélizy-Villacoublay, France
Tel: 01-30-67 58 00
Fax: 01-30-67 58 99

• Filiale Italiana

Milano, Italy
Tel: 02-66 75 41
Fax: 02-66 75 42 99

• Branch The Netherlands

Eindhoven, The Netherlands
Tel: 040-244 58 45
Fax: 040-244 45 80

• Tyskland Filial

Taeby, Sweden
Tel: 08-63 80 820
Fax: 08-63 80 388

• United Kingdom Branch

Milton Keynes, UK
Tel: 01908-691-133
Fax: 01908-670-290

NEC Electronics Hong Kong Ltd.

Hong Kong
Tel: 2886-9318
Fax: 2886-9022/9044

NEC Electronics Hong Kong Ltd.

Seoul Branch
Seoul, Korea
Tel: 02-528-0303
Fax: 02-528-4411

NEC Electronics Shanghai, Ltd.

Shanghai, P.R. China
Tel: 021-6841-1138
Fax: 021-6841-1137

NEC Electronics Taiwan Ltd.

Taipei, Taiwan
Tel: 02-2719-2377
Fax: 02-2719-5951

NEC Electronics Singapore Pte. Ltd.

Novena Square, Singapore
Tel: 6253-8311
Fax: 6250-3583

Major Revisions in This Edition

Page	Description
Throughout	<ul style="list-style-type: none"> • Addition of IE-78K0S-NS-A as supported in-circuit emulator • Addition of NP-44GB-TQ and NP-H44GB-TQ as supported emulation probes • Addition of TGB-044SAP as supported conversion adapter
pp. 12, 13	<p>Figure 1-1 System Configuration</p> <ul style="list-style-type: none"> • Modification of supply medium of debugger ID78K0S-NS to CD-ROM • Modification of the shape of interface cable • Modification of Notes 1 to 3 • Addition of Table 1-1 Correspondence Between Emulation Probe and Conversion Socket/Conversion Adapter
p. 15	Partial modification of Table 1-2 Basic Specifications
p. 20	<p>3.2 Switch and Jumper Settings on Main Unit</p> <ul style="list-style-type: none"> • Addition of (2) Settings on the IE-78K0S-NS-A
p. 28 of previous edition	Deletion of 3.3 Low-Voltage Emulation Setting
p. 21	Addition of 3.3 Setting Power Supply Voltage of Target Interface
pp. 22 to 24	<p>3.4.1 Overview of clock settings</p> <ul style="list-style-type: none"> • Change from “internal clock” in previous edition to “clock oscillator” • Figure 3-3 External Circuits Used as System Clock Oscillator Addition of V_{ss} pin in figure of (a) Clock oscillator • Figure 3-4 When Using Clock That Is Already Mounted on Emulation Board, Figure 3-5 When Using User-Mounted Clock Change from “resonator” in previous revision to “clock oscillator or external clock” on target system • Change from “clock generator” in previous edition to “external clock” in Figure 3-6 When Supplying Pulse from Target System
pp. 24 to 27	<p>3.4.2 System clock settings</p> <ul style="list-style-type: none"> • Change from “main system clock” in the previous edition to “system clock”
pp. 34, 35	Addition of APPENDIX B NOTES ON DESIGNING TARGET SYSTEM

The mark ★ shows major revised points.

INTRODUCTION

Product Overview

The IE-789842-NS-EM1 is designed to be used with the IE-78K0S-NS or IE-78K0S-NS-A to debug the following target devices that belong to the 78K/0S Series of 8-bit single-chip microcontrollers.

- μ PD789842 Subseries: μ PD789841, 789842, 78F9842

Target Readers

This manual is intended for engineers who will use the IE-789842-NS-EM1 with the IE-78K0S-NS or IE-78K0S-NS-A to perform system debugging.

Engineers who use this manual are expected to be thoroughly familiar with the target device's functions and use methods and to be knowledgeable about debugging.

Organization

When using the IE-789842-NS-EM1, refer to not only this manual (supplied with the IE-789842-NS-EM1) but also the manual that is supplied with the IE-78K0S-NS or IE-78K0S-NS-A.

IE-78K0-NS

User's Manual

- Basic specifications
- System configuration
- External interface functions

IE-789842-NS-EM1

User's Manual

- General
- Part names
- Installation
- Differences between target devices and target interface circuits
- Precautions

IE-78K0S-NS-A

User's Manual

- Basic specifications
- System configuration
- External interface functions

Purpose

This manual's purpose is to explain various debugging functions that can be performed when using the IE-789842-NS-EM1.

Terminology

The meanings of certain terms used in this manual are listed below.

Term	Meaning
Emulation device	This is a general term that refers to the device in the emulator that is used to emulate the target device. It includes the emulation CPU.
Emulation CPU	This is the CPU block in the emulator that is used to execute user-generated programs.
Target device	This is the device to be emulated.
Target system	This includes the target program and the hardware provided by the user. When defined narrowly, it includes only the hardware.
IE system	This refers to the combination of the in-circuit emulator (IE-78K0S-NS or IE-78K0S-NS-A) and emulation board (IE-789842-NS-EM1).

Conventions

Data significance: Higher digits on the left and lower digits on the right

Note: Footnote for item marked with **Note** in the text

Caution: Information requiring particular attention

Remark: Supplementary information

Related Documents

The related documents (user's manuals) indicated in this publication may include preliminary versions. However, preliminary versions are not marked as such.

Document Name	Document Number
IE-78K0S-NS In-Circuit Emulator	U13549E
IE-78K0S-NS-A In-Circuit Emulator	U15207E
IE-789842-NS-EM1 Emulation Board	This manual
ID78K Series Integrated Debugger Ver. 2.30 or Later Operation Windows™ Based	U15185E
μPD789842 Subseries	U13776E

Caution The documents listed above are subject to change without notice. Be sure to use the latest documents when designing.

CONTENTS

CHAPTER 1	GENERAL	11
1.1	System Configuration	12
1.2	Hardware Configuration	14
1.3	Basic Specifications	15
CHAPTER 2	PART NAMES	16
2.1	Parts of Main Unit	17
CHAPTER 3	INSTALLATION	18
3.1	Connection	19
3.2	Switch and Jumper Settings on Main Unit	20
★ 3.3	Setting Power Supply Voltage of Target Interface	21
3.4	Clock Settings	22
3.4.1	Overview of clock settings	22
3.4.2	System clock settings	24
3.5	External Trigger	28
CHAPTER 4	DIFFERENCES BETWEEN TARGET DEVICE AND TARGET INTERFACE CIRCUIT	29
CHAPTER 5	CAUTIONS	32
APPENDIX A	EMULATION PROBE PIN ASSIGNMENT TABLE	33
★ APPENDIX B	NOTES ON DESIGNING TARGET SYSTEM	34

LIST OF FIGURES

Figure No.	Title	Page
1-1	System Configuration	12
1-2	Basic Hardware Configuration.....	14
2-1	IE-789842-NS-EM1 Part Names	17
3-1	Connection of Emulation Probe.....	19
3-2	Connecting TM1 and Target System Power Supply Voltage.....	21
3-3	External Circuits Used as System Clock Oscillator	22
3-4	When Using Clock That Is Already Mounted on Emulation Board	23
3-5	When Using User-Mounted Clock	23
3-6	When Supplying Pulse from Target System.....	24
3-7	Connections on Parts Board.....	25
3-8	Crystal Oscillator	26
3-9	Pin Alignment of Crystal Oscillator and Socket	27
3-10	External Trigger Input Position	28
4-1	Equivalent Circuit of Emulation Circuit	31
B-1	Distance Between IE System and Conversion Adapter	34
B-2	Connection Conditions of Target System (NP-44GB-TQ)	35
B-3	Connection Conditions of Target System (NP-H44GB-TQ).....	35

LIST OF TABLES

Table No.	Title	Page
1-1	Correspondence Between Emulation Probe and Conversion Socket/Conversion Adapter.....	13
1-2	Basic Specifications.....	15
3-1	Switch and Jumper Settings on IE-78K0S-NS.....	20
3-2	Switch and Jumper Settings on IE-78K0S-NS-A	20
3-3	Setting Power Supply of Target Interface	21
3-4	System Clock Settings.....	24
A-1	NP-44GB, NP-44GB-TQ, NP-H44GB-TQ Pin Assignments	33
B-1	Distance Between IE System and Conversion Adapter.....	34

CHAPTER 1 GENERAL

The IE-789842-NS-EM1 is a development tool for efficient debugging of hardware or software when using one of the following target devices that belong to the 78K/0S Series of 8-bit single-chip microcontrollers.

This chapter describes the IE-789842-NS-EM1's system configuration and basic specifications.


- Target devices
 - μ PD789842 Subseries

1.1 System Configuration

Figure 1-1 illustrates the IE-789842-NS-EM1's system configuration.

★

Figure 1-1. System Configuration

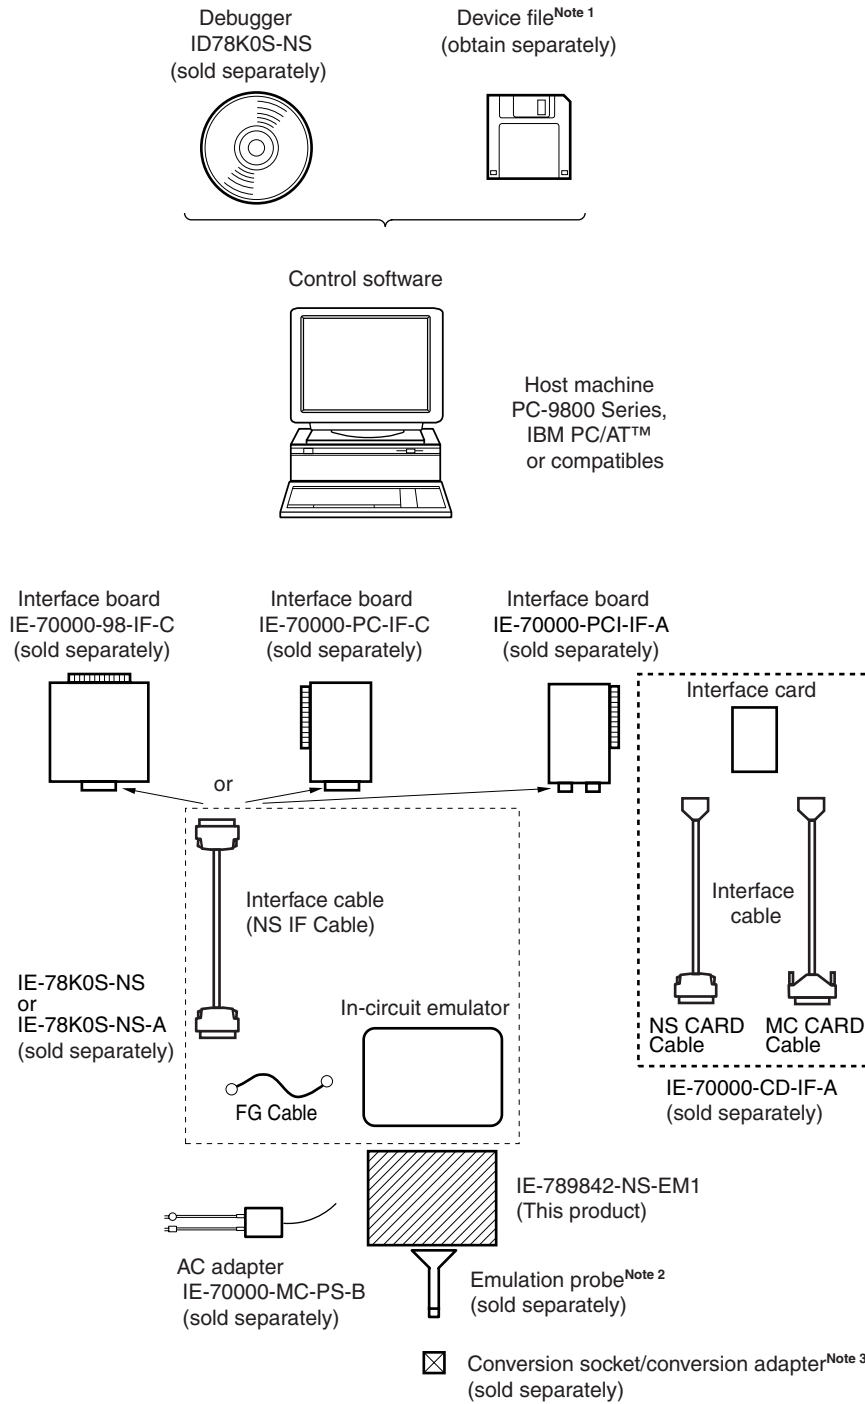

Notes 1. The device file is as follows, in accordance with the subseries.

μ SxxxxDF789842: μ PD789842 Subseries

The device file can be downloaded from the web site of NEC Electronics
(<http://www.necel.com/micro/>)

2. The emulation probes NP-44GB, NP-44GB-TQ, and NP-H44GB-TQ are products of Naito Densei Machida Mfg. Co., Ltd.

For further information, contact Naito Densei Machida Mfg. Co., Ltd. (TEL: +81-45-475-4191)

3. The conversion adapter TGB-044SAP is a product of TOKYO ELETECH CORPORATION.

For further information, contact Daimaru Kogyo Co., Ltd.

Tokyo Electronics Department (TEL: +81-3-3820-7112)

Osaka Electronics Department (TEL: +81-6-6244-6672)


Table 1-1. Correspondence Between Emulation Probe and Conversion Socket/Conversion Adapter

Package	Emulation Probe	Conversion Socket/Conversion Adapter
44-pin plastic QFP (GB type)	NP-44GB (probe length: 200 mm)	EV-9200G-44
	NP-44GB-TQ (probe length: 200 mm)	TGB-044SAP
	NP-H44GB-TQ (probe length: 400 mm)	

1.2 Hardware Configuration

Figure 1-2 shows the IE-789842-NS-EM1's position in the basic hardware configuration.

Figure 1-2. Basic Hardware Configuration

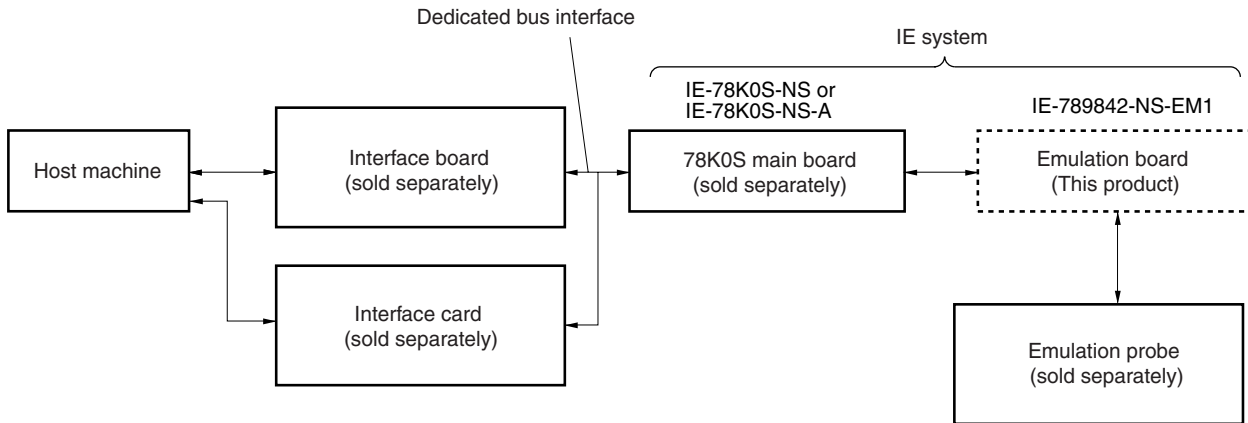

1.3 Basic Specifications

The basic specifications of the IE-789842-NS-EM1 are listed in Table 1-2.

★

Table 1-2. Basic Specifications

Parameter	Description
Target device	μ PD789842 Subseries
System clock	8.38 MHz
System clock supply	External: Input via an emulation probe from the target system Internal: Mounted on the emulation board (8.38 MHz), or mounted on the parts board by the user
Target interface voltage	$V_{DD} = 4.0$ to 5.5 V (same as that of target device) Operates on internal power supply (5 V) when target system is not connected

CHAPTER 2 PART NAMES

This chapter introduces the parts of the IE-789842-NS-EM1 main unit.

The packing box contains the emulation board (IE-789842-NS-EM1), packing list, user's manual, and guarantee card.


If there are any missing or damaged items, please contact an NEC Electronics sales representative.

Fill out and return the guarantee card that comes with the main unit.

2.1 Parts of Main Unit

Figure 2-1 shows the part names of the IE-789842-NS-EM1.

Figure 2-1. IE-789842-NS-EM1 Part Names

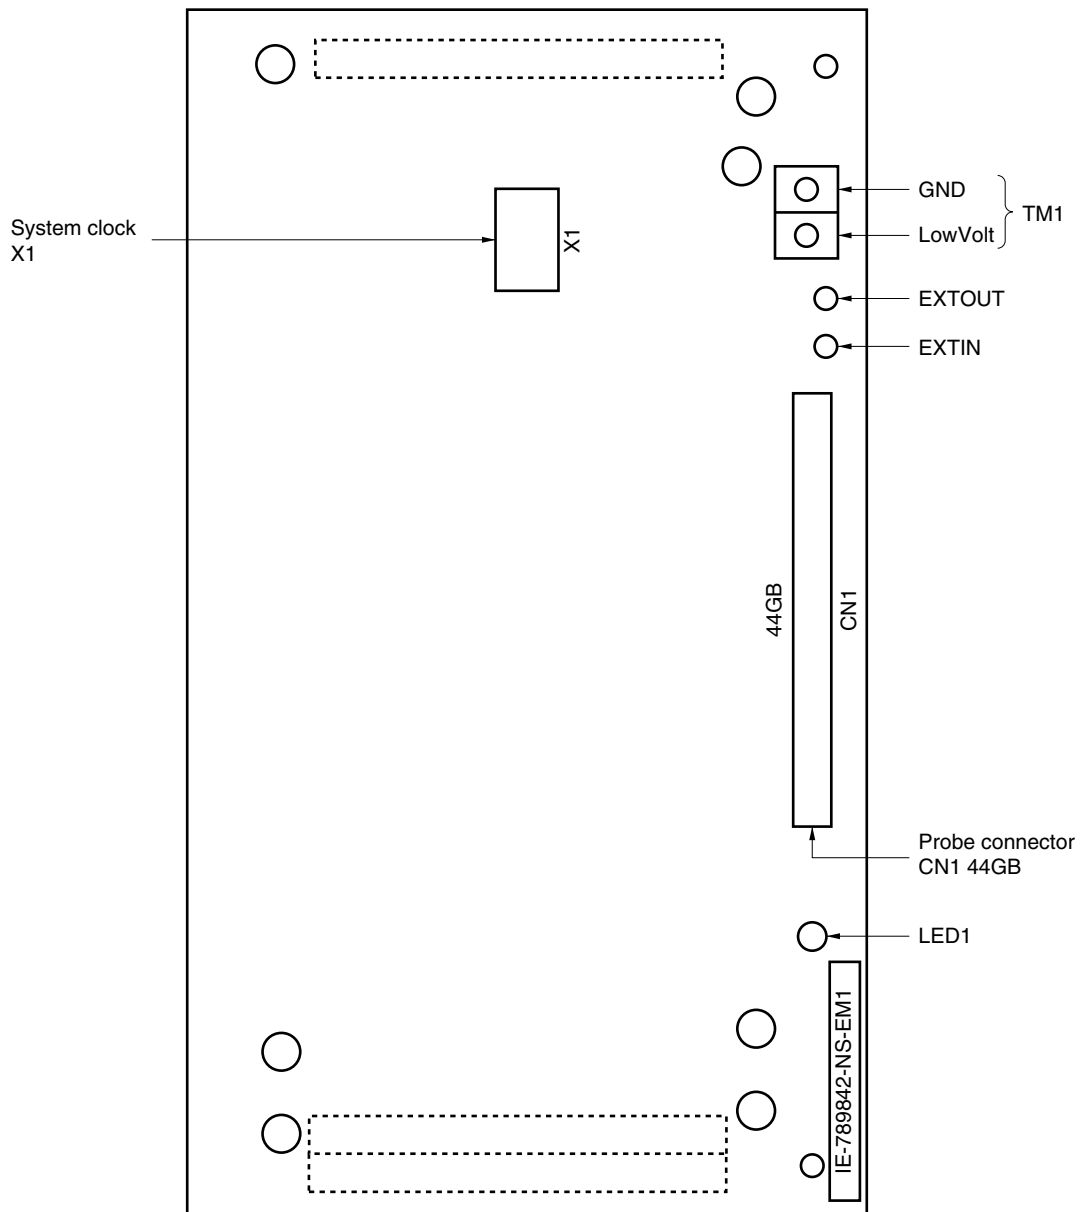

CHAPTER 3 INSTALLATION

This chapter describes methods for connecting the IE-789842-NS-EM1 to the IE-78K0S-NS or IE-78K0S-NS-A, emulation probe, etc. Mode setting methods are also described.

Caution Connecting or removing components to or from the target system, or making switch or other setting changes must be carried out after the power supply to both the IE system and the target system has been switched OFF.

3.1 Connection

(1) Connection with IE-78K0S-NS or IE-78K0S-NS-A main unit

See the **IE-78K0S-NS User's Manual (U13549E)** for a description of how to connect the IE-789842-NS-EM1 to the IE-78K0S-NS^{Note}.

Note When using the IE-78K0S-NS-A, see the **IE-78K0S-NS-A User's Manual (U15207E)**.

(2) Connection with emulation probe

See the **IE-78K0S-NS User's Manual (U13549E)** for a description of how to connect an emulation probe to the IE-789842-NS-EM1^{Note}.


On this board, connect the emulation probe to CN1.

Note When using the IE-78K0S-NS-A, see the **IE-78K0S-NS-A User's Manual (U15207E)**.

Caution Incorrect connection may damage the IE system.

Be sure to read the emulation probe's user's manual for a detailed description of the connection method.

Figure 3-1. Connection of Emulation Probe

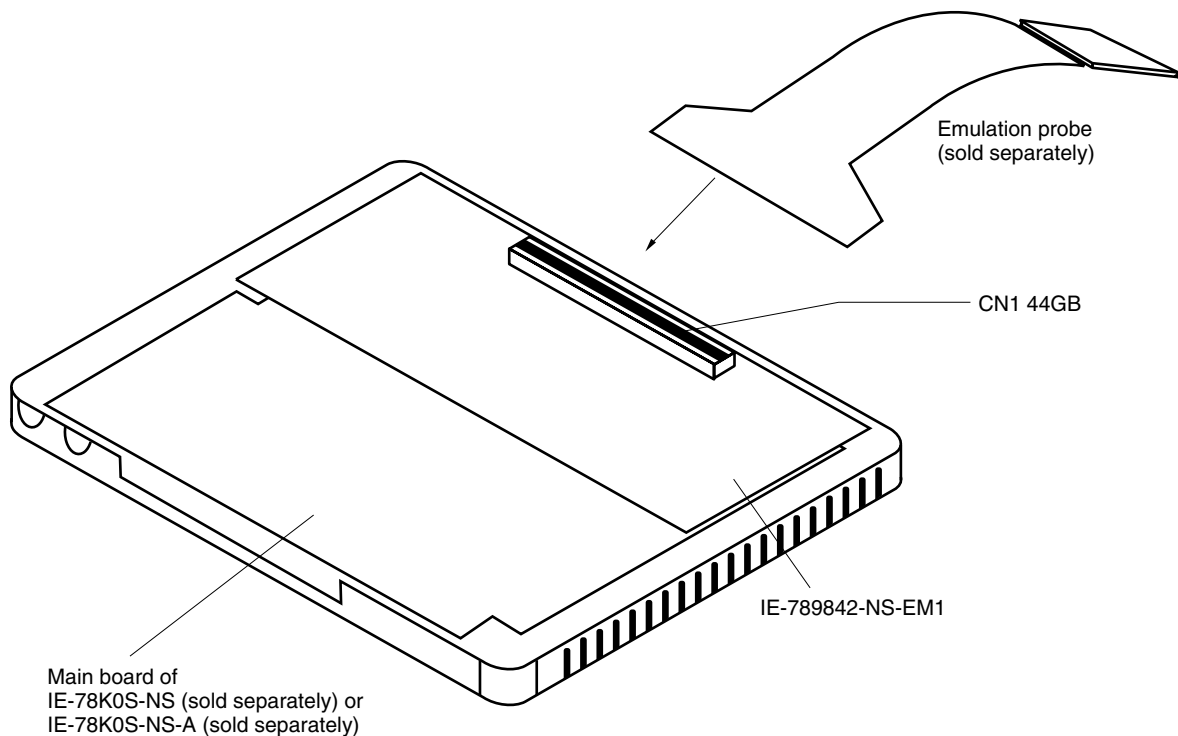

3.2 Switch and Jumper Settings on Main Unit

(1) Settings on the IE-78K0S-NS

When using the IE-789842-NS-EM1, set the switches and jumpers on the IE-78K0S-NS as shown in Table 3-1. For details of these switch and jumper settings, refer to the **IE-78K0S-NS User's Manual (U13549E)**.

Table 3-1. Switch and Jumper Settings on IE-78K0S-NS

	SW1	SW3	SW4	JP1	JP4
Setting	OFF	All switches ON (Fixed)	All switches ON (Fixed)	2 and 3 shorted	1 and 2 shorted

Caution Incorrect connection may damage the IE-789842-NS-EM1.

★ (2) Settings on the IE-78K0S-NS-A

When using the IE-789842-NS-EM1, set the switches and jumpers on the IE-78K0S-NS-A as shown in Table 3-2. For details of these switch and jumper settings, refer to the **IE-78K0S-NS-A User's Manual (U15207E)**.

Table 3-2. Switch and Jumper Settings on IE-78K0S-NS-A

	SW1	JP1	JP3
Setting	OFF	1 and 2 shorted (fixed)	Shorted (fixed)

Caution Incorrect connection may damage the IE-789842-NS-EM1.

★ **3.3 Setting Power Supply Voltage of Target Interface**

In the IE system, emulation is possible with a voltage of the same level as the power supply voltage of the target system.

When the target system is not connected, the IE system automatically operates with the emulator’s internal power supply (5 V).

When debugging with a voltage that is the same level as that of the target system, supply the same voltage as that of the target system to the TM1 terminal pin of the IE-789842-NS-EM1 (the same applies when the voltage is 5 V).

Set the target voltage to between 4.0 and 5.0 V.


For how to select the operating power supply, refer to the **ID78K Series Ver.2.30 or Later Operation Windows-Based User’s Manual (U15185E)**.

- Maximum current consumption of TM1
4.0 to 5.0 V: Approximately 125 mA

Table 3-3. Setting Power Supply of Target Interface

Power Supply of Target Interface (LVcc)		Integrated Debugger (ID78K0S-NS)
		Operating Power Supply Selection
When connecting target system	4.0 to 5.0 V	Target
When not connecting target system	5 V	Internal

Figure 3-2. Connecting TM1 and Target System Power Supply Voltage

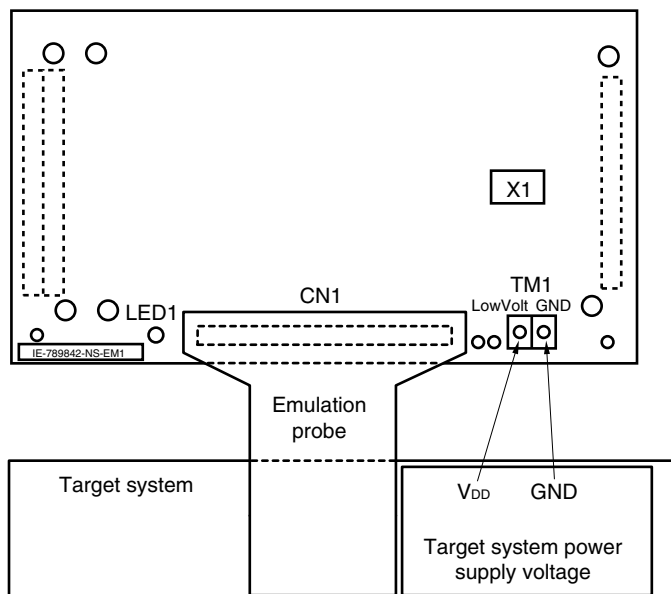

Caution Before connecting TM1 on the board and the target system power supply voltage, turn off the power to the IE-78K0S-NS or IE-78K0S-NS-A.

Remark The V_{DD} pin on the target system is exclusively used to control LED1, which monitors whether the power supply of the target system is connected in the IE-789842-NS-EM1.

3.4 Clock Settings

3.4.1 Overview of clock settings

The system clock to be used during debugging can be selected from (1) to (3) below.

- (1) Clock that is already mounted on emulation board
- (2) Clock that is mounted by user
- (3) Pulse input from target system


★ If the target system includes a clock oscillator, select either **(1) Clock that is already mounted on emulation board** or **(2) Clock that is mounted by user**. For the clock oscillator, a resonator is connected to the target device and the target device's internal oscillator is used. An example of the external circuit is shown in part (a) of Figure 3-3. During emulation, the oscillator that is mounted on the target system is not used. Instead, the clock that is mounted on the emulation board installed in the IE-78K0S-NS or IE-78K0S-NS-A is used.

If the target system includes an external clock, select either **(1) Clock that is already mounted on emulation board**, **(2) Clock that is mounted by user**, or **(3) Pulse input from target system**.

For the external clock, a clock signal is supplied from outside of the target device and the target device's internal oscillator is not used. An example of the external circuit is shown in part (b) of Figure 3-3.

Caution The IE system will be hung-up if the main system clock is not supplied normally. Moreover, be sure to input a rectangular wave as the pulse from the target system. There is no need to supply a clock to the X2 pin. Also, even if a crystal resonator is connected directly to X1, the target device will not operate.

★ **Figure 3-3. External Circuits Used as System Clock Oscillator**

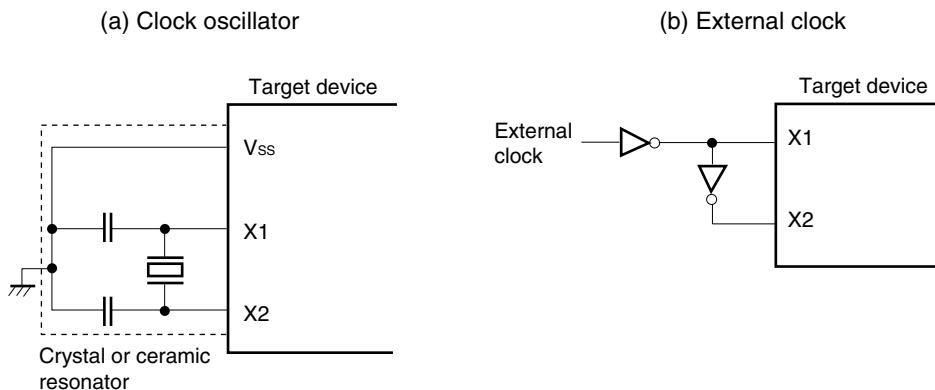


(1) Clock that is already mounted on emulation board

The crystal oscillator mounted on the IE-789842-NS-EM1 can be used.

A crystal oscillator (X1) is already mounted on the emulation board. Its frequency is 8.38 MHz.

★

Figure 3-4. When Using Clock That Is Already Mounted on Emulation Board

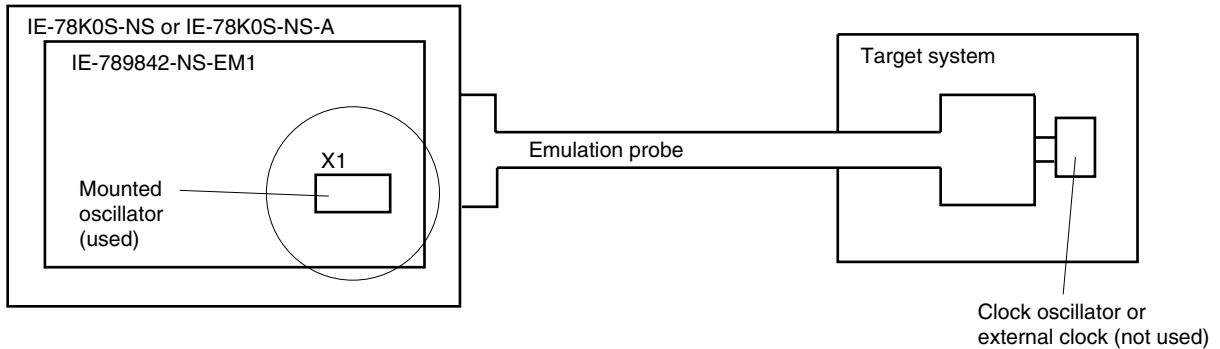

Remark The clock that is supplied by the oscillator of the IE-789842-NS-EM1 (encircled in the figure) is used.


(2) Clock that is mounted by user

The user can mount any clock supported by the set specifications on the IE-789842-NS-EM1. This feature is effective when debugging at a different frequency than the clock already mounted.

Remove the crystal oscillator (X1) that is already mounted on the emulation board, and mount the parts board on which the resonator to be used is mounted or mount the oscillator to be used.

★

Figure 3-5. When Using User-Mounted Clock

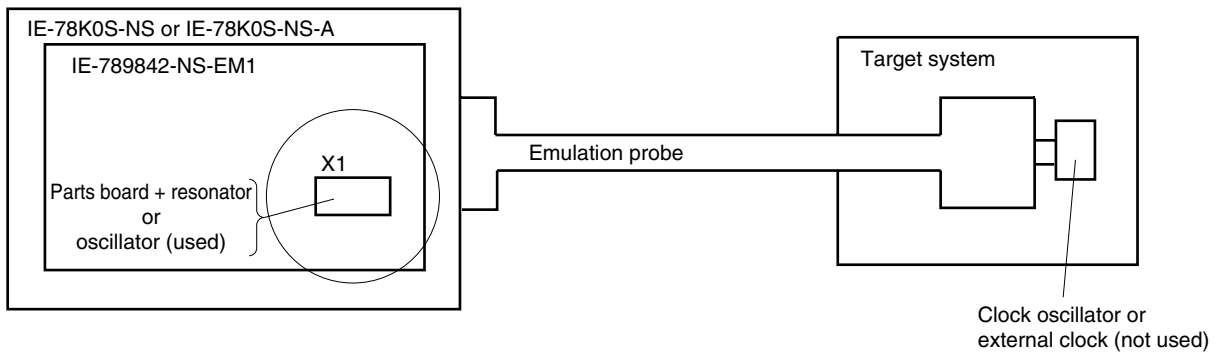


Remark The clock that is supplied by the resonator of the IE-789842-NS-EM1 (encircled in the figure) or the oscillator is used.

(3) Pulse input from target system

An external clock on the target system can be used via an emulation probe.

★

Figure 3-6. When Supplying Pulse from Target System

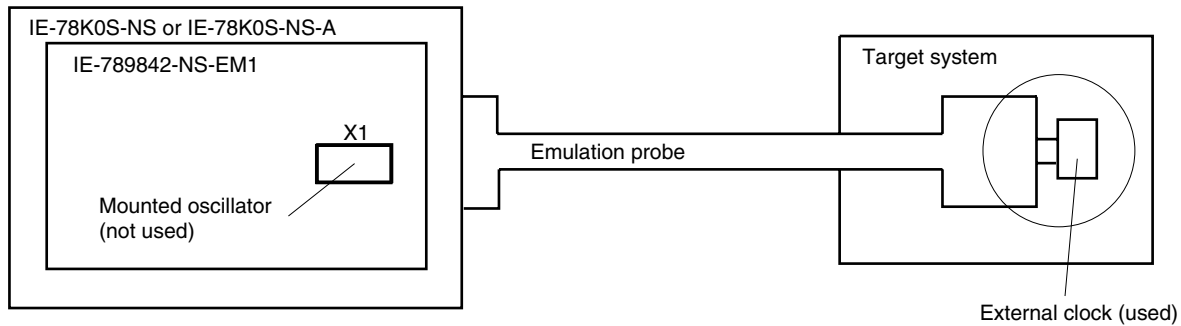

Remark The pulse that is supplied by the external clock on the target system (encircled in the figure) or the oscillator is used.

★ **3.4.2 System clock settings**

Table 3-4 shows the settings of the IE-789842-NS-EM1 when the system clocks in (1) to (3) are used.

Table 3-4. System Clock Settings

Frequency of System Clock		IE-789842-NS-EM1	CPU Clock Source Selection (ID78K0S-NS)
		X1 Socket	
(1) When using clock that is already mounted on emulation board	8.38 MHz	Oscillator	Internal
(2) When using clock mounted by user	Other than 8.38 MHz	Oscillator configured by user	
(3) When inputting pulse from target system		Oscillator (not used)	External

Caution When inputting a pulse from the target system, open the configuration dialog box when starting the integrated debugger (ID78K0S-NS) and select “External” in the area (Clock) for selecting the CPU’s clock source (this selects the user’s clock).

Remark The factory settings of the IE-789842-NS-EM1 are those listed above under “when using clock that is already mounted on emulation board”.

(1) When using clock that is already mounted on emulation board

When the IE-789842-NS-EM1 is shipped, an 8.38 MHz crystal oscillator is already mounted in the IE-789842-NS-EM1’s X1 socket. When using the factory-set mode settings, there is no need to make any other hardware settings.

When starting the integrated debugger (ID78K0S-NS), open the configuration dialog box and select “Internal” in the area (Clock) for selecting the CPU’s clock source (this selects the emulator’s internal clock).

(2) When using clock mounted by user

Perform the settings described under either (a) or (b), depending on the type of clock to be used. When starting the integrated debugger (ID78K0S-NS), open the configuration dialog box and select "Internal" in the area (Clock) for selecting the CPU's clock source (this selects the emulator's internal clock).

(a) When using a ceramic resonator or crystal resonator


- Items to be prepared
 - Parts board
 - Ceramic resonator or crystal resonator
 - Resistor Rx
- Capacitor CA
- Capacitor CB
- Solder kit

<Steps>

<1> Solder the target ceramic resonator or crystal resonator, resistor Rx, capacitor CA, and capacitor CB (all with suitable oscillation frequencies) onto the parts board (as shown below).


Figure 3-7. Connections on Parts Board

Parts board (X1)

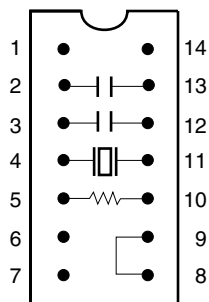

Pin No.	Connection
2-13	Capacitor CA
3-12	Capacitor CB
4-11	Ceramic resonator or crystal resonator
5-10	Resistor Rx
8-9	Shorted

Circuit diagram

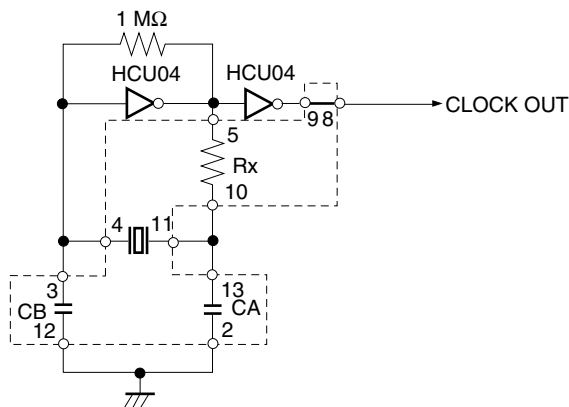

Remark The sections enclosed in broken lines indicate parts that are attached to the parts board.


- <2> Prepare the IE-789842-NS-EM1.
- <3> Remove the crystal oscillator that is mounted in the IE-789842-NS-EM1's X1 socket.
- <4> Connect the parts board (from <1> above) to the X1 socket from which the crystal oscillator was removed. Check the pin 1 mark to make sure the board is mounted in the correct direction.
- <5> Make sure that the parts board is wired as shown in Figure 3-7 above.
- <6> Install the IE-789842-NS-EM1 in the IE-78K0S-NS or IE-78K0S-NS-A.

The above steps configure the following circuit and enable supply of the clock from the mounted resonator to the emulation device.

(b) When using a crystal oscillator

- Items to be prepared
 - Crystal oscillator (see pinouts shown in Figure 3-8)


Figure 3-8. Crystal Oscillator

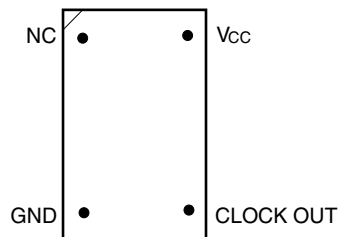

<Steps>

- <1> Prepare the IE-789842-NS-EM1.
- <2> Remove the crystal oscillator that is mounted in the IE-789842-NS-EM1's X1 socket.
- <3> Connect a crystal oscillator to the X1 socket from which the crystal oscillator was removed (in <2> above). Insert the pins of the crystal oscillator into the socket aligning the pins as shown in the figure below.

Figure 3-9. Pin Alignment of Crystal Oscillator and Socket

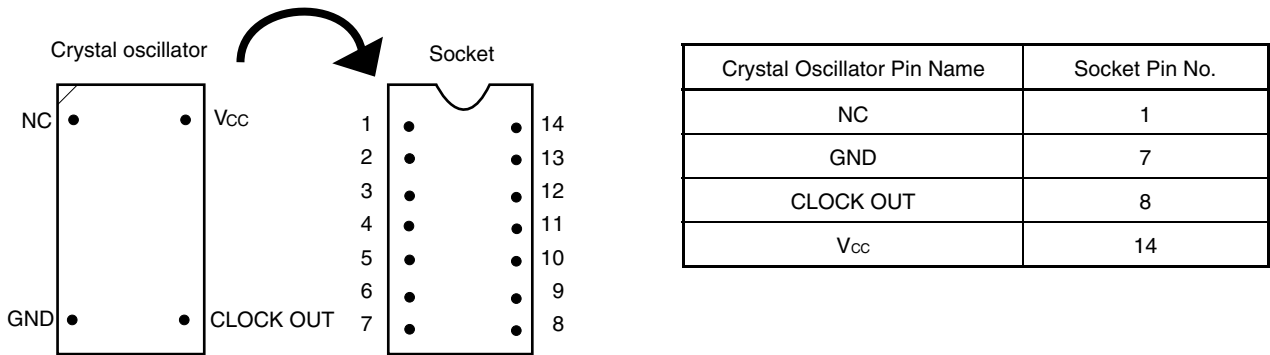

<4> Install the IE-789842-NS-EM1 in the IE-78K0S-NS or IE-78K0S-NS-A.

(3) When inputting pulse from target system

Short pins 6 and 8 of the X1 socket.

When starting the integrated debugger (ID78K0S-NS), open the configuration dialog box and select “External” in the area (Clock) for selecting the CPU’s clock source (this selects the user’s clock).

3.5 External Trigger

To set an external trigger, connect the IE-789842-NS-EM1's check pins EXTOUT and EXTIN as shown below.

See the **IE-78K0S-NS User's Manual (U13549E)** or **IE-78K0S-NS-A User's Manual (U15207E)** for pin characteristics.

For the use methods, see the **ID78K Series Ver.2.30 or Later Operation Windows Based User's Manual (U15185E)**.

(1) EXTOUT


The EXTOUT pin on the IE-789842-NS-EM1 outputs a low level for 1.3 μ s when a break event occurs.

Caution Connect a pull-up resistor on the target system because this is an open drain output.

(2) EXTIN

An event signal can be input from the EXTIN pin on the IE-789842-NS-EM1. Input a high-level pulse signal for 2 CPU operation clocks or more.

Figure 3-10. External Trigger Input Position

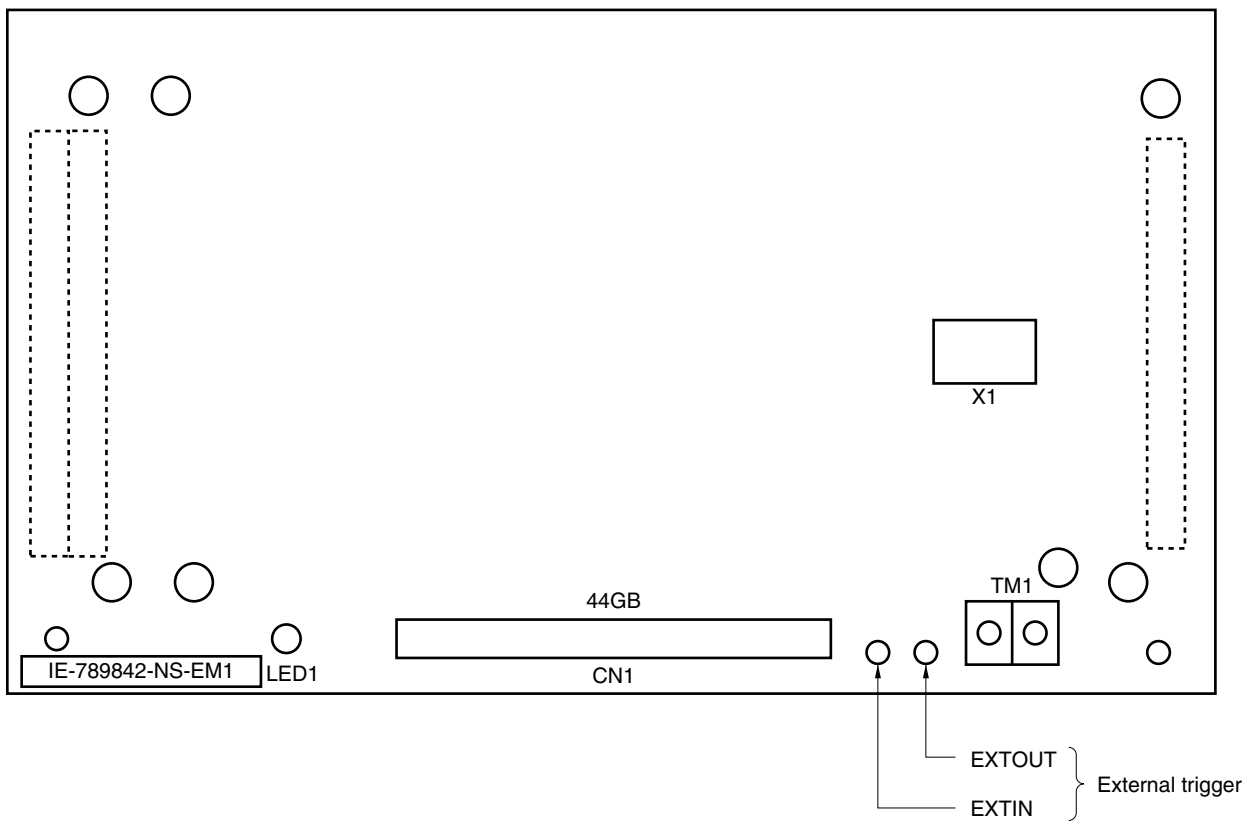

CHAPTER 4 DIFFERENCES BETWEEN TARGET DEVICE AND TARGET INTERFACE CIRCUIT

This chapter describes differences between the target device's signal lines and the signal lines of the target interface circuit of the IE system.

The target interface circuit of the IE system realizes emulation via an emulation circuit configured by an emulation CPU, TTL, CMOS-IC, and other components. The electrical characteristics are different from those of the target device because a protector and other circuits are provided.

- (1) Signals input to or output from the emulation CPU
- (2) Signals input from the target system via a gate
- (3) Analog signals
- (4) Other signals

The IE-789842-NS-EM1's circuit is used as follows for signals listed in (1) to (4) above.

(1) Signals input to or output from the emulation CPU

The following signals perform the same operations as in the μ PD789841, 789842, and 78F9842. However, a 1 M Ω pull-down resistor and 100 Ω resistor are inserted in series.

- Signals related to port 0
- Signals related to port 1
- Signals related to port 2
- Signals related to 10-bit inverter control timer (TO70 to TO75)

(2) Signals input from the target system via a gate

Since the following signals are input via a gate, their timing shows a delay compared to the μ PD789841, 789842, and 78F9842. Their AC characteristics and DC characteristics are therefore different from the μ PD789841, 789842, and 78F9842 making it necessary to observe a stricter timing design than in the μ PD789841, 789842, and 78F9842.

- $\overline{\text{RESET}}$ signal
- Signals related to clock input

From all the signals input from the target system, the $\overline{\text{RESET}}$ signal and signals related to clock input are input to the emulation CPU via a logic IC. The DC characteristics are therefore different from the μ PD789841, 789842, and 78F9842.

(3) Analog signals


Because the following signals input/output analog signals, special processing is not performed in the IE-789842-NS-EM1.

- AV_{DD} pin
- Port 6

(4) Other signals

- V_{DD} pin
When the emulation CPU is operating at 5 V, its power is supplied from the IE-789842-NS-EM1, but when operating at low voltage, its power is supplied from the low-voltage pin (TP1). The V_{DD} pin of the target system is only used to control the LED (TV_{CC}) in the IE-789842-NS-EM1 that monitors the input of the target system's power supply.
- V_{SS} and AV_{SS} pins
The V_{SS} and AV_{SS} pins are connected to GND in the IE-789842-NS-EM1
- TEST/V_{PP} pin
The TEST/V_{PP} pin is not used in the IE-789842-NS-EM1.
- X2 pin
The X2 pin is not used in the IE-789842-NS-EM1.

Figure 4-1. Equivalent Circuit of Emulation Circuit

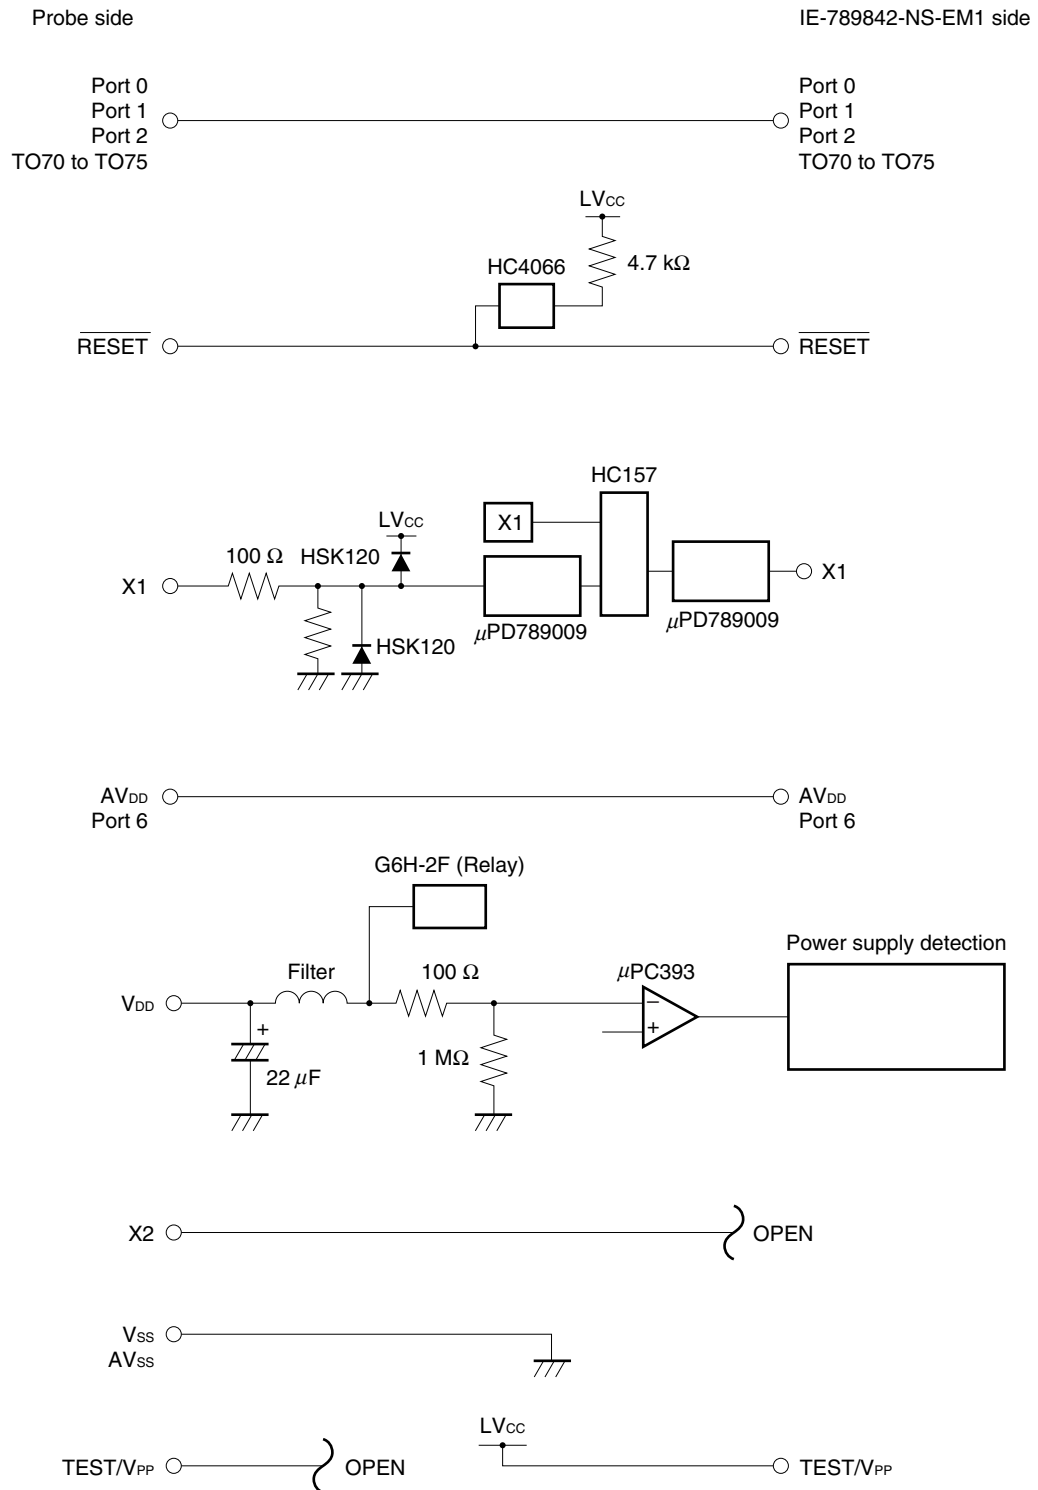

CHAPTER 5 CAUTIONS

This chapter describes points that require special attention when using the IE-789842-NS-EM1.

The target device and the emulation function of the IE-789842-NS-EM1 differ with regard to the following.

- (1) Emulation of an RC oscillator is not possible with the IE-789842-NS-EM1.
Only those functions specified by the clock settings in **3.4 Clock Settings** can be emulated.
- (2) Pin handling is not performed for the port pins on the emulation board. Consequently, an undefined value will be read out if an attempt is made to read the value of a port in input mode when an emulation probe is not connected.
- (3) Emulation of the low voltage circuit (LVI) is possible with the IE-789842-NS-EM1.
Note, however, that the operation-guaranteed voltage is the same as that of the target device (4.0 to 5.5 V); that is, operation is not guaranteed if a voltage lower than this is applied.

APPENDIX A EMULATION PROBE PIN ASSIGNMENT TABLE

Table A-1. NP-44GB, NP-44GB-TQ, NP-H44GB-TQ Pin Assignments

Emulation Probe	CN1 Pin No.	Emulation Probe	CN1 Pin No.
1	104	23	18
2	103	24	17
3	100	25	22
4	99	26	21
5	94	27	28
6	93	28	27
7	30	29	92
8	29	30	91
9	24	31	98
10	23	32	97
11	20	33	102
12	47	34	73
13	48	35	72
14	51	36	69
15	52	37	70
16	57	38	63
17	58	39	64
18	59	40	61
19	60	41	62
20	55	42	65
21	56	43	66
22	49	44	71

- Remarks**
1. NP-44GB, NP-44GB-TQ, and NP-H44GB-TQ are products of Naito Densai Machida Mfg. Co., Ltd.
 2. The numbers in the "Emulation probe" column indicate the corresponding pin number on the emulation probe tip.

APPENDIX B NOTES ON DESIGNING TARGET SYSTEM


The following shows the conditions when connecting the emulation probe and conversion adapter. Consider the shape of the components to be mounted on the target system and follow the configurations below when designing the system.

Among the products described in this appendix, NP-44GB-TQ and NP-H44GB-TQ are products of Naito Densai Machida Mfg. Co., Ltd. and TGB-044SAP is a product of TOKYO ELETECH CORPORATION.

Table B-1. Distance Between IE System and Conversion Adapter

Emulation Probe	Conversion Adapter	Distance Between IE System and Conversion Adapter
NP-44GB-TQ	TGB-044SAP	170 mm
NP-H44GB-TQ		370 mm

Figure B-1. Distance Between IE System and Conversion Adapter

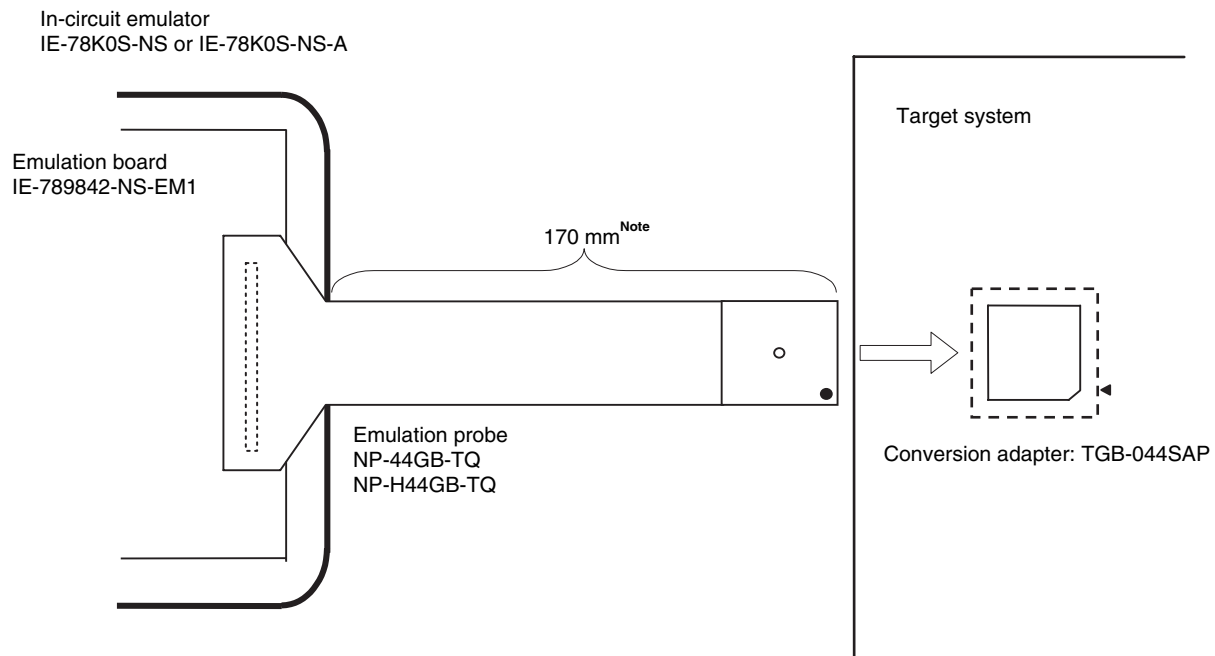

Note The above distance shows when the NP-44GB-TQ is used. When the NP-H44GB-TQ is used, the distance is 370 mm.

Figure B-2. Connection Conditions of Target System (NP-44GB-TQ)

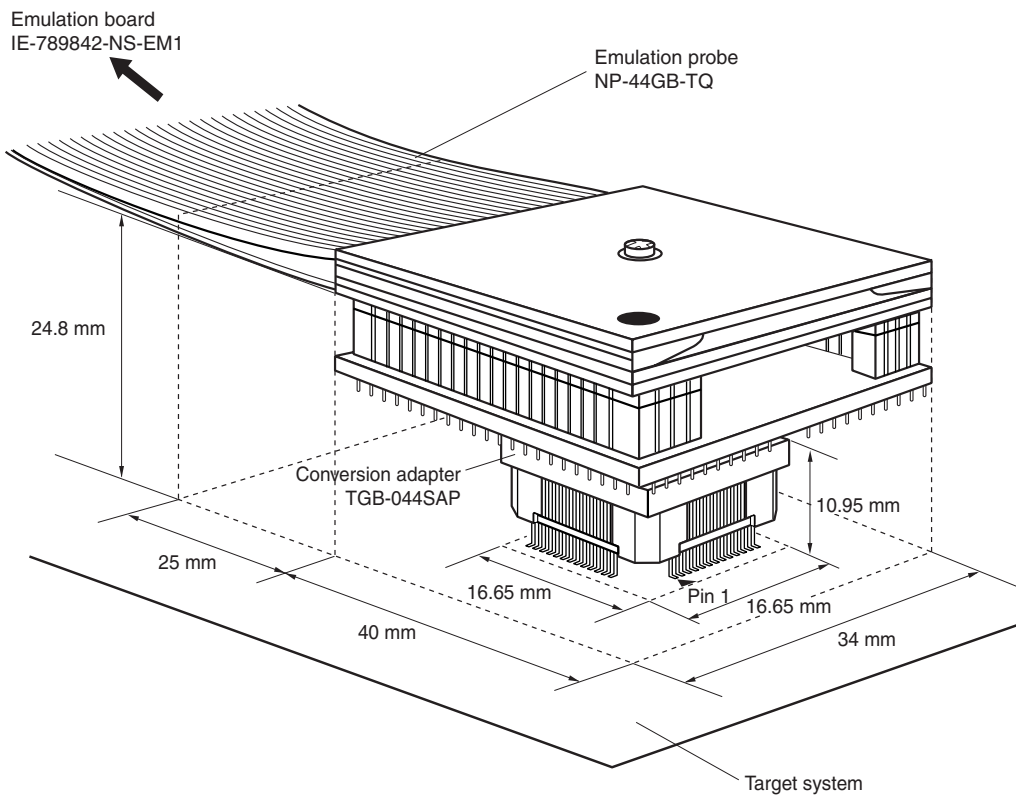


Figure B-3. Connection Conditions of Target System (NP-H44GB-TQ)

