TENTATIVE

TOSHIBA MOS DIGITAL INTEGRATED CIRCUIT SILICON MONOLITHIC

2,097,152-WORDS × 4BANKS × 16-BITS SYNCHRONOUS DYNAMIC RAM 4,194,304-WORDS × 4BANKS × 8-BITS SYNCHRONOUS DYNAMIC RAM 8,388,608-WORDS × 4BANKS × 4-BITS SYNCHRONOUS DYNAMIC RAM

DESCRIPTION

TC59SM716FT/FTL is a CMOS synchronous dynamic random access memory organized as 2,097,152words×4 banks×16 bits and TC59SM708FT/FTL is organized as 4.194.304 words×4 banks×8 bits and the TC59SM704FT/FTL is organized as 8,388,608 words×4 banks×4 bits. Fully synchronous operations are referenced to the positive edges of clock input and can transfer data up to 133M words per second. These devices are controlled by commands setting. Each bank are kept active so that DRAM core sense amplifiers can be used as a cache. The refresh functions, either Auto Refresh or Self Refresh are By having a programmable Mode Register, the system can choose the most suitable modes which will maximize its performance. These devices are ideal for main memory in applications such as work-stations.

FEATURES

	ITEM		TC59SM716/M708/M704				
			- 80	- 10			
t_{CK}	Clock Cycle Time (Min.)	7.5 ns	8 ns	10 ns			
t _{RAS}	Active to Precharge Command Period(Min.)	45 ns	48 ns	60 ns			
t _{AC}	Access Time from CLK (Max.)	5.4 ns	6 ns	7 ns			
t_{RC}	Ref/Active to Ref/Active Command Period (Min.)	65 ns	68 ns	84 ns			
I _{CC1}	Operation Current (Max.) (Single bank)	85 mA	80 mA	70 mA			
I _{CC4}	Burst Operation Current (Max.)	115 mA	110 mA	90 mA			
I _{CC6}	Self - Refresh Current (Max.)	2 mA	2 mA	2 mA			

Single power supply of $3.3V \pm 0.3V$

Up to 133MHz clock frequency

Synchronous operations : All signals referenced to the positive edges of clock

Architecture : Pipeline

Organization

TC59SM716FT/FTL $2,097,152 \text{ words} \times 4 \text{ banks} \times 16 \text{bits}$ TC59SM708FT/FTL 4.194.304 words×4 banks×8bits TC59SM704FT/FTL 8,388,608 words×4 banks×4bits

Programmable Mode register

Auto Refresh and Self Refresh

Burst Length : 1, 2, 4, 8, Full page

CAS Latency : 2, 3 Single Write Mode Burst Stop Function

Byte Data Controlled by L-DQM, U-DQM (TC59SM716)

4K Refresh cycles / 64ms

Interface: LVTTL

Package

TC59SM716FT/FTL : TSOP II 54 - P - 400 - 0.80B TC59SM708FT/FTL TSOP II 54 - P - 400 - 0.80B TC59SM704FT/FTL : TSOP II 54 - P - 400 - 0.80B

DataShe

■ TOSHIBA is continually working to improve the quality and the reliability of its products. Nevertheless, semiconductor devices in general can malfunction or fail due to their inherent electrical sensitivity and vulnerability to physical stress. It is the responsibility of the buyer, when utilizing TOSHIBA products, to observe standards of safety, and to avoid situations in which a malfunction or failure of a TOSHIBA product could cause loss of human life, bodily injury or damage to property. In developing your designs, please ensure that TOSHIBA products are used within specified operating ranges as set forth in the most recent products specifications. Also, please keep in mind the precautions and conditions set forth in the TOSHIBA Semiconductor Reliability Handbook.

The products described in this document are subject to the foreign exchange and foreign trade laws.

The information contained herein is presented only as a guide for the applications of our products. No responsibility is assumed by TOSHIBA CORPORATION for any infringements of intellectual property or other rights of the third parties which may result from its use. No license is granted by implication or otherwise under any intellectual property or other rights of TOSHIBA CORPORATION or others.

The information contained herein is subject to change without notice.

The information contained herein is subject to change without notice.

1999-01-18 1/51


TC59SM716/08/04FT/FTL-75,-80,-10

TOSHIBA

PIN NAMES

A0~A11 Address BSO, BS1 Bank Select DQ0~DQ3 (TC59SM704) DQ0~DQ7 Data Input/Output (TC59SM708) DQ0~DQ15 (TC59SM716) CS Chip Select RAS Row Address Strobe CAS Column Address Strobe WE Write Enable DQM (TC59SM708/ M704) Output disable/Write Mask UDOM/LDOM (TC59SM716) CLK Clock inputs CKE Clock enable V_{CC} Power (+3.3V) V_{SS} Ground $V_{CC}Q$ Power (+3.3V) (for I/O buffer) $V_{SS}Q$ (for I/O buffer) NC No Connection

PIN ASSIGNMENT (TOP VIEW)

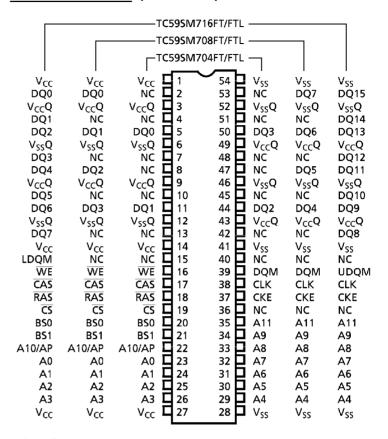


DataSheet4U.com

et4U.com

DataShe

BLOCK DIAGRAM

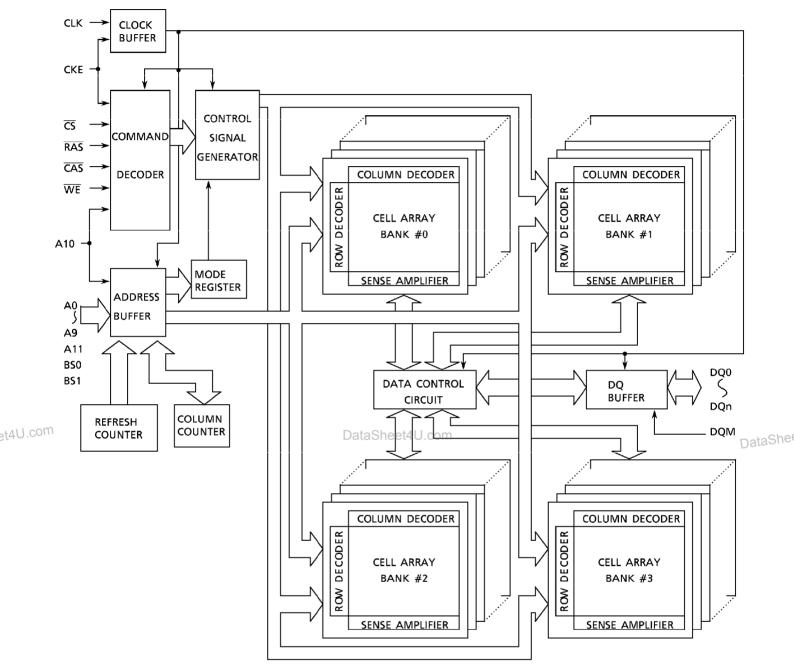

NOTE: The TC59SM704FT/FTL configuration is 4096x2048x4 of cell array with the DQ pins numbered DQ0-3. The TC59SM708FT/FTL configuration is 4096x1024x8 of cell array with the DQ pins numbered DQ0-7. The TC59SM716FT/FTL configuration is 4096x512x16 of cell array with the DQ pins numbered DQ0-15.

1999-01-18 3/51

TC59SM716/08/04FT/FTL-75,-80,-10

ABSOLUTE MAXIMUM RATINGS

SYMBOL	ITEM	RATING	UNITS	NOTES
V _{IN} , V _{OUT}	Input, Output Voltage	- 0.3~V _{CC} + 0.3	V	1
V _{CC} , V _{CC} Q	Power Supply Voltage	- 0.3~4.6	V	1
T _{OPR}	Operating Temperature	0~70	°C	1
T _{STG}	Storage Temperature	- 55~150	°C	1
T _{SOLDER}	Soldering Temperature(10s)	260	°C	1
P _D	Power Dissipation	1	w	1
I _{OUT}	Short Circuit Output Current	50	mA	1

RECOMMENDED DC OPERATING CONDITIONS (Ta = 0 to 70°C)

SYMBOL	PARAMETER	MIN	TYP	MAX	UNITS	NOTES
V _{CC}	Power Supply Voltage	3.0	3.3	3.6	V	2
V _{CC} Q	Power Supply Voltage (for I/O Buffer)	3.0	3.3	3.6	V	2
V _{IH}	Input High Voltage	2.0	-	V _{CC} + 0.3	V	2
V _{IL}	Input Low Voltage	- 0.3	-	0.8	V	2

Note: $V_{IH}(max) = V_{CC}/V_{CC}Q + 1.2V$ for pulse width $\leq 5ns$ $V_{IL}(min) = V_{SS}/V_{SS}Q - 1.2V$ for pulse width $\leq 5ns$

<u>CAPACITANCE</u> $(V_{CC} = 3.3V, f = 1MH_Z, Ta = 25^{\circ}C)$

t4U.com	SYMBOL	PARAMETERSheet4U.com	MIN	MAX	UNIT
	Input Capacitance (A0 to A11, BS0,BS1, CS, RAS, CAS, WE, DQM, CKE)		1	4	
C _I		Input Capacitance (CLK)	-	4	
	co	Input/Output capacitance	_	6.5	

NOTE: These parameters are periodically sampled and not 100% tested.

DataShe

1999-01-18 4/51

TC59SM716/08/04FT/FTL-75,-80,-10

RECOMMENDED DC OPERATING CONDITIONS

 $(V_{CC} = 3.3V \pm 0.3V, Ta = 0 \sim 70^{\circ}C)$

		CVMDOL	- 75		- 80		- 10		LINUTE	NOTES
ITEM		SYMBOL	MIN.	MAX.	MIN.	MAX.	MIN.	MAX.	MAX. UNITS	
$ \begin{array}{l} \text{OPERATING CURRENT} \\ t_{CK} = \text{min , } t_{RC} = \text{min} \\ \text{Active Precharge command cycling} \\ \text{without Burst operation} \\ \end{array} $	1 bank operation	I _{CC1}		85		80		70		3
STANDBY CURRENT $t_{CK} = min$, $\overline{CS} = V_{IH}$	CKE = V _{IH}	I _{CC2}		45		40		35		3
$V_{IH/L} = V_{IH (min)} / V_{IL (max)}$ Bank: inactive state	CKE = V _{IL} (Power Down mode)	I _{CC2P}		1		1		1		3
STANDBY CURRENT CLK = V _{IL} , CS = V _{IH}	CKE = V _{IH}	I _{CC25}		10		10		10		
$V_{IH/L} = V_{IH}(min) / V_{IL}(max)$ Bank: inactive state	CKE = VIL (Power Down mode)	I _{CC2PS}		1		1		1	mA	
NO OPERATING CURRENT t _{CK} = min	CKE = V _{IH}	I _{CC3}		50		45		40		
CS = V _{IH} Bank: active state (4 banks)	CKE = V _{IL} (Power Down mode)	I _{CC3P}		10		10		10		
BURST OPERATING CURRENT t _{CK} = min Read / Write command cycling		I _{CC4}		115		110		90		3, 4
AUTO REFRESH CURRENT $t_{CK} = min$, $t_{RC} = min$ Auto Refresh command cycling		I _{CC5}		190		180		150		3
SELF REFRESH CURRENT Self Refresh mode	Standard Products (FT)			2		2		2		
CKE = 0.2V	Low Power Version (FTL)	I _{CC6}		800		800		800	μΑ	

et4U.com

DataSheet4LL com

ITEM	SYMBOL	MIN.	MAX.	UNITS	NOTES
INPUT LEAKAGE CURRENT (0 $V \le V_{IN} \le V_{CC}$, all other pins not under test = 0 V)	I _{I(L)}	– 5	5	μΑ	
OUTPUT LEAKAGE CURRENT (Output disable, $0V \le V_{OUT} \le V_{CCQ}$)	I _{O(L)}	– 5	5	μΑ	
LVTTL OUTPUT "H" LEVEL VOLTAGE (I _{OUT} = -2mA)	V _{OH}	2.4	-	V	
LVTTL OUTPUT "L" LEVEL VOLTAGE (I _{OUT} = 2mA)	V _{OL}	-	0.4	V	

1999-01-18 5/51

AC CHARACTERISTICS AND OPERATING CONDITIONS

 $(V_{CC} = 3.3V \pm 0.3V, Ta = 0 to 70^{\circ}C)$ (Notes : 5, 6, 7)

CVAROL	DARAMETER	DARAMETER		– 75		- 80		- 10		NOTEC
SYMBOL	PARAMETER		MIN.	MAX.	MIN.	MAX.	MIN.	MAX.	UNITS	NOTES
t _{RC}	Ref/Active to Ref/Active Command Period	d	65		68		84			9
t _{RAS}	Active to Precharge Command Period		45	100000	48	100000	60	100000	ns	9
t _{RCD}	Active to Read/Write Command Delay Ti	me	20		20		24			9
t _{CCD}	Read/Write(a) to Read/Write(b) Commar	nd Period	1		1		1		Cycle	9
t _{RP}	Precharge to Active Command Period		20		20		24			9
t _{RRD}	Active(a) to Active(b) Command Period		15		20		20			9
t _{WR}	Write Recovery Time	CL* = 2	10		10		12			
		CL* = 3	7.5		8		10			
t _{CK}	CLK Cycle Time	CL* = 2	10	1000	10	1000	12	1000		
		CL* = 3	7.5	1000	8	1000	10	1000		
t _{CH}	CLK High Level Width		2.5		3		3			10
t _{CL}	CLK Low Level Width		2.5		3		3			10
t _{AC}	Access Time from CLK	CL* = 2 CL* = 3		6 5.4		6		8 7		
t _{OH}	Output Data Hold Time		2.7		3		3		ns	
t _{HZ}	Output Data High Impedance Time		2.7	7.5	3	8	3	10		8
t _{LZ}	Output Data Low Impedance Time		0		0		0			
t _{SB}	Power Down Mode Entry Time		0	7.5	0	8	0	10		
t _T	Transition Time of CLK (Rise and Fall)	Dotos	0.5	10	0.5	10	0.5	10		
t _{DS}	Data-in Set-up Time	Data	1.5	0.00111	2		2.5			
t _{DH}	Data - in Hold Time		0.8		1		1			
t _{AS}	Address Set - up Time		1.5		2		2.5			
t _{AH}	Address Hold Time		0.8		1		1			
t _{CKS}	CKE set - up Time		1.5		2		2.5			
t _{CKH}	CKE Hold Time		0.8		1		1			
t _{CMS}	Command Set - up Time		1.5		2		2.5			
t _{CMH}	Command Hold Time		0.8		1		1			
t _{REF}	Refresh Time			64		64		64	ms	
t _{RSC}	Mode Register Set Cycle Time		15		16		20		ns	9

^{*} CL is $\overline{\text{CAS}}$ Latency.

DataShe

et4U.com

NOTES:

- 1. Conditions outside the limits listed under "ABSOLUTE MAXIMUM RATINGS" may cause permanent damage to the device.
- 2. All voltages are referenced to Vss.
- 3. These parameters depend on the cycle rate and these values are measured at a cycle rate with the minimum values of t_{CK} and t_{RC}. Input signals are changed one time during t_{CK}.
- 4. These parameters depend on the output loading. Specified values are obtained with the output open.
- 5. Power-up sequence is described in Note 11.
- 6. AC TEST CONDITIONS

Output Reference Level	1.4V / 1.4V
Output Load	See diagram B below
Input Signal Levels	2.4V / 0.4V
Transition Time (Rise and Fall) of Input Signals	2ns
Input Reference Level	1.4V



DataShe

- 7. Transition times are measured between $V_{\rm IH}$ and $V_{\rm IL}$. Transition (rise and fall) of input signals have a fixed slope.
- 8. t_{HZ} defines the time at which the outputs achieve the open circuit condition and is not referenced to output voltage levels.

et4U.com

1999-01-18 7/51

www.DataSheet4U.com

DataSheet4U.com

9. These parameters account for the number of clock cycles and depend on the operating frequency of the clock, as follows:

the number of clock cycles = specified value of timing/clock period (count fractions as a whole number)

- 10. t_{CH} is the pulse width of CLK measured from the positive edge to the negative edge referenced to V_{IH} (min.). t_{CL} is the pulse width of CLK measured from the negative edge to the positive edge referenced to V_{IL} (max.).
- 11. Power-up Sequence

Power-up must be performed in the following sequence.

- 1) Power must be applied to V_{CC} and $V_{CC}Q$ (simultaneously) while all input signals are held in the "NOP" state. The CLK signals must be started at the same time.
- 2) After power-up a pause of at least 200 μ seconds is required. It is required that DQM and CKE signals then be held "high" (V_{CC} levels) to ensure that the DQ output is impedance.
- 3) All banks must be precharged.
- 4) The Mode Register Set command must be asserted to initialize the Mode Register.
- 5) A minimum of eight Auto Refresh dummy cycles is required to stabilize the internal circuitly of the device.

The Mode Register Set command can be invoked either before or after the Auto Refresh dummy cycles.

DataSheet4U.com

12. A.C Latency Characteristics

CKE to clock disable (CKE Latency)		1	
DQM to output in High-Z (Read DQM Latency)	2		
DQM to input data delay (Write DQM Latency)		0	
Write command to input data (Write Data Latency)		0	
CS to Commadn input (CS Latency)		0	
Precharge to DQ Hi-Z Lead time	CL = 2	2	
	CL = 3	3	Cycle
Precharge to Last Valid data out	CL = 2	1	
	CL = 3	2	
Burst Stop Command to DQ Hi-Z Lead time	CL = 2	2	
	CL = 3	3	
Burst Stop Command to Last Valid data out	CL = 2	1	
	CL = 3	2	
Read with Autoprecharge Command to Active/Ref Command	CL = 2	BL + t _{RP}	
	CL = 3	BL + t _{RP}	Cycle
Write with Autoprecharge Command to Active/Ref Command	CL = 2	BL + t _{RP}	ns
	CL = 3	BL + t _{RP}	•


DataShe

1999-01-18 8/51

et4U.com


TIMING DIAGRAMS

Command Input Timing

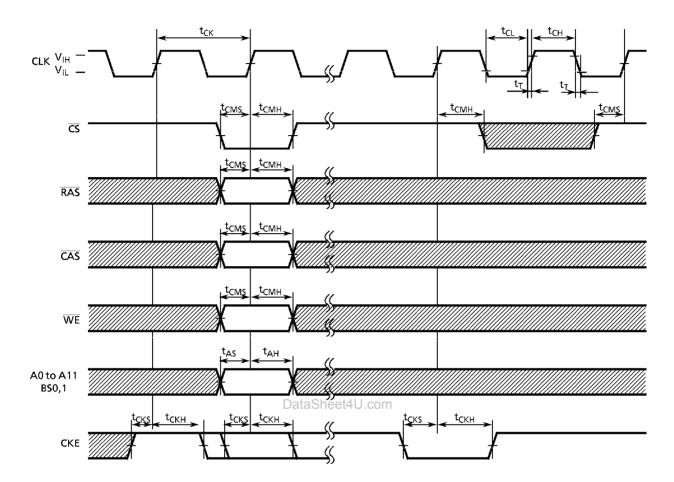

et4U.com


DataShee

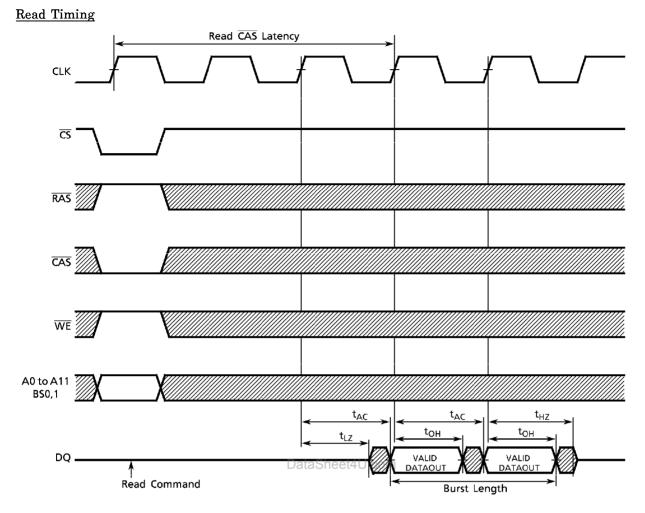


et4U.com

DataShee

Control Timing of Input Data (TC59SM708/M704FT)

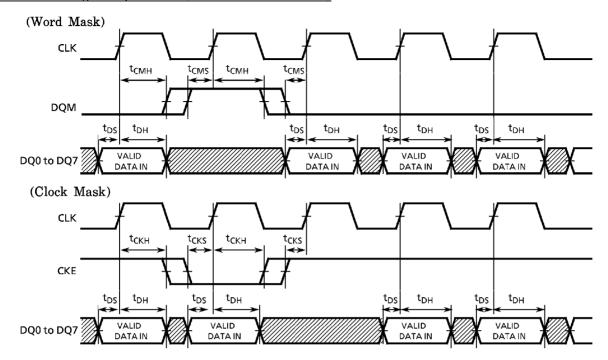

Control Timing of Output Data (TC59SM708/M704FT)

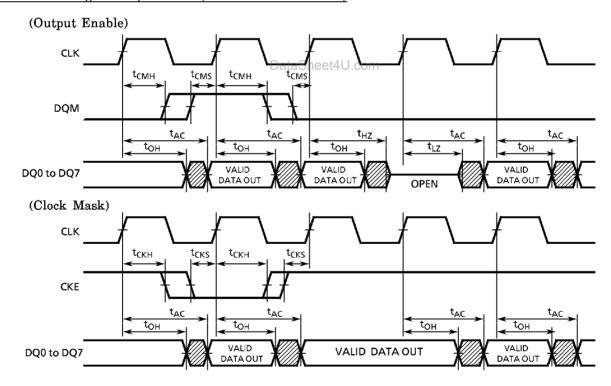


DataShe


1999-01-18 11/51

www.DataSheet4U.com

et4U.com

Control Timing of Input Data (TC59SM716FT)

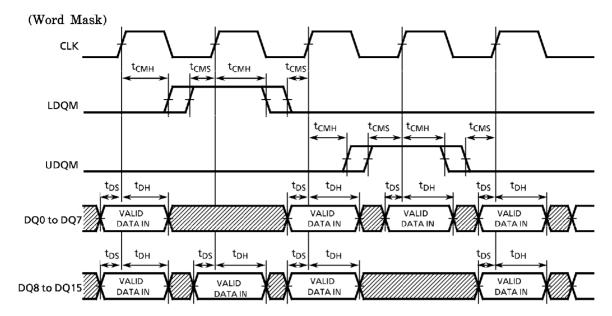


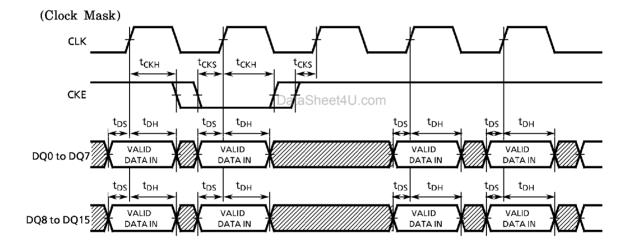

et4U.com

DataShe

Control Timing of Output Data (TC59SM716FT)

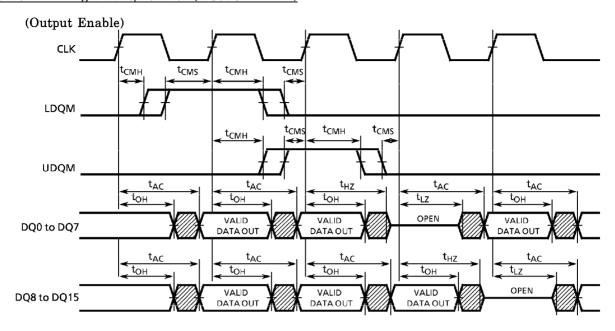

(Clock Mask) CLK t_{CKH} t_{CKS} t_{CKH} t_{CKS} CKE t_{OH} t_{OH} VALID DATA OUT VALID DQ0 to DQ7 VALID DATA OUT DATA OUT t_{AC} t_{AC} toH t_{OH} t_{OH} t_{OH} VALID VALID

DATA OUT

VALID DATA OUT


et4U.com

DQ8 to DQ15

DataShe

DATA OUT

Mode Resister Set Cycle

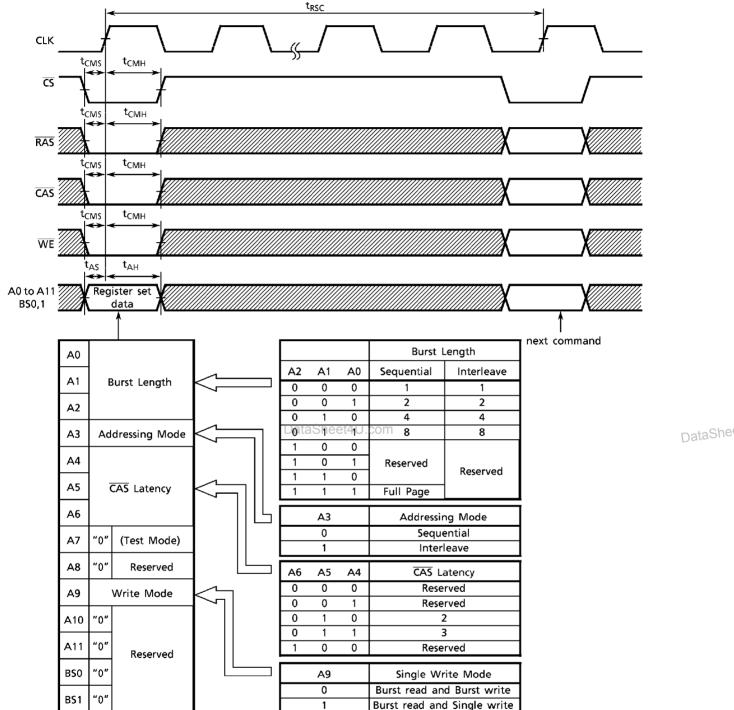

Burst read and Single write

et4U.com


1999-01-18 14/51

www.DataSheet4U.com

DataSheet4U.com


OPERATING TIMING EXAMPLE

Figure 1. Interleaved Bank Read (Burst Length=4, CAS Latency=3)

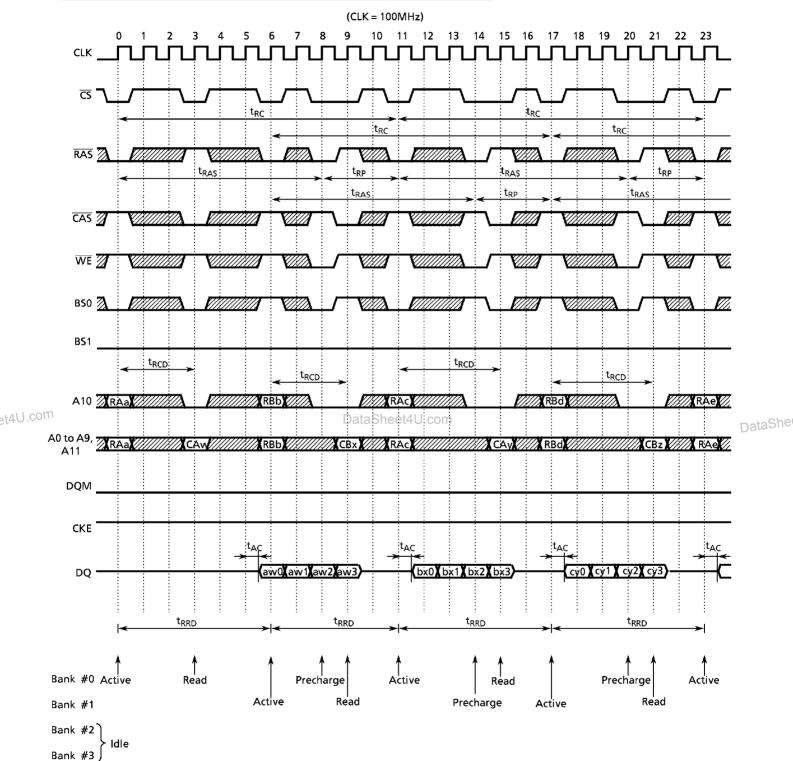

1999-01-18 15/51

Figure 2. Interleaved Bank Read (Burst Length=4, CAS Latency=3, Auto Precharge)

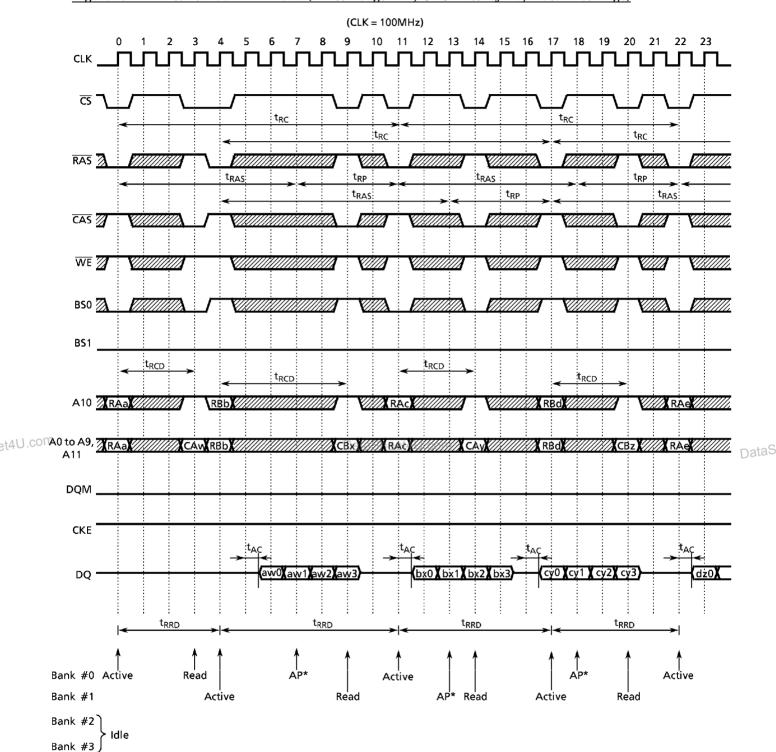

^{*} AP is internal precharge start timing.

1999-01-18 16/51

Figure 3. Interleaved Bank Read (Burst Length=8, $\overline{\text{CAS}}$ Latency=3)


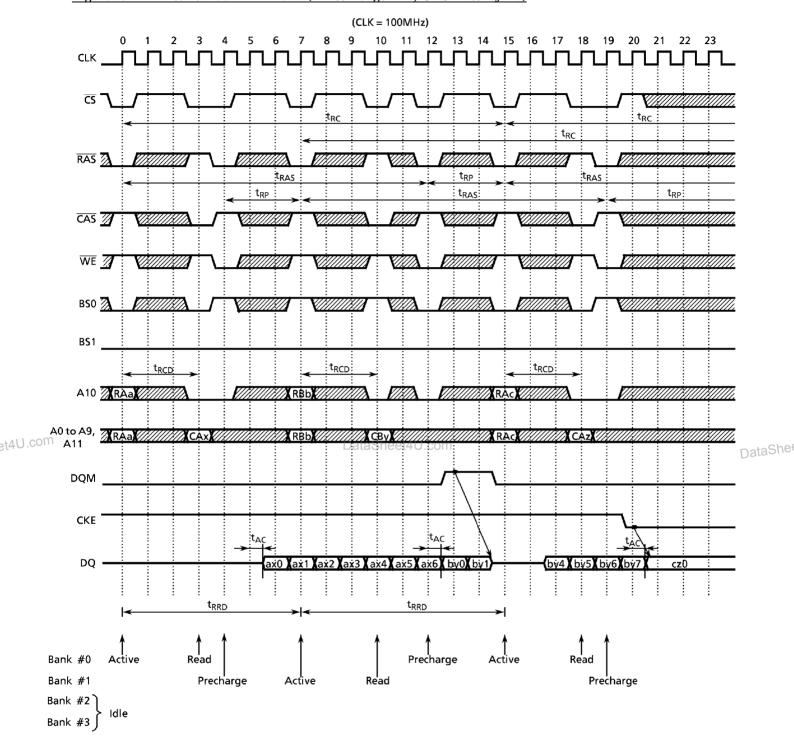


Figure 4. Interleaved Bank Read (Burst Length=8, CAS Latency=3, Auto Precharge)

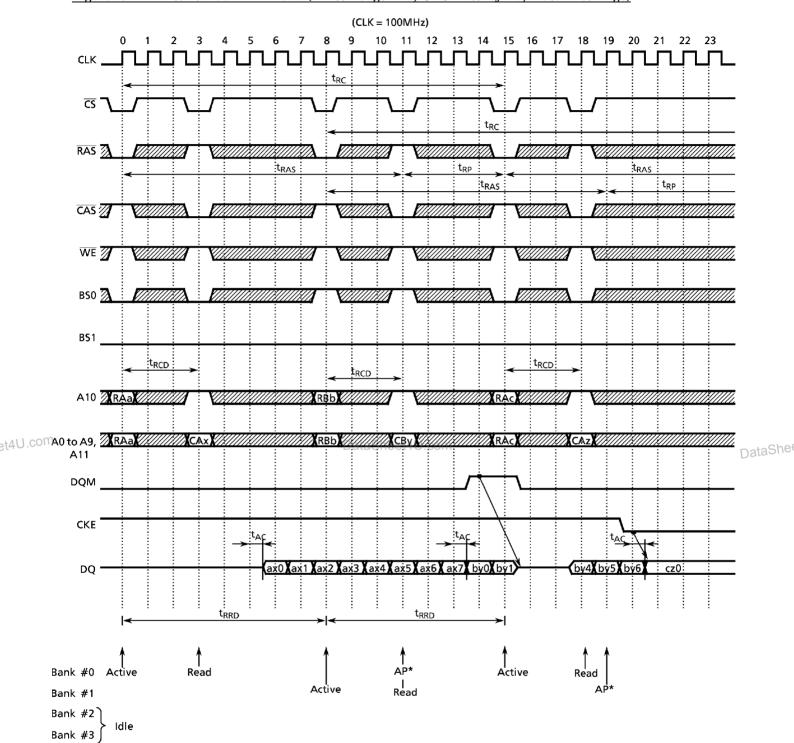

^{*} AP is the internal precharge start timing.

1999-01-18 18/51

Figure 5. Interleaved Bank Write (Burst Length=8)


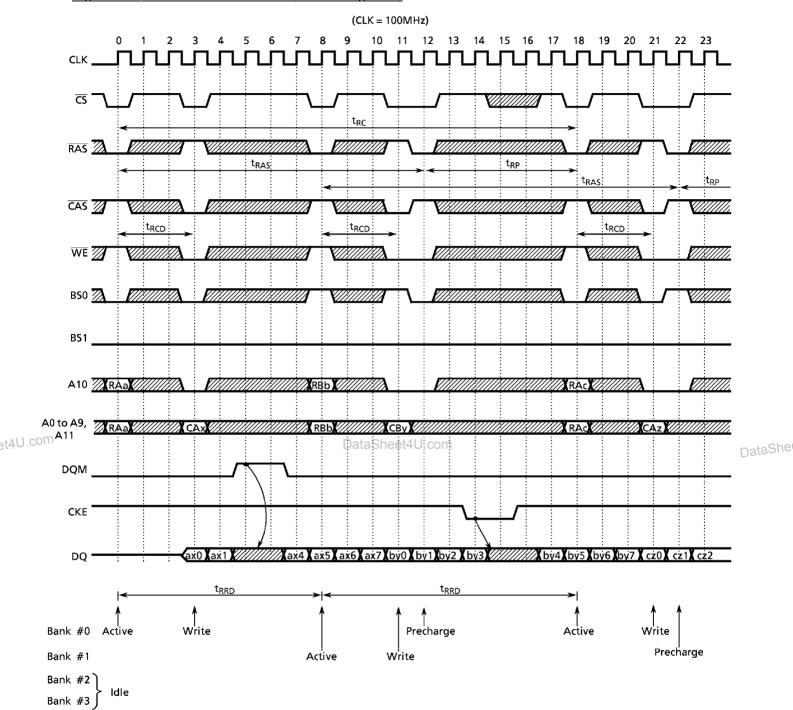


Figure 6. Interleaved Bank Write (Burst Length=8, Auto Precharge)

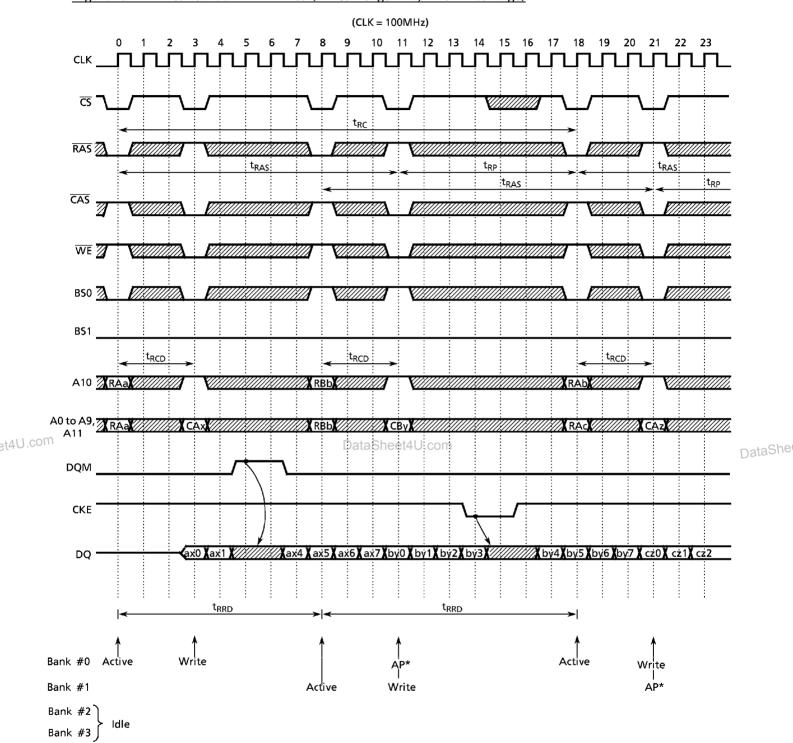

* AP is the internal precharge start timing.

1999-01-18 20/51

Figure 7. Page Mode Read (Burst Length=4, CAS Latency=3)


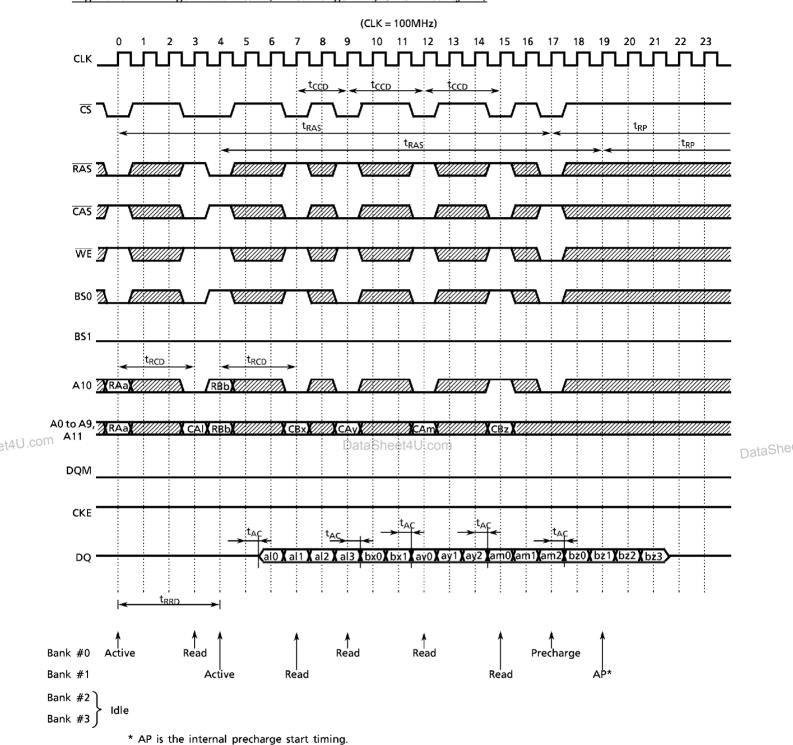



Figure 8. Page Mode Read/Write (Burst Length=8, CAS Latency=3)

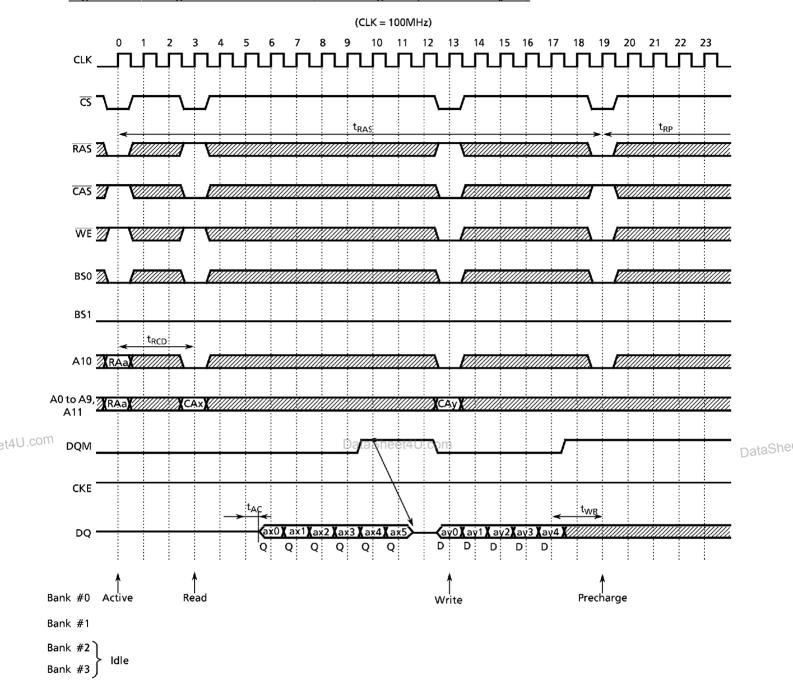

NOTE): See Figure 17,20

1999-01-18 22/51

Figure 9. Auto Precharge Read (Burst Length=4, CAS Latency=3)

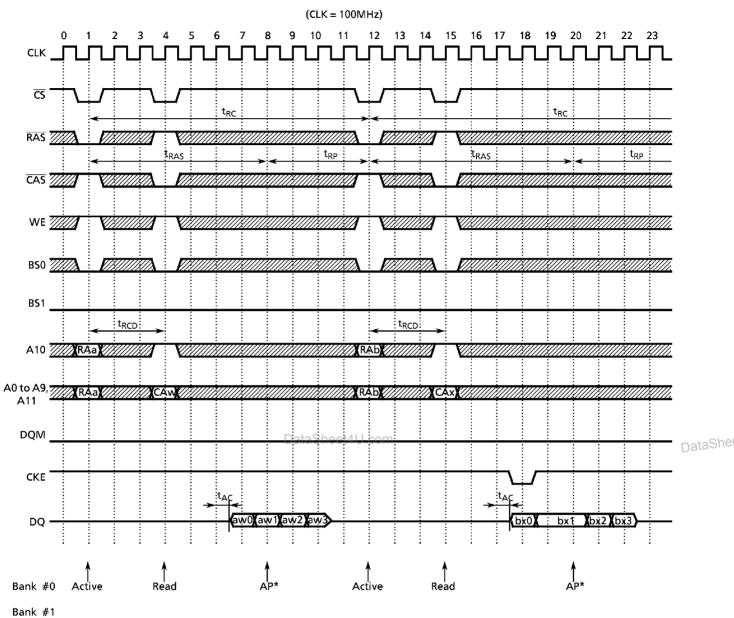

Bank #1

et4U.com

Bank #2 Bank #3

*AP is the internal precharge start timing.


NOTE): See Figure 15

1999-01-18 23/51

www.DataSheet4U.com

DataSheet4U.com

Figure 10. Auto Precharge Write (Burst Length=4)

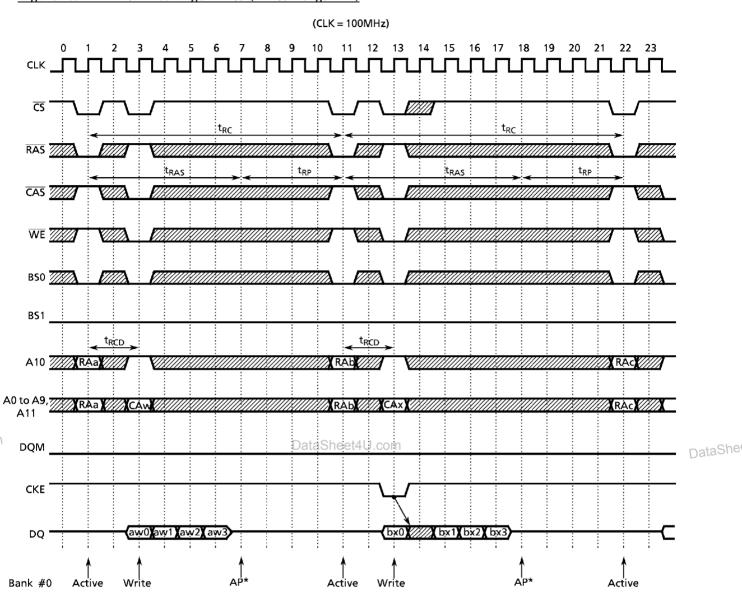

Bank #1

et4U.com

Bank #2 Bank #3

NOTE): See Figure 16

1999-01-18 24/51

www.DataSheet4U.com

DataSheet4U.com

^{*} AP is the internal precharge start timing.

Figure 11. Auto Refresh cycle

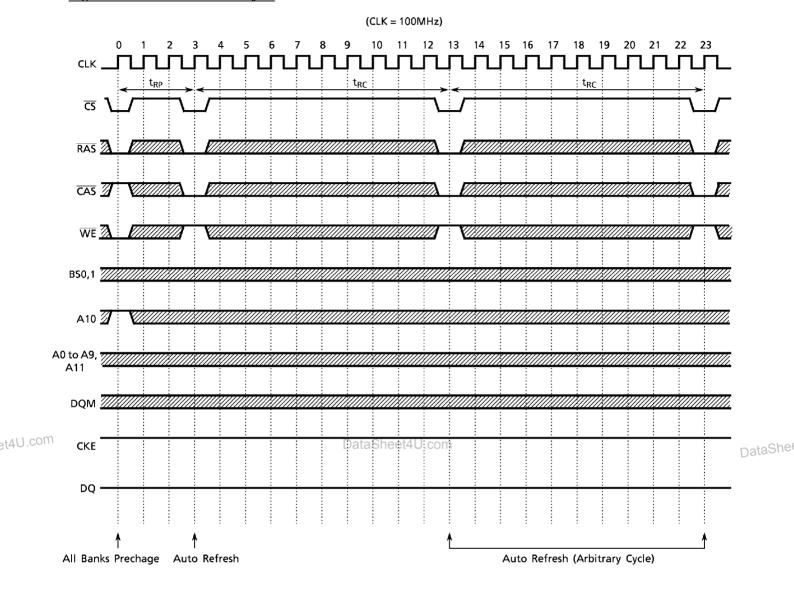


Figure 12. Self Refresh Cycle


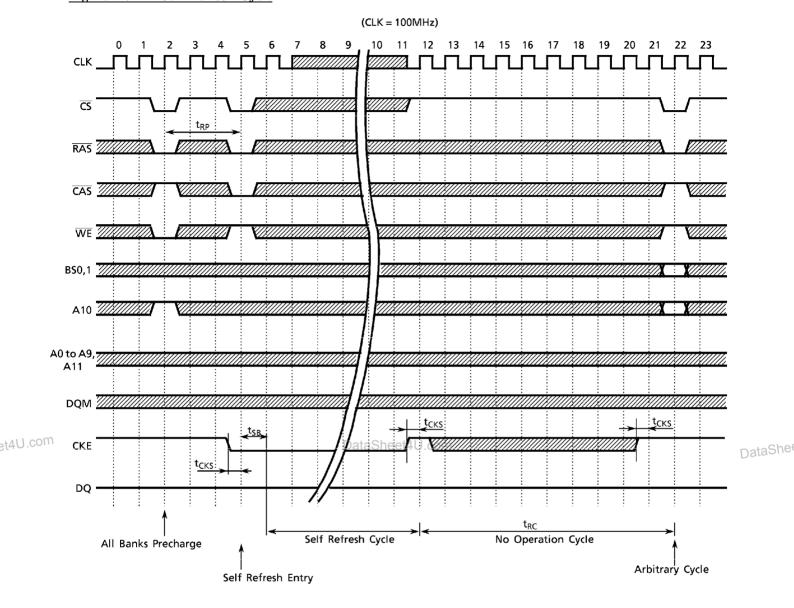


Figure 13. Power Down Mode

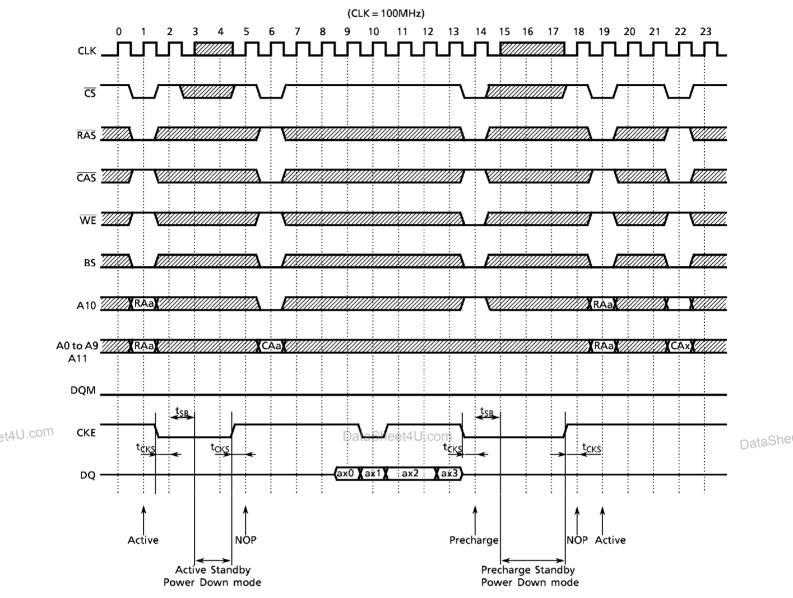


NOTE): The Power Down mode is invoked by asserting CKE "low".

All Input/Output buffers (except the CKE buffer) are turned off in Power Down mode.

When CKE goes high, the No-operation command input must be at next CLK rising edge.

1999-01-18 27/51

Figure 14. Burst Read and Single Write (Burst Length=4, $\overline{\text{CAS}}$ Latency=3)

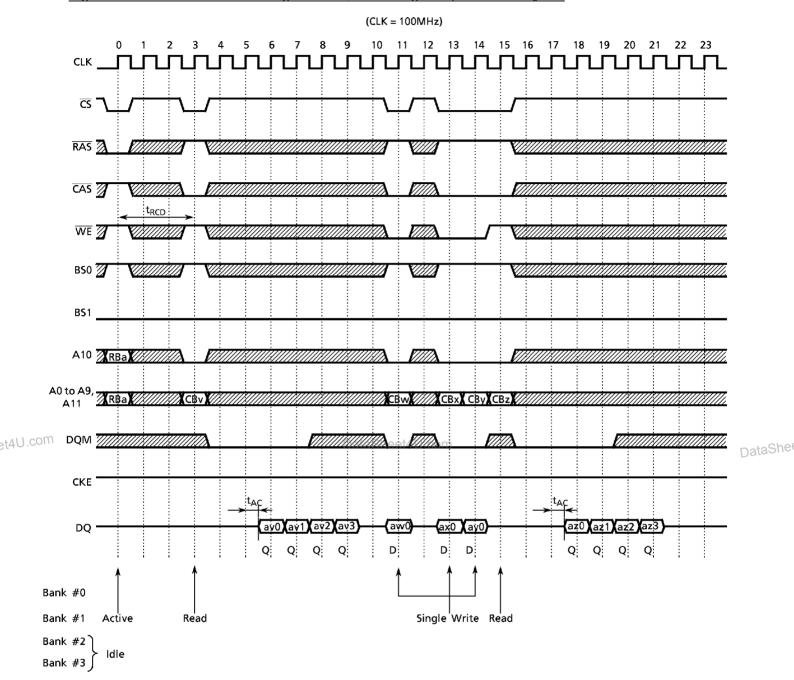

TC59SM716/08/04FT/FTL-75,-80,-10

PIN FUNCTIONS

CLOCK INPUT: CLK

The CLK input is used as the reference for S-DRAM operations. All operations are synchronized to the positive edges of CLK.

CLOCK ENABLE: CKE

The CKE input is used to suspend the internal CLK. When the CKE signal is asserted "low", the internal CLK is suspended and output data is held intact while CKE is asserted "low". When all banks are in the idle state, the CKE input controls the entry to the Power Down and Self Refresh modes.

BANK SELECT: BS0, BS1

The TC59SM716FT/FTL, TC59SM708FT/FTL and the TC59SM704FT/FTL are organized as four-bank memory cell arrays. The BS0, BS1 inputs are latched at the time of assertion of the operation commands and selects the bank to be used for the operation.

BS0	BS1	
0	0	Bank#0
1	0	Bank#1
0	1	Bank#2
1	1	Bank#3

DataSheet4U.com

et4U.com

ADDRESS INPUTS: A0~A11

The A0 to A11 inputs are address to access the memory cell array, as following table.

	Row Address	Column Address
TC59SM716FT/FTL	A0 to A11	A0 to A8
TC59SM708FT/FTL	A0 to A11	A0 to A9
TC59SM704FT/FTL	A0 to A11	A0 to A9, A11

The row address bits are latched at the Bank Activate command and column address bits are latched on the Read or Write command. Also, the A0 to A11 inputs are used to set the data in the Mode register in a Mode Register Set cycle.

DataShe

<u>TOSHIBA</u>

CHIP SELECT: CS

The \overline{CS} input controls the latching of the commands on the positive edges of CLK when \overline{CS} is asserted "low". No commands are latched as long as \overline{CS} is held "high".

ROW ADDRESS STROBE: RAS

The \overline{RAS} input defines the operation commands in conjunction with the \overline{CAS} and \overline{WE} inputs, and is latched at the positive edges of CLK. When \overline{RAS} and \overline{CS} are asserted "low" and \overline{CAS} is asserted "high", either the Bank Activate command or the Precharge command is selected by the \overline{WE} signal. When \overline{WE} is asserted "high", the Bank Activate command is selected and the bank designated by BS0, BS1 are turned on so that it is in the active state. When \overline{WE} is asserted "low", the Precharge command is selected and the bank designated by BS0, BS1 are switched to the idle state after Precharge operation.

COLUMN ADDRESS STROBE: CAS

The $\overline{\text{CAS}}$ input defines the operation commands in conjunction with the $\overline{\text{RAS}}$ and $\overline{\text{WE}}$ inputs, and is latched at the positive edges of CLK. When $\overline{\text{RAS}}$ is held "high" and $\overline{\text{CS}}$ is asserted "low", column access is started by asserting $\overline{\text{CAS}}$ "low". Then, the Read or Write command is selected by asserting $\overline{\text{WE}}$ "low" or "high".

WRITE ENABLE: WE

The WE input defines the operation commands in conjunction with the RAS and CAS inputs, and is latched at the positive edges of CLK. The WE input is used to select the Bank Activate or Precharge command and Read or Write command.eet4U.com

DATA INPUT/OUTPUT MASK: DQM or L-DQM and U-DQM

The DQM input enables output in a Read cycle and functions as the input data mask in a Write cycle. When DQM is asserted "high" at the positive edges of CLK, output data is disabled after two clock cycles during a Read cycle, and input data is masked at the same clock cycle during a Write cycle.

In the case of the TC59SM716FT/FTL, the LDQM and UDQM inputs function as byte data control. The LDQM input can control DQ0 to DQ7 in a Read or Write cycle and the UDQM can control DQ8 to DQ15 in a Read or Write cycle.

DATA INPUT/OUTPUT: DQ0 - 15

The DQ0 to DQ15 input and output data are synchronized with the positive edges of CLK. In the case of TC59SM708FT/FTL and TC59SM704FT/FTL, these pins are DQ0 to DQ7 and DQ0 to DQ3 respectively.

DataShe

1999-01-18 30/51

et4U.com

Operation Mode

Fully synchronous operations are performed to latch the commands at the positive edges of CLK. Table 1 shows the truth table for the operation commands.

Table I IIulii Table (Note(I) and (2)	Table 1	Truth Table	(Note (1) and	(2))
---------------------------------------	---------	-------------	----------------	------

Command	Device State	CKE _{n-1}	CKEn	DQM ⁽⁵⁾	BS0,1	A10	A11,A9-0	CS	RAS	CAS	WE
Bank Activate	Idle (3)	Н	×	×	٧	٧	V	L	L	Н	Н
Bank Precharge	Any	Ι	×	×	>	اـ	×	L	L	Η	L
Precharge All	Any	I	×	×	×	Н	×	L	L	Н	L
Write	Active (3)	н	×	×	٧	L	V	L	Н	L	L
Write with Aut Precharge	Active (3)	Н	×	×	٧	Н	V	L	Н	L	L
Read	Active (3)	Н	×	×	٧	L	V	L	Н	L	Н
Read with Auto Prechrage	Active (3)	н	×	×	V	Н	V	L	Н	L	Н
Mode Register Set	Idle	Н	×	×	V	٧	V	L	L	L	L
No - Operation	Any	ı	×	×	×	×	×	L	Н	Н	Н
Burst stop	Active (4)	н	×	×	×	×	×	L	Н	Н	L
Device Deselect	Any	т	×	×	×	×	×	Н	×	×	×
Auto Refresh	ldle	Н	Н	×	×	×	×	L	L	L	Н
Self Refresh Entry	Idle	т	L	×	×	×	×	L	L	┙	Н
Self Refresh Exit	Idle (Self Refresh)	L	н	×	×	×	×	H L	×	×	×
Clock Suspend Mode Entry	Active	н	L	×	×	×	×	×	×	×	×
Power Down Mode Enrty	Idle/Active ⁽⁶⁾	Н	L	×	×	×	×	Н	×	×	×
								L	Н	Н	×
Clock Suspend Mode Exit	Active	L	Н	×	×	×	×	×	×	×	×
Power Down Mode Exit	Any	n) L	Н	×	×	×	×	Н	×	×	×
	(Power Down)							L	Н	Н	×
Data write/Output Enable	Active	т	×	L	×	×	×	×	×	×	×
Data write/Output Disable	Active	Ι	×	Н	×	×	×	×	×	×	×

et4U.com

DataShe

- Note (1) V = Valid x = Don't Care L = Low level H = High level
 - (2) CKE_n signal is input level when commands are issued.

 CKE_{n-1} signal is input level one clock cycle before the commands are issued.
 - (3) These are state designated by the BSO, BS1 signals.
 - (4) Device state is Full Page Burst operation.
 - (5) LDQM, UDQM (TC59SM716FT/FTL)
 - (6) Power Down Mode can not entry in the burst cycle.
 When this command assert in the burst cycle, device state is clock suspend mode.

1999-01-18 31/51

1. Command Function

1-1 Bank Activate command

(RAS = "L", CAS = "H", WE = "H", BS = Bank, A0 to A11 = Row Address)

The Bank Activate command activates the bank designated by the BS (Bank Select) signal. Row addresses are latched on A0 to A11 when this command is issued and the cell data is read out of the sense amplifiers. The maximum time that each bank can be held in the active state is specified as $t_{RAS\,(max)}$.

1-2 Bank Precharge command

 $(\overline{RAS} = \text{``L''}, \overline{CAS} = \text{``H''}, \overline{WE} = \text{``L''}, BS = Bank, A10 = \text{``L''}, A0 to A9, A11 = Don't care)$

The Bank Precharge command precharges the bank designated by BS. The precharged bank is switched from the active state to the idle state.

1-3 Precharge All command

 $(\overline{RAS} = \text{``L''}, \overline{CAS} = \text{``H''}, \overline{WE} = \text{``L''}, BS = Don't \text{ care}, A10 = \text{``H''}, A0 \text{ to A9}, A11 = Don't \text{ care})$

The Precharge All command precharges all banks simultaneously. All banks are then switched to the idle state.

1-4 Write command

(RAS = "H", CAS = "L", WE = "L", BS = Bank, A10 = "L", A0 to A9, A11 = Column Address)

The Write command performs a Write operation to the bank designated by BS. The write data is latched at the positive edges of CLK. The length of the write data (Burst Length) and column access sequence (Addressing Mode) must be in the Mode Resister at power-up prior to the Write operation.

The A11 input is "Don't care" on the TC59SM708FT/FTL and the A9 and A11 inputs are "Don't care" on the TC59SM716FT/FTL.

DataShe

1-5 Write with Auto Precharge command

(RAS = "H", CAS = "L", WE = "L", BS = Bank, A10 = "H", A0 to A9, A11 = Column Address)

The Write with Auto Precharge command performs the Precharge operation automatically after the Write operation. The internal precharge starts in the cycles immediately following the cycle in which the last data is written independent of \overline{CAS} Latency (Figure 16). This command must not be interrupted by any other commands.

The A11 input is "Don't care" at the TC59SM708FT/FTL and the A9 and A11 inputs are "Don't care" on the TC59SM716FT/FTL.

1-6 Read command

 $(\overline{RAS} = \text{"H"}, \overline{CAS} = \text{"L"}, \overline{WE} = \text{"H"}, BS = Bank, A10 = \text{"L"}, A0 \text{ to } A9, A11 = Column Address)$

The Read command performs a Read operation to the bank designated by BS. The read data is issued sequentially synchronized to the positive edges of CLK. The length of read data (Burst Length), Addressing Mode and \overline{CAS} Latency (access time from \overline{CAS} command in a clock cycle) must be programmed in the Mode Register at power-up prior to the Write operation.

The A11 input is "Don't care" on the TC59SM708FT/FTL and the A9 and A11 inputs are "Don't care" on the TC59SM716FT/FTL.

1999-01-18 32/51

www.DataSheet4U.com

ataSheet411.com

et4U.com

1-7 Read with Auto Precharge command

(RAS = "H", CAS = "L", WE = "H", BS = Bank, A10 = "H", A0 to A9, A11 = Column Address)

The Read with Auto Precharge command automatically performs the Precharge operation after the Read operation. When the $\overline{\text{CAS}}$ Latency=3, the internal precharge starts two cycles before the last data is output. When the $\overline{\text{CAS}}$ Latency=2, the internal precharge starts one cycle before the last data is output (Figure 15). This command must not be interrupted by any other command.

The A11 input is "Don't care" on the TC59S7M08FT/FTL and the A9 and A11 inputs are "Don't care" on the TC59S7M16FT/FTL.

1-8 Mode Register Set command

$$(\overline{RAS} = \text{"L"}, \overline{CAS} = \text{"L"}, \overline{WE} = \text{"L"}, BS, A0 \text{ to } A11 = \text{Register Data})$$

The Mode Register Set command programs the values of $\overline{\text{CAS}}$ latency, Addressing Mode and Burst Length in the Mode Register. The default values in the Mode Register after power-up are undefined, therefore this command must be issued during the power-up sequence. Also, this command can be issued while all banks are in the idle state.

1-9 No-Operation command

$$(\overline{RAS} = \text{"H"}, \overline{CAS} = \text{"H"}, \overline{WE} = \text{"H"})$$

The No-Operation command simply performs no operation (same command as Device Deselect).

1-10 Burst stop command

$$(\overline{RAS} = \text{"H"}, \overline{CAS} = \text{"H"}, \overline{WE} = \text{"L"})$$

The Burst stop command is used to stop the burst operation. This command is valid during a Full Page Burst operation. During other types of Burst operation, the command is illegal.

1-11 Device Deselect command

$$(\overline{CS} = \text{"H"})$$

The Device Deselect command disables the command decoder so that the RAS, CAS, WE and Address inputs are ignored. This command is similar to the No-Operation command.

1-12 Auto Refresh command

$$(\overline{RAS} = \text{"L"}, \overline{CAS} = \text{"L"}, \overline{WE} = \text{"H"}, CKE = \text{"H"}, BS, A0 \text{ to A11} = Don't care)$$

The Auto Refresh command is used to refresh the row address provided by the internal refresh counter. The Refresh operation must be performed 4096 times within 64ms. The next command can be issued after t_{RC} from the end of the Auto Refresh command. When the Auto Refresh command is issued, All banks must be in the idle state. The Auto Refresh operation is equivalent to the \overline{CAS} -before- \overline{RAS} operation in a conventional DRAM.

et4U.com

1999-01-18 33/51

DataShe

1-13 Self Refresh Entry command

$$(\overline{RAS} = \text{"L"}, \overline{CAS} = \text{"L"}, \overline{WE} = \text{"H"}, CKE = \text{"L"}, BS, A0 \text{ to } A11 = Don't \text{ care})$$

The Self Refresh Entry command is used to enter Self Refresh mode. While the device is in Self Refresh mode, all input and output buffers (except the CKE buffer) are disabled and the Refresh operation is automatically performed. Self Refresh mode is exited by taking CKE "high" (the Self Refresh Exit command)

1-14 Self Refresh Exit command

$$(CKE = "H", \overline{CS} = "H" \text{ or } CKE = "H", \overline{RAS} = "H", \overline{CAS} = "H")$$

This command is used to exit from Self Refresh mode. Any subsequent commands can be issued after $t_{\rm RC}$ from the end of this command.

1-15 Clock Suspend Mode Entry/Power Down Mode Entry command

$$(CKE = "L")$$

The internal CLK is suspended for one cycle when this command is issued (when CKE is asserted "low"). The device state is held intact while the CLK is suspended. On the other hand, when the device is not operating the Burst cycle, this command performs entry into Power Down mode. All input and output buffers (except the CKE buffer) are turned off in Power Down mode.

1-16 Clock Suspend Mode Exit/Power Down Mode Exit command

$$(CKE = "H")$$

When the internal CLK has been suspended, operation of the internal CLK is resumed by providing this command (asserting CKE "high"). When the device is in Power Down mode, the device exits this mode and all disabled buffers are turned on to the active state. Any subsequent commands can be issued after one clock cycle from the end of this command.

DataShe

1-17 Data Write/Output Enable, Data Mask/Output Disable command

$$(DQM = L/H \text{ or } LDQM, UDQM = L/H \text{ or } LDQM, UDQM = L/H \text{ or } LDQM \text{ or }$$

During a Write cycle, the DQM or LDQM, UDQM signal functions as Data Mask and can control every word of the input data. During a Read cycle, the DQM or LDQM, UDQM signal functions as the control of output buffers.

The LDQM signal controls DQ0 to 7 and the UDQM signal controls DQ8 to 15.

1999-01-18 34/51

www.DataSheet4U.com

et4U.com

2. Read Operation

Issuing the Bank Activate command to the idle bank puts it into the active state. When the Read command is issued after t_{RCD} from the Bank Activate command, the data is read out sequentially, synchronized to the positive edges of CLK (a Burst Read operation). The initial read data becomes available after \overline{CAS} latency from the issuing of the Read command. The \overline{CAS} latency must be set in the Mode Register at power-up. In addition, the burst length of read data and Addressing Mode must be set. Each bank is held in the active state unless the Precharge command is issued, so that the sence amplifiers can be used as secondary cache.

When the Read with Auto Precharge command is issued, the Prechage operation is performed automatically after the Read cycle, then the bank is switched to the idle state. This command cannot be interrupted by any other commands. Also, when the Burst Length is 1 and $t_{RCD}(min)$, the timing from the \overline{RAS} command to the start of the Auto Precharge operation is shorter than $t_{RAS}(min)$. In this case, $t_{RAS}(min)$ must be satisfied by extending t_{RCD} (Figure 9, 15).

When the Precharge operation is performed on a bank during a Burst Read operation, the Burst operation is terminated (Figure 20).

When the Burst Length is full-page, column data is repeatedly read out until the Burst Stop command or Precharge command is issued.

et4U.com

DataSheet4U.com

DataShe

3. Write Operation

Issuing the Write command after t_{RCD} from the Bank Activate command, the input data is latched sequentially, synchronizing with the positive edges of CLK after the Write command (Burst Write operation). The burst length of the Write data (Burst Length) and Addressing Mode must be set in the Mode Register at power-up.

When the Write with Auto Precharge command is issued, the Precharge operation is performed automatically after the Write cycle, then the bank is switched to the idle state. This command cannot be interrupted by any other command for the entire burst data duration. Also, when the Burst Length is 1 and $t_{RCD}(min)$, the timing from the \overline{RAS} command to the start of the Auto Precharge operation is shorter than $t_{RAS}(min)$. In this case, $t_{RAS}(min)$ must be satisfied by extending t_{RCD} (Figure 10, 16).

When the Precharge operation is performed in a bank during a Burst Write operation, the Burst operation is terminated (Figure 20).

When the Burst Length is full - page, the input data is repeatedly latched until the Burst Stop command or the Precharge command is issued.

When the Burst Read and Single Write mode is selected, the write burst length is 1 regardless of the read burst length.

4. Precharge

et4U.com

There are two commands which perform the Precharge operation: Bank Precharge and Precharge All. When the Bank Precharge command is issued to the active bank, the bank is precharged and then switched to the idle state. The Bank 14 Precharge command can precharge one bank independently of the other bank and hold the unprecharged bank in the active state. The maximum time each bank can be held in the active state is specifed as t_{RAS} (max). Therefore, each bank must be precharged within t_{RAS} (max) from the Bank Activate command.

The Precharge All command can be used to precharge all banks simultaneously. Even if banks are not in the active state, the Precharge All command can still be issued. In this case, the Precharge operation is performed only for the active bank and the precharged bank is then switched to the idle state.

DataShe

1999-01-18 36/51

TC59SM716/08/04FT/FTL-75,-80,-10

5. Page Mode

The Read or Write command can be issued on any clock cycle.

Whenever a Read operation is to be interrupted by a Write command, the output data must be masked by DQM to avoid I/O conflict. Also, when a Write operation is to be interrupted by a Read command, only the input data before the Read command is enable and the input data after the Read command is disabled.

6. Burst Termination

When the Precharge command is issued for a bank in a Burst cycle, the Burst operation is terminated. When the Burst Read cycle is interrupted by the Precharge command, read operation is disabled after clock cycle of (\overline{CAS} latency-1) from the Precharge command (Figure 20). When the Burst Write cycle is interrupted by the Precharge command, the input circuit is reset at the same clock cycle at which the Precharge command is issued. In this case, the DQM signal must be asserted "High" to prevent writing the invalid data to the cell array (Figure 20).

When the Burst Stop command is issued for the bank in a Full-page Burst cycle, the Burst operation is terminated. When the Burst Stop command is issued during Full-page Burst Read cycle, read operation is disabled after clock cycle of (CAS latency-1) from the Burst Stop command. When the Burst Stop command is issued during a Full-page Burst Write cycle, write operation is disabled at the same clock cycle at which the Burst Stop command is issued. (Figure 19)

et4U.com

DataSheet4U.com

DataShe

TC59SM716/08/04FT/FTL-75,-80,-10

7. Mode Register Operation

The Mode register designates the operation mode for the Read or Write cycle. This register is divided into three fields; A <u>Burst Length field</u> to set the length of burst data, an <u>Addressing Mode selected bits</u> to designate the column access sequence in a Burst cycle, and a <u>CAS Latency field</u> to set the access time in clock cycle.

The Mode Register is programmed by the Mode Register Set command when all banks are in the idle state. The data to be set in the Mode Register is transferred using the A0 to A11 address inputs. The initial value of the Mode Register after power - up is undefined; therefore the Mode Register Set command must be issued before proper operation.

• Burst Length field (A2 to A0)

This field specifies the data length for column access using the A2 to A0 pins and sets the Burst Length to be 1, 2, 4, 8 words, or full-page.

A2	A1	Α0	Burst Length
0	0	0	1 word
0	0	1	2 words
0	1	0	4 words
0	1	1	8 words
1	1	1	Full-Page

t4U.com

• Addressing Mode Select (A3)

DataSheet4U.com

The Addressing Mode can be one of two modes; Interleave mode or Sequential mode. When the A3 bit is "0", Sequential mode is selected. When the A3 bit is "1", Interleave mode is selected. Both Addressing modes support burst length of 1, 2, 4 and 8 words. Additionally, Sequential mode supports the full-page burst.

А3	Addressing mode				
0	Sequential				
1	Interleave				

1999-01-18

www.DataSheet4U.com

38/51

DataShe

DataSheet4U.com

• Addressing sequence of Sequential mode

A column access is performed by incrementing the column address input to the device. The address is varied by the Burst Length as shown in Table 2.

Table 2 Addressing sequence for Sequential mode

DATA	Access Address	Burst Length
Data 0	n)) 2 words (Address bits is A0)
Data 1	n + 1	$ \int$ not carried from A0 to A1
Data 2	n + 2	4 words (Address bits is A1, A0)
Data 3	n + 3	not carried from A1 to A2
Data 4	n + 4	
Data 5	n + 5	8 words (Address bits is A2, A1, A0)
Data 6	n + 6	not carried from A2 to A3
Data 7	n + 7	

Addressing sequence of Interleave mode

A column access is started from the input column address and is performed by inverting the address bits in the sequence shown in Table 3.

Table 3 Addressing sequence for Interleave mode

DATA	ACCESS ADDRESS	Burst Length
Data 0	A8 A7 A6 A5 A4 A3 A2 A1 A0)) 2 words
Data 1	A8 A7 A6 A5 A4 A3 A2 A1 A0	
Data 2	A8 A7 A6 A5 A4 A3 A2 A1 A0	4 words
Data 3	A8 A7 A6 A5 A4 A3 A2 A1 A0	
Data 4	A8 A7 A6 A5 A4 A3 A2 A1 A0	
Data 5	A8 A7 A6 A5 A4 A3 $\overline{\text{A2}}$ A1 $\overline{\text{A0}}$	8 words
Data 6	A8 A7 A6 A5 A4 A3 A2 A1 A0	
Data 7	A8 A7 A6 A5 A4 A3 A2 A1 A0	J


et4U.com

DataShe

μ	aaressing sequenc	e example	(Burst	Length = 8	and	Input	address	15 1	3.)
	Ir	nterleave n	node				Sequer	ntial	mo

DATA		Interleave mode								Seque	ential mode		
DATA	Α8	Α7	Α6	Α5	Α4	А3	A2	Α1	Α0	ADD		ADD	
Data 0	0	0	0	0	0	1	1	0	1	13	13	13	
Data 1	0	0	0	0	0	1	1	0	0	12	13 + 1	14	calculated using
Data 2	0	0	0	0	0	1	1	1	1	15	13 + 2	15	A2, A1 and A0 bits.
Data 3	0	0	0	0	0	1	1	1	0	14	13 + 3	8	DITS.
Data 4	0	0	0	0	0	1	0	0	1	9	13 + 4	9	not carry from
Data 5	0	0	0	0	0	1	0	0	0	8	13 + 5	10	A2 to A3 bit.
Data 6	0	0	0	0	0	1	0	1	1	11	13 + 6	11	
Data 7	0	0	0	0	0	1	0	1	0	10	13 + 7	12	

Read Cycle \overline{CAS} Latency = 3

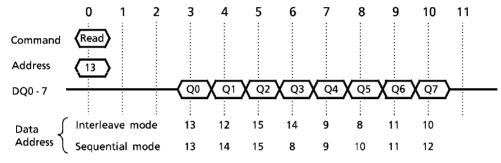

• CAS Latency field (A6 to A4)

This field specifies the number of clock cycles from the assertion of the Read command to the first data read. The minimum values of CAS Latency depends on the frequency of CLK. The minimum DataSheet4U.com value must be set in this field.

A6	A5	A4	CAS Latency
0	1	0	2 clock
0	1	1	3 clock

• Test mode entry bit (A7)

This bit is used to enter Test mode and must be set to "0" for normal operation.

• Reserved bits (A8, A10, A11, BS)

These bits are reserved for future operations. They must be set to "0" for normal operation.

• Single Write mode (A9)

This bit is used to select the write mode. When the A9 bit is "0", Burst Read and Burst Write mode are selected. When the A9 bit is "1", Burst Read and Single Write mode are selected.

Α9	Write Mode
0	Burst Read and Burst Write
1	Burst Read and Single Write

DataShe

1999-01-18 40/51

8. Refresh Operation

Two types of Refresh operation can be performed on the device: Auto Refresh and Self Refresh. Auto Refresh is similar to the $\overline{\text{CAS}}$ -before- $\overline{\text{RAS}}$ refresh of conventional DRAMs and is performed by issuing the Auto Refresh command while all banks are in the idle state. By repeating the Auto Refresh cycle, each bank in turn refreshed automatically. The Refresh operation must be performed 4096 times (rows) within 64ms (Figure 11). The period between the Auto Refresh command and the next command is specified by t_{RC} .

Self Refresh mode is entered by issuing the Self Refresh command (CKE asserted "low") while all banks are in the idle state. The device is in Self Refresh mode for as long as CKE is held "low". In Self Refresh mode all input/output buffers (except the CKE buffer) are disabled, resulting in lower power dissipation (Figure 12).

9. Power Down Mode


When the device enters the Power Down mode, all input/output buffers (except CKE buffer) are disabled resulting in lower power dissipation in the idle state. Power Down mode is entered by asserting CKE "low" while the device is not running a Burst cycle. Taking CKE "high" exit this mode. When CKE goes high, a No-operation command must be input at next CLK rising edge of CLK (Figure 13).

10.CLK suspension and Input/Output Mask

When the device is running a Burst cycle, the internal CLK is suspended by asserting CKE "low" and is frozen from the next cycle. A Read/Write operation is held intact until the CKE signal is taken "high".

The Output Disable/Write Mask signal (DQM) has two functions, controlling the output data in a Read cycle and performing word mask in a Write cycle. When the DQM is asserted "high" at the positive edge of CLK, the output data is disabled after two clock cycles in the case of a Read operation and the write data is masked at the same clock cycle in the case of a Write operation. The timing relation between the CKE timing and DQM is described in Figure 21(a) and 21(b).

DataShe

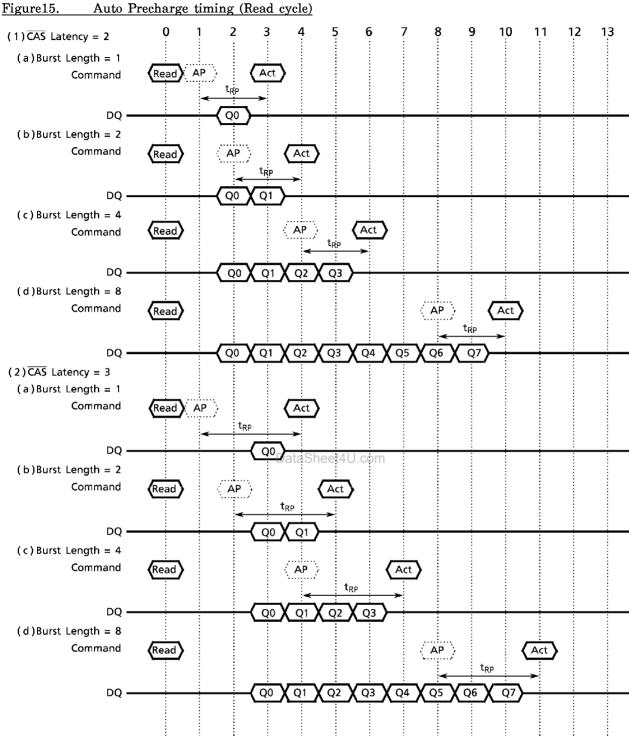

Note) • (Read) represents the Read with Auto Precharge command.

- ¿AP ; represents the start of internal precharging.
- Act represents the Bank Activate command.
- When the Auto Precharge command is asseted, the period from the Bank Activate command to the start of internal precharging must be at least t_{RAS}(min).


DataShe

1999-01-18 42/51

www.DataSheet4U.com

DataSheet4U.com

Figure 16. Auto Precharge timing (Write cycle)

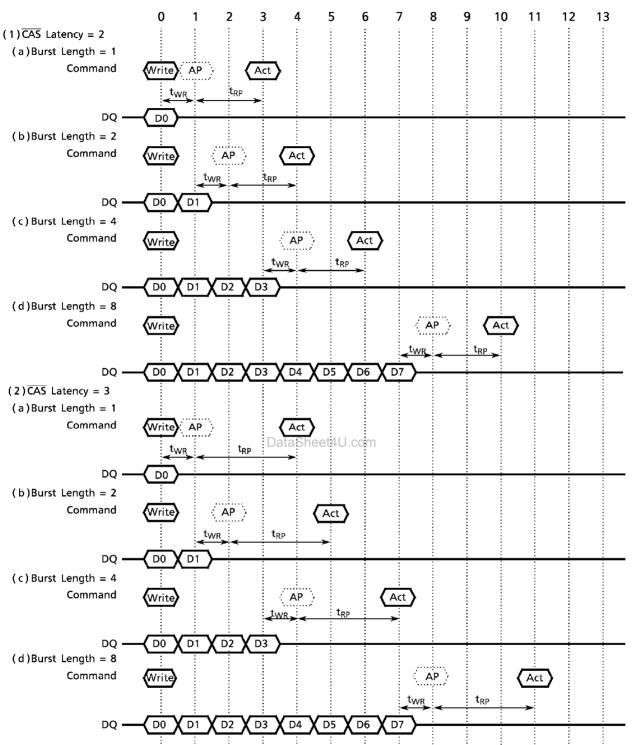

Note)

- Write represents the Write with Auto Precharge command.
- (AP) represents the start of internal precharging.
- Act represents the Bank Activate command.
- When the Auto Precharge command is asseted, the period from the Bank Activate command to the start of internal precharging must be at least t_{RAS}(min).


1999-01-18 43/51

www.DataSheet4U.com

DataShe

DataSheet4U.com

Figure 17. Timing chart for Read-to-Write cycle

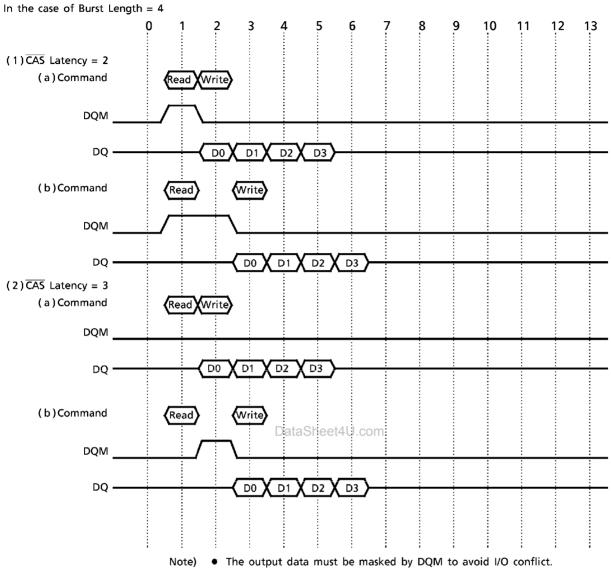

DataShee


et4U.com

1999-01-18 44/51

www.DataSheet4U.com


DataSheet4U.com

Figure 18. Timing chart for Write-to-Read cycle

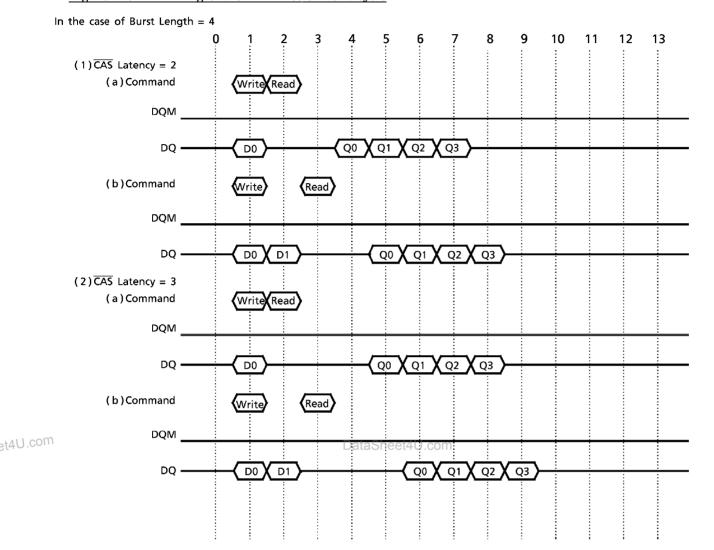

DataShee

Figure 19. Timing chart for Burst Stop cycle (Burst stop command)

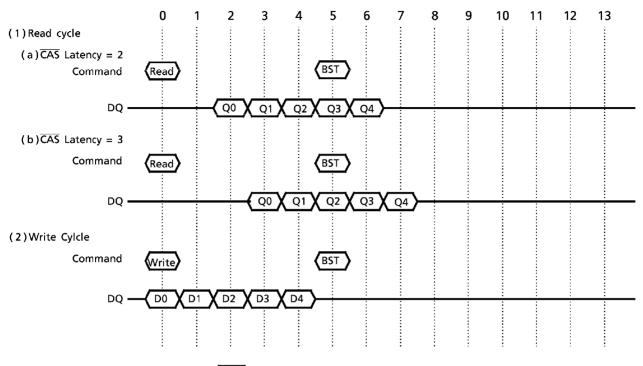


Note) \bullet **BST** represents the Burst stop command.

et4U.com

DataSheet4U.com

DataShee

Figure 20. Timing chart for Burst Stop cycle (Precharge command)

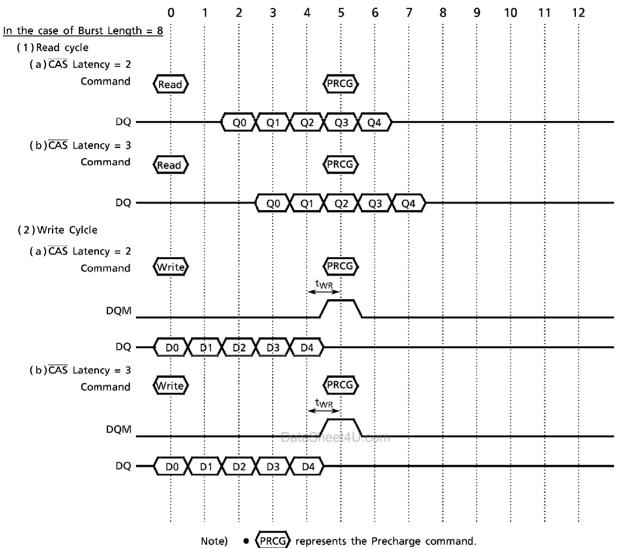



DataShe

1999-01-18 47/51

www.DataSheet4U.com

Figure21(a). CKE/DQM Input timing (Write cycle)

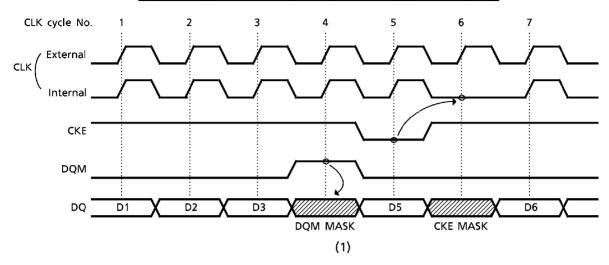


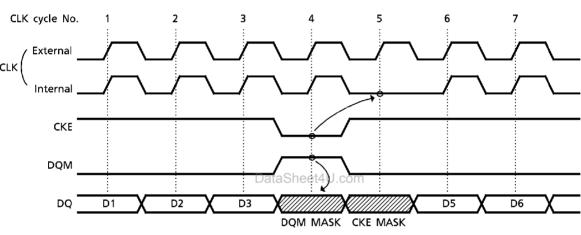

(2)

et4U.com


DataShee

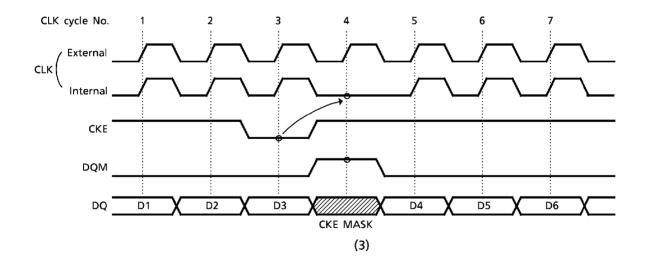


1999-01-18 48/51

www.DataSheet4U.com


Figure21(b). CKE, DQM Input timing (Read cycle)

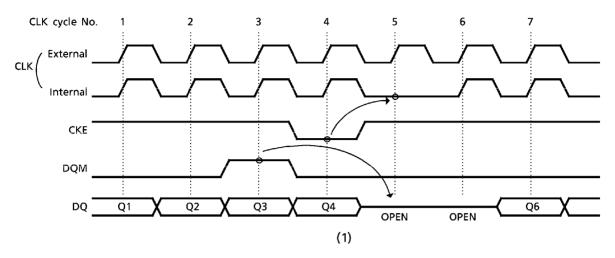

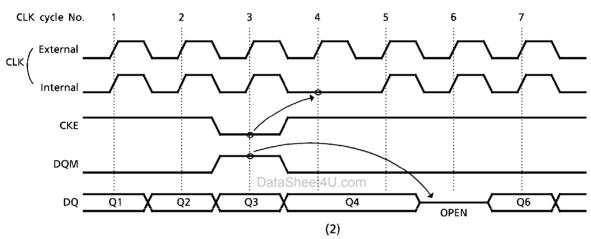

et4U.com

DataShee

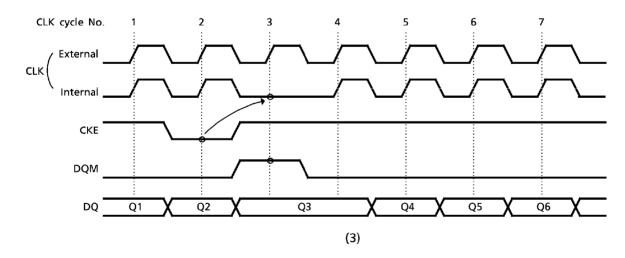

1999-01-18 49/51


www.DataSheet4U.com

DataSheet4U.com


Figure 22.

Self Refresh/Power Down Mode Exit Timing

- Asynchronous Control Input Buffer turn on time (Power Down mode exit time) is specified by t_{CKS}(min) + t_{CK}(min).
 - A) $t_{CK} < t_{CKS}(min) + t_{CK}(min)$

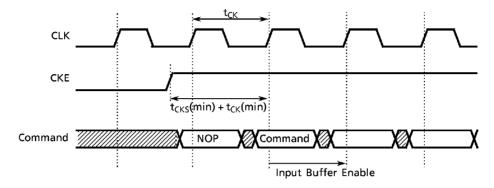

B) $t_{CK} \ge t_{CKS}(min) + t_{CK}(min)$

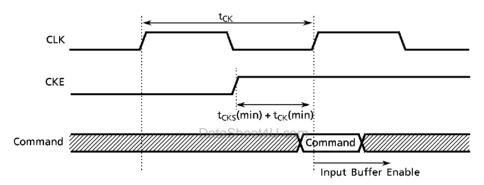


et4U.com


- NOTE) All Input Buffer (Include CLK Buffer) are turned off in the Power Down mode and Self Refresh mode
 - **(NOP)** represents the No-Operation command.
 - (Command) represents one command.


DataShe

OUTLINE DRAWING (TSOPII 54 - P - 400 - 0.80B)

Unit in mm

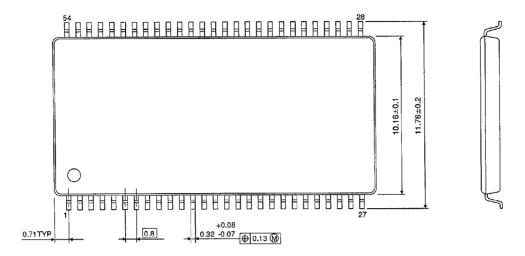

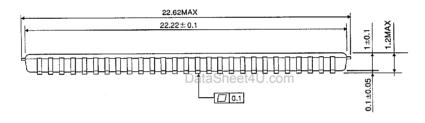

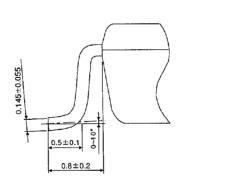

et4U.com

1999-01-18 51/51

www.DataSheet4U.com