

# MINIATURE COAX 20/220 SERIES, BNC BULKHEAD JACKS

*BJ26-1 Shown*

**INSULATED BULKHEAD CABLE JACK**  
**WRENCH CRIMP, REAR MOUNT**  
 Mounting Hole: D2.187  
 GF-Ground filter version page 31.

50Ω **BJ26-**   
 75Ω **UBJ26-**

*BJ226-001 Shown*

**INSULATED BULKHEAD CABLE JACK**  
**REAR MOUNT, TOOL CRIMP**  
 Mounting Hole: D2.187, GF-Ground filter version page 31.

50Ω **BJ226-**   
 75Ω **UBJ226-**

*BJ27 Shown*

**INSULATED BULKHEAD JACK**  
**FRONT MOUNT, SOLDER POT**  
 Mounting Hole: D3.147

50Ω **BJ27**  
 75Ω **UBJ27**

*BJ20 Shown*

**BULKHEAD JACK**  
**FRONT MOUNT, SOLDER POT**  
 W/ SOLDER LUG  
 Mounting Hole: D5.125

50Ω **BJ20**  
 75Ω **UBJ20**

50Ω **BJ20SL**  
 75Ω **UBJ20SL**

*BJ29-1 Shown*

**BULKHEAD CABLE JACK**  
**REAR MOUNT, WRENCH CRIMP**  
 Mounting Holes: D3.218 (D2.218-Cable Groups 6, 6E, 51, 52)

50Ω **BJ29-**   
 75Ω **UBJ29-**

*BJ229-001 Shown*

**BULKHEAD CABLE JACK**  
**REAR MOUNT, TOOL CRIMP**  
 Mounting Hole: D3.218

50Ω **BJ229-**   
 75Ω **UBJ229-**

*BJ23 Shown*

**BULKHEAD JACK NON-INSULATED**  
 50Ω **BJ23**  
 75Ω **UBJ23**  
 Mounting Hole: D3.147

**INSULATED BULKHEAD CABLE JACK**  
**REAR MOUNT, SOLDER POT**  
 Mounting Hole: D3.147

50Ω **BJ21**  
 75Ω **UBJ21**

*BJ24 Shown*

**BNC DOUBLE JACK WITH MOUNTING FLANGE**  
 (Comes with Four 6mm Long Pan Head Screws)

75Ω **UBJ24F**

*BJ24 Shown*

**BULKHEAD JACK FEED-THROUGH NON-INSULATED**  
 Mounting Hole: DD3.100, (Hermetically sealed version available, call factory).

50Ω **BJ24**  
 75Ω **UBJ24**

*BJ28 Shown*

**INSULATED BULKHEAD JACK FEED-THROUGH**  
 Mounting Hole: D3.156 (Hermetically sealed version available, call factory).  
 GF-Ground Filter version available page 31.

50Ω **BJ28**  
 75Ω **UBJ28**

- Refers to Cable Group Table, see pages 68-88. "D" mounting holes are on page 45.