

fx-95MS
fx-100MS
fx-115MS (***fx-912MS***)
fx-570MS
fx-991MS
User's Guide

■ **fx-912MS owners**

Please be sure to read the important notice of this manual.



CASIO[®]

http://world.casio.com/edu_e/



CASIO ELECTRONICS CO., LTD. □
Unit 6, 1000 North Circular Road, □
London NW2 7JD, U.K.

Removing and Replacing the Calculator's Cover


- **Before starting①**

Holding the cover as shown in the illustration, slide the unit out of the cover.

- **After you are finished②**

Holding the cover as shown in the illustration, slide the unit out of the cover.

- Always slide the keyboard end of the unit into the cover first. Never slide the display end of the unit into the cover.

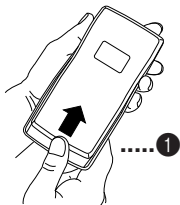

Safety Precautions

Be sure to read the following safety precautions before using this calculator. Keep this manual handy for later reference.



Caution

This symbol is used to indicate information that can result in personal injury or material damage if ignored.

Batteries

- After removing the battery from the calculator, put it in a safe place where it will not get into the hands of small children and accidentally swallowed.
- Keep batteries out of the reach of small children. If accidentally swallowed, consult with a physician immediately.
- Never charge batteries, try to take batteries apart, or allow batteries to become shorted. Never expose batteries to direct heat or dispose of them by incineration.
- Misuse of batteries can cause them to leak and damage nearby items, and can create the risk of fire and personal injury.
 - Always make sure that the battery's positive \oplus and negative \ominus ends are facing correctly when you load it into the calculator.
 - Remove the battery if you do not plan to use the calculator for a long time (fx-95MS/100MS/570MS).
 - Use only the type of battery specified for this calculator in this manual.


Disposing of the Calculator

- Never dispose of the calculator by burning it. Doing so can cause certain components to suddenly burst, creating the risk of fire and personal injury.
- The displays and illustrations (such as key markings) shown in this User's Guide are for illustrative purposes

only, and may differ somewhat from the actual items they represent.

- The contents of this manual are subject to change without notice.
- In no event shall CASIO Computer Co., Ltd. be liable to anyone for special, collateral, incidental, or consequential damages in connection with or arising out of the purchase or use of these materials. Moreover, CASIO Computer Co., Ltd. shall not be liable for any claim of any kind whatsoever against the use of these materials by any other party.

Handling Precautions

- **Be sure to press the  key before using the calculator for the first time.**
- **Even if the calculator is operating normally, replace the battery at least once every three years for the fx-115MS/fx-570MS/fx-991MS, or at least once every two years for the fx-95MS/fx-100MS.**

A dead battery can leak, causing damage to and malfunction of the calculator. Never leave a dead battery in the calculator.

- **The battery that comes with this unit discharges slightly during shipment and storage. Because of this, it may require replacement sooner than the normal expected battery life.**
- **Low battery power can cause memory contents to become corrupted or lost completely. Always keep written records of all important data.**
- **Avoid use and storage in areas subjected to temperature extremes.**

Very low temperatures can cause slow display response, total failure of the display, and shortening of battery life. Also avoid leaving the calculator in direct sunlight, near a window, near a heater or anywhere else it might be exposed to very high temperatures. Heat can cause discoloration or deformation of the calculator's case, and damage to internal circuitry.

- **Avoid use and storage in areas subjected to large amounts of humidity and dust.**

Take care never to leave the calculator where it might be splashed by water or exposed to large amounts of humidity or dust. Such conditions can damage internal circuitry.

- **Never drop the calculator or otherwise subject it to strong impact.**

- **Never twist or bend the calculator.**

Avoid carrying the calculator in the pocket of your trousers or other tight-fitting clothing where it might be subjected to twisting or bending.

- **Never try to take the calculator apart.**
- **Never press the keys of the calculator with a ball-point pen or other pointed object.**
- **Use a soft, dry cloth to clean the exterior of the calculator.**


If the calculator becomes very dirty, wipe it off with a cloth moistened in a weak solution of water and a mild neutral household detergent. Wring out all excess moisture before wiping the calculator. Never use thinner, benzene or other volatile agents to clean the calculator. Doing so can remove printed markings and can damage the case.

Contents

Removing and Replacing the Calculator's Cover	1
Safety Precautions	2
Handling Precautions	3
Two-line Display	7
Before getting started... ..	7
■ Modes	7
■ Input Capacity	8
■ Making Corrections During Input	9
■ Replay Function	9
■ Error Locator	9
■ Multi-statements	10
■ Exponential Display Formats	10
■ Decimal Point and Separator Symbols	11
■ Initializing the Calculator	11
Basic Calculations	11
■ Arithmetic Calculations	11
■ Fraction Operations	12
■ Percentage Calculations	14
■ Degrees, Minutes, Seconds Calculations	15
■ FIX, SCI, RND	15
Memory Calculations	16
■ Answer Memory	16
■ Consecutive Calculations	17
■ Independent Memory	17
■ Variables	17
Scientific Function Calculations	18
■ Trigonometric/Inverse Trigonometric Functions ...	18
■ Hyperbolic/Inverse Hyperbolic Functions	19

■ Common and Natural Logarithms/ Antilogarithms	19
■ Square Roots, Cube Roots, Roots, Squares, Cubes, Reciprocals, Factorials, Random Numbers, π , and Permutation/Combination	20
■ Angle Unit Conversion	21
■ Coordinate Conversion (Pol (x, y) , Rec (r, θ))	21
■ Engineering Notation Calculations	22
Equation Calculations	22
■ Quadratic and Cubic Equations	22
■ Simultaneous Equations	24
Statistical Calculations	26
Standard Deviation	26
Regression Calculations	28
Technical Information	32
■ When you have a problem.....	32
■ Error Messages	32
■ Order of Operations	34
■ Stacks	35
■ Input Ranges	36
Power Supply (fx-95MS only)	38
Specifications (fx-95MS only)	39

Two-line Display

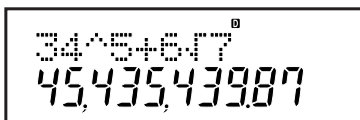

The two-line display makes it possible to view both the calculation formula and its result at the same time.

- The upper line shows the calculation formula.
- The lower line shows the result.

A separator symbol is displayed every three digits when the integer part of the mantissa has more than three digits.

Before getting started...

■ Modes

Before starting a calculation, you must first enter the correct mode as indicated in the table below.

- **The following table shows the modes and required operations for the fx-95MS only. Users of other models should refer to the “User’s Guide 2 (Additional Functions)” for information about modes and their selection.**

fx-95MS Modes

To perform this type of calculation:	Perform this key operation:	To enter this mode:
Basic arithmetic calculations	1	COMP
Standard deviation	2	SD
Regression calculations	3	REG
Solution of equations	1	EQN

- Pressing the **MODE** key more than twice displays additional setup screens. Setup screens are described in the sections of this manual where they are actually used to change the calculator setup.
- In this manual, the name of the mode you need to enter in order to perform the calculations being described is indicated in the main title of each section.

Example:

**Equation
Calculations**

EQN

Note!

- To return the calculation mode and setup to the initial defaults shown below, press **SHIFT CLR 2 (Mode) =**.










Calculation Mode:	COMP
Angle Unit:	Deg
Exponential Display Format:	Norm 1
Fraction Display Format:	a^b/c
Decimal Point Character:	Dot

- Mode indicators appear in the upper part of the display.
- Be sure to check the current calculation mode (SD, REG, COMP) and angle unit setting (Deg, Rad, Gra) before beginning a calculation.









■ Input Capacity

- The memory area used for calculation input can hold 79 “steps.” One step is taken up each time you press a number key or arithmetic operator key (**+**, **-**, **×**, **÷**). A **SHIFT** or **ALPHA** key operation does not take up a step, so inputting **SHIFT** **√**, for example, takes up only one step.
- You can input up to 79 steps for a single calculation. Whenever you input the 73rd step of any calculation, the cursor changes from “_” to “■” to let you know memory is running low. If you need to input more than 79 steps, you should divide your calculation into two or more parts.
- Pressing the **Ans** key recalls the last result obtained, which you can use in a subsequent calculation. See “Answer Memory” for more information about using the **Ans** key.






■ Making Corrections During Input

- Use  and  to move the cursor to the location you want.
- Press  to delete the number or function at the current cursor position.
- Press   to change to an insert cursor . Inputting something while the insert cursor is on the display inserts the input at the insert cursor position.
- Pressing  , or  returns to the normal cursor from the insert cursor.

■ Replay Function

- Every time you perform a calculation, the replay function stores the calculation formula and its result in replay memory. Pressing the  key displays the formula and result of the calculation you last performed. Pressing  again back steps sequentially (new-to-old) through past calculations.
- Pressing the  or  key while a replay memory calculation is on the display changes to the editing screen.
- Pressing the  or  key immediately after you finish a calculation displays the editing screen for that calculation.
- Pressing  does not clear replay memory, so you can recall the last calculation even after you press .
- Replay memory capacity is 128 bytes for storage of both expressions and results.
- Replay memory is cleared by any of the following actions.



When you press the  key

When you initialize modes and settings by pressing    (or ) .

When you change from one calculation mode to another

When you turn off the calculator.

■ Error Locator

- Pressing  or  after an error occurs displays the calculation with the cursor positioned at the location where the error occurred.

■ Multi-statements

A multi-statement is an expression that is made up of two or more smaller expressions, which are joined using a colon (:).

- **Example:** To add $2 + 3$ and then multiply the result by 4

The image shows a sequence of calculator inputs and outputs. The first row shows the input: 2, followed by a plus sign (+), 3, an ALPHA key, a colon (:), an Ans key, a multiply sign (x), 4, and an equals sign (=). This results in a display box containing "2+3" on the top line and "5.Disp" on the bottom line. The second row shows an equals sign (=) followed by a display box containing "Ans×4" on the top line and "20." on the bottom line.

■ Exponential Display Formats

This calculator can display up to 10 digits. Larger values are automatically displayed using exponential notation. In the case of decimal values, you can select between two formats that determine at what point exponential notation is used.

- To change the exponential display format, press the **MODE** key a number of times until you reach the exponential display format setup screen shown below.

The image shows a rectangular box containing three columns of text. The top row contains "Fix", "Sci", and "Norm". The bottom row contains the numbers "1", "2", and "3" respectively, indicating the selection options for each format.

- Press **[3]**. On the format selection screen that appears, press **[1]** to select Norm 1 or **[2]** for Norm 2.

● Norm 1

With Norm 1, exponential notation is automatically used for integer values with more than 10 digits and decimal values with more than two decimal places.

● Norm 2


With Norm 2, exponential notation is automatically used for integer values with more than 10 digits and decimal values with more than nine decimal places.

- All of the examples in this manual show calculation results using the Norm 1 format.

■ Decimal Point and Separator Symbols

You can use the display setup (Disp) screen to specify the symbols you want for the decimal point and 3-digit separator.

- To change the decimal point and separator symbol setting, press the **MODE** key a number of times until you reach the setup screen shown below.



- Display the selection screen.

fx-95MS: **1** **▶**

Other Models: **1** **▶** **▶**

- Press the number key (**1** or **2**) that corresponds to the setting you want to use.

1 (Dot): Period decimal point, comma separator

2 (Comma): Comma decimal point, period separator

■ Initializing the Calculator

- Perform the following key operation when you want to initialize the calculation mode and setup, and clear replay memory and variables.

SHIFT **CLR** **3** (All) **=**

Basic Calculations

COMP

■ Arithmetic Calculations

Use the **MODE** key to enter the COMP Mode when you want to perform basic calculations.

COMP **MODE** **1**

- Negative values inside of calculations must be enclosed within parentheses.

$\sin -1.23 \rightarrow$ **sin** **(** **(-)** 1.23 **)**

- It is not necessary to enclose a negative exponent within parentheses.

$$\sin 2.34 \times 10^{-5} \rightarrow \boxed{\sin} \ 2.34 \boxed{\text{EXP}} \boxed{(-)} \ 5$$

- Example 1:** $3 \times (5 \times 10^{-9}) = 1.5 \times 10^{-8}$

$$3 \boxed{\times} 5 \boxed{\text{EXP}} \boxed{(-)} 9 \boxed{=}$$

- Example 2:** $5 \times (9 + 7) = 80$ $5 \boxed{\times} \boxed{(} 9 \boxed{+} 7 \boxed{)} \boxed{=}$

- You can skip all $\boxed{(}$ operations before $\boxed{=}$.

■ Fraction Operations

● Fraction Calculations

- Values are displayed in decimal format automatically whenever the total number of digits of a fractional value (integer + numerator + denominator + separator marks) exceeds 10.

- Example 1:** $\frac{2}{3} + \frac{1}{5} = \frac{13}{15}$

$$2 \boxed{\text{a} \frac{b}{c}} 3 \boxed{+} 1 \boxed{\text{a} \frac{b}{c}} 5 \boxed{=}$$

$$\boxed{13 _ 15.}$$

- Example 2:** $3 \frac{1}{4} + 1 \frac{2}{3} = 4 \frac{11}{12}$

$$3 \boxed{\text{a} \frac{b}{c}} 1 \boxed{\text{a} \frac{b}{c}} 4 \boxed{+}$$

$$1 \boxed{\text{a} \frac{b}{c}} 2 \boxed{\text{a} \frac{b}{c}} 3 \boxed{=}$$

$$\boxed{4 _ 11 _ 12.}$$

- Example 3:** $\frac{2}{4} = \frac{1}{2}$

$$2 \boxed{\text{a} \frac{b}{c}} 4 \boxed{=}$$

- Example 4:** $\frac{1}{2} + 1.6 = 2.1$

$$1 \boxed{\text{a} \frac{b}{c}} 2 \boxed{+} 1.6 \boxed{=}$$

- Results of calculations that mix fraction and decimal values are always decimal.

● Decimal ↔ Fraction Conversion

- Use the operation shown below to convert calculation results between decimal values and fraction values.
- Note that conversion can take as long as two seconds to perform.

- **Example 1:** $2.75 = 2 \frac{3}{4}$ (Decimal \rightarrow Fraction)

$$2.75 \text{ [=]} \boxed{2.75}$$

$$\boxed{a\frac{b}{c}} \boxed{2 \downarrow 3 \downarrow 4.}$$

$$= \frac{11}{4} \quad \boxed{\text{SHIFT}} \boxed{d/c} \boxed{11 \downarrow 4.}$$

- **Example 2:** $\frac{1}{2} \leftrightarrow 0.5$ (Fraction \leftrightarrow Decimal)

$$1 \boxed{a\frac{b}{c}} 2 \text{ [=]} \boxed{1 \downarrow 2.}$$

$$\boxed{a\frac{b}{c}} \boxed{0.5}$$

$$\boxed{a\frac{b}{c}} \boxed{1 \downarrow 2.}$$

• Mixed Fraction \leftrightarrow Improper Fraction Conversion


- **Example:** $1 \frac{2}{3} \leftrightarrow \frac{5}{3}$

$$1 \boxed{a\frac{b}{c}} 2 \boxed{a\frac{b}{c}} 3 \text{ [=]} \boxed{1 \downarrow 2 \downarrow 3.}$$

$$\boxed{\text{SHIFT}} \boxed{d/c} \boxed{5 \downarrow 3.}$$

$$\boxed{\text{SHIFT}} \boxed{d/c} \boxed{1 \downarrow 2 \downarrow 3.}$$

- You can use the display setup (Disp) screen to specify the display format when a fraction calculation result is greater than one.
- To change the fraction display format, press the $\boxed{\text{MODE}}$ key a number of times until you reach the setup screen shown below.



- Display the selection screen.
fx-95MS: $\boxed{1}$
Other Models: $\boxed{1}$ \blacktriangleright
- Press the number key ($\boxed{1}$ or $\boxed{2}$) that corresponds to the setting you want to use.
 $\boxed{1}$ (a^b/_c): Mixed fraction
 $\boxed{2}$ (d/c): Improper fraction

- An error occurs if you try to input a mixed fraction while the d/c display format is selected.

■ Percentage Calculations

- **Example 1:** To calculate 12% of 1500 **(180)**

$$1500 \times 12 \text{ [SHIFT] [%]}$$

- **Example 2:** To calculate what percentage of 880 is 660 **(75%)**

$$660 \div 880 \text{ [SHIFT] [%]}$$

- **Example 3:** To add 15% onto 2500 **(2875)**

$$2500 \times 15 \text{ [SHIFT] [%] [+]}$$

- **Example 4:** To discount 3500 by 25% **(2625)**

$$3500 \times 25 \text{ [SHIFT] [%] [-]}$$

- **Example 5:** To discount the sum of 168, 98, and 734 by 20% **(800)**

$$168 \text{ [+]} 98 \text{ [+]} 734 \text{ [=]} \text{ [Ans] [SHIFT] [STO] [A]} \\ \text{ [ALPHA] [A] } \times 20 \text{ [SHIFT] [%] [-]}$$

*

- * As shown here, if you want to use the current Answer Memory value in a mark up or discount calculation, you need to assign the Answer Memory value into a variable and then use the variable in the mark up/discount calculation. This is because the calculation performed when [%] is pressed stores a result to Answer Memory before the [-] key is pressed.

- **Example 6:** If 300 grams are added to a test sample originally weighing 500 grams, what is the percentage increase in weight? **(160%)**

$$300 \text{ [+]} 500 \text{ [SHIFT] [%]}$$

- **Example 7:** What is the percentage change when a value is increased from 40 to 46? How about to 48?

(15%, 20%)

$$46 \text{ [-]} 40 \text{ [SHIFT] [%]}$$

$$\text{ [LEFT] [LEFT] [LEFT] [LEFT] [LEFT] [LEFT] 8 [=]}$$

■ Degrees, Minutes, Seconds Calculations

- You can perform sexagesimal calculations using degrees (hours), minutes, and seconds, and convert between sexagesimal and decimal values.
- Example 1:** To convert the decimal value 2.258 to a sexagesimal value and then back to a decimal value

$$2.258 \text{ [=]} \boxed{2.258}$$

$$\boxed{\text{SHIFT}} \boxed{\text{DMS}} \boxed{2.258} \text{ [=]} \boxed{2^{\circ}15'28.8''}$$

$$\boxed{\text{DMS}} \boxed{2.258} \text{ [=]} \boxed{2.258}$$

- Example 2:** To perform the following calculation:
 $12^{\circ}34'56'' \times 3.45$

$$12 \boxed{\text{DMS}} 34 \boxed{\text{DMS}} 56 \boxed{\text{DMS}} \boxed{\times} 3.45 \text{ [=]} \boxed{43^{\circ}24'31.2''}$$

■ FIX, SCI, RND

- To change the settings for the number of decimal places, the number of significant digits, or the exponential display format, press the $\boxed{\text{MODE}}$ key a number of times until you reach the setup screen shown below.

Fix	Sci	Norm
1	2	3

- Press the number key ($\boxed{1}$, $\boxed{2}$, or $\boxed{3}$) that corresponds to the setup item you want to change.
 - $\boxed{1}$ (Fix): Number of decimal places
 - $\boxed{2}$ (Sci): Number of significant digits
 - $\boxed{3}$ (Norm): Exponential display format

- Example 1:** $200 \div 7 \times 14 =$

$$200 \boxed{\div} 7 \boxed{\times} 14 \text{ [=]} \boxed{400.}$$

(Specifies three decimal places.)

$$\boxed{\text{MODE}} \dots \boxed{1} \text{ (Fix)} \boxed{3} \text{ [=]} \boxed{400.000}$$

(Internal calculation continues using 12 digits.)

200 \div 7 = 28.571

\times 14 = 400.000

The following performs the same calculation using the specified number of decimal places.

200 \div 7 = 28.571

(Internal rounding)

SHIFT Rnd 28.571

\times 14 = 399.994

- Press MODE 3 (Norm) 1 to clear the Fix specification.
- **Example 2:** $1 \div 3$, displaying result with two significant digits (Sci 2)

MODE 2 (Sci) 2 1 \div 3 = $\begin{matrix} \text{SCI} \\ 3.3^{-01} \end{matrix}$

- Press MODE 3 (Norm) 1 to clear the Sci specification.

Memory Calculations COMP

Use the MODE key to enter the COMP Mode when you want to perform a calculation using memory.

COMP MODE 1

■ Answer Memory

- Whenever you press = after inputting values or an expression, the calculated result automatically updates Answer Memory contents by storing the result.
- In addition to = , Answer Memory contents are also updated with result whenever you press SHIFT $\%$, M+ , SHIFT M- , or SHIFT STO followed by a letter (A through F, or M, X, or Y).

- You can recall Answer Memory contents by pressing $\boxed{\text{Ans}}$.
- Answer Memory can store up to 12 digits for the mantissa and two digits for the exponent.
- Answer Memory contents are not updated if the operation performed by any of the above key operations results in an error.

■ Consecutive Calculations

- You can use the calculation result that is currently on the display (and also stored in Answer Memory) as the first value of your next calculation. Note that pressing an operator key while a result is displayed causes the displayed value to change to Ans, indicating it is the value that is currently stored in Answer Memory.
- The result of a calculation can also be used with a subsequent Type A function (x^2 , x^3 , x^{-1} , $x!$, DRG▶), +, −, $\wedge(x^y)$, $x\sqrt{\quad}$, \times , \div , nPr and nCr .

■ Independent Memory

- Values can be input directly into memory, added to memory, or subtracted from memory. Independent memory is convenient for calculating cumulative totals.
- Independent memory uses the same memory area as variable M.
- To clear independent memory (M), input $\boxed{0} \boxed{\text{SHIFT}} \boxed{\text{STO}} \boxed{\text{M}}$ (M+).
- **Example:**

$23 + 9 = 32$	$23 \boxed{+} 9 \boxed{\text{SHIFT}} \boxed{\text{STO}} \boxed{\text{M}}$ (M+)
$53 - 6 = 47$	$53 \boxed{-} 6 \boxed{\text{M+}}$
$-) 45 \times 2 = 90$	$45 \boxed{\times} 2 \boxed{\text{SHIFT}} \boxed{\text{M-}}$
$(\text{Total}) \quad -11$	$\boxed{\text{RCL}} \boxed{\text{M}}$ (M+)

■ Variables

- There are nine variables (A through F, M, X and Y), which can be used to store data, constants, results, and other values.
- Use the following operation to delete data assigned to a

particular variable: $\boxed{0}$ $\boxed{\text{SHIFT}}$ $\boxed{\text{STO}}$ $\boxed{\text{A}}$. This operation deletes the data assigned to variable A.

- Perform the following key operation when you want to clear the values assigned to all of the variables.

$\boxed{\text{SHIFT}}$ $\boxed{\text{CLR}}$ $\boxed{1}$ (MCl) $\boxed{=}$

- **Example:** $193.2 \div 23 = 8.4$

$$193.2 \div 28 = 6.9$$

193.2 $\boxed{\text{SHIFT}}$ $\boxed{\text{STO}}$ $\boxed{\text{A}}$ $\boxed{\div}$ 23 $\boxed{=}$

$\boxed{\text{ALPHA}}$ $\boxed{\text{A}}$ $\boxed{\div}$ 28 $\boxed{=}$

Scientific Function Calculations

$\boxed{\text{COMP}}$

Use the $\boxed{\text{MODE}}$ key to enter the COMP Mode when you want to perform basic arithmetic calculations.

COMP $\boxed{\text{MODE}}$ $\boxed{1}$

- Certain types of calculations may take a long time to complete.
- Wait for the result to appear on the display before starting the next calculation.
- $\pi = 3.14159265359$

■ Trigonometric/Inverse Trigonometric Functions

- To change the default angle unit (degrees, radians, grads), press the $\boxed{\text{MODE}}$ key a number of times until you reach the angle unit setup screen shown below.

Deg	Rad	Gra
1	2	3

- Press the number key ($\boxed{1}$, $\boxed{2}$, or $\boxed{3}$) that corresponds to the angle unit you want to use.

$$(90^\circ = \frac{\pi}{2} \text{ radians} = 100 \text{ grads})$$

- **Example 1:** $\sin 63^\circ 52' 41'' = 0.897859012$

MODE 1 (Deg)
 sin 63 52 41 =

- **Example 2:** $\cos\left(\frac{\pi}{3} \text{ rad}\right) = 0.5$

MODE 2 (Rad)
 cos (SHIFT π ÷ 3) =

- **Example 3:** $\cos^{-1} \frac{\sqrt{2}}{2} = 0.25 \pi \text{ (rad)} \left(= \frac{\pi}{4} \text{ (rad)} \right)$

MODE 2 (Rad)
 SHIFT cos⁻¹ (√ 2 ÷ 2) = Ans ÷ SHIFT π =

- **Example 4:** $\tan^{-1} 0.741 = 36.53844577^\circ$

MODE 1 (Deg)
 SHIFT tan⁻¹ 0.741 =

■ Hyperbolic/Inverse Hyperbolic Functions

- **Example 1:** $\sinh 3.6 = 18.28545536$ hyp sin 3.6 =

- **Example 2:** $\sinh^{-1} 30 = 4.094622224$

hyp SHIFT sin⁻¹ 30 =

■ Common and Natural Logarithms/Antilogarithms

- **Example 1:** $\log 1.23 = 0.089905111$ log 1.23 =

- **Example 2:** $\ln 90 (= \log_e 90) = 4.49980967$

ln 90 =
 $\ln e = 1$ ln ALPHA e =

- **Example 3:** $e^{10} = 22026.46579$ SHIFT e^x 10 =

- **Example 4:** $10^{1.5} = 31.6227766$ SHIFT 10^x 1.5 =

- **Example 5:** $2^4 = 16$ 2 ^ 4 =

■ Square Roots, Cube Roots, Roots, Squares, Cubes, Reciprocals, Factorials, Random Numbers, π , and Permutation/Combination

- **Example 1:** $\sqrt{2} + \sqrt{3} \times \sqrt{5} = 5.287196909$

$$\sqrt{} 2 \text{ + } \sqrt{} 3 \text{ x } \sqrt{} 5 \text{ =}$$

- **Example 2:** $\sqrt[3]{5} + \sqrt[3]{-27} = -1.290024053$

$$\text{SHIFT } \sqrt[3]{} 5 \text{ + } \text{SHIFT } \sqrt[3]{} ((-) 27) \text{ =}$$

- **Example 3:** $\sqrt[7]{123} (= 123^{\frac{1}{7}}) = 1.988647795$

$$7 \text{ SHIFT } \sqrt[3]{} 123 \text{ =}$$

- **Example 4:** $123 + 30^2 = 1023$

$$123 \text{ + } 30 \text{ [x}^2 \text{] =}$$

- **Example 5:** $12^3 = 1728$

$$12 \text{ [x}^3 \text{] * =}$$

* $\text{SHIFT } \text{[x}^3 \text{]}$ in the case of fx-570MS/fx-991MS.

- **Example 6:** $\frac{1}{\frac{1}{3} - \frac{1}{4}} = 12$

$$((3 \text{ [x}^{-1} \text{] } - 4 \text{ [x}^{-1} \text{] }) \text{ [x}^{-1} \text{] =}$$

- **Example 7:** $8! = 40320$

$$8 \text{ SHIFT } \text{[x!]} \text{ =}$$

- **Example 8:** To generate a random number between 0.000 and 0.999

$$\text{SHIFT } \text{[Ran\#]} \text{ = } \boxed{0.664}$$

(The above value is a sample only. Results differ each time.)

- **Example 9:** $3\pi = 9.424777961$

$$3 \text{ SHIFT } \text{[\pi]} \text{ =}$$

- **Example 10:** To determine how many different 4-digit values can be produced using the numbers 1 through 7

- Numbers cannot be duplicated within the same 4-digit value (1234 is allowed, but 1123 is not). **(840)**

$$7 \text{ SHIFT } \text{[nPr]} 4 \text{ =}$$


- **Example 11:** To determine how many different 4-member groups can be organized in a group of 10 individuals **(210)**

$$10 \text{ [nC}r \text{] * } 4 \text{ =}$$

* SHIFT RC in the case of fx-100MS/fx-115MS/fx-570MS/fx-991MS.

■ Angle Unit Conversion

- Press SHIFT DRG to display the following menu.



- Pressing 1 , 2 , or 3 converts the displayed value to the corresponding angle unit.
- Example:** To convert 4.25 radians to degrees

$$\text{MODE} \dots \text{1} (\text{Deg})$$

$$4.25 \text{SHIFT} \text{DRG} \text{2} (\text{R}) = \boxed{4.25^r}$$

$$\boxed{243.5070629}$$

■ Coordinate Conversion (Pol (x, y), Rec (r, θ))

- Calculation results are automatically assigned to variables E and F.
- Example 1:** To convert polar coordinates ($r=2$, $\theta=60^\circ$) to rectangular coordinates (x, y) (Deg)

$$x = 1 \quad \text{SHIFT} \text{Rec} \text{2} \text{,} \text{60} \text{)} =$$

$$y = 1.732050808 \quad \text{RCL} \text{F}$$

- Press $\text{RCL} \text{E}$ to display the value of x , or $\text{RCL} \text{F}$ to display the value of y .
- Example 2:** To convert rectangular coordinates ($1, \sqrt{3}$) to polar coordinates (r, θ) (Rad)

$$r = 2 \quad \text{Pol} \text{*} \text{1} \text{,} \sqrt{\text{3}} \text{)} =$$


* $\text{SHIFT} \text{Pol}$ in the case of fx-100MS/fx-115MS/fx-570MS/fx-991MS.

$$\theta = 1.047197551 \quad \text{RCL} \text{F}$$

- Press $\text{RCL} \text{E}$ to display the value of r , or $\text{RCL} \text{F}$ to display the value of θ .

- Any time until you input a value for the final coefficient (c for a quadratic equation, d for a cubic equation), you can use the \blacktriangle and \blacktriangledown keys to move between coefficients on the screen and make changes, if you want.
- Note that you cannot input complex numbers for coefficients.

Calculation starts and one of the solutions appears as soon as you input a value for the final coefficient.

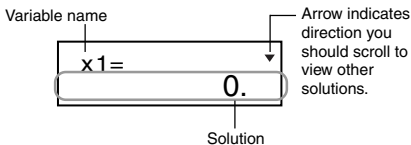

Press the \blacktriangledown key to view other solutions. Use \blacktriangle and \blacktriangledown to scroll between all of the solutions for the equation.

Pressing the **AC** key at this point returns to the coefficient input screen.

- Certain coefficients can cause calculation to take more time.

• **Example 1:** To solve the equation

$$x^3 - 2x^2 - x + 2 = 0 \quad (x = 2, -1, 1)$$

(Degree?) 3

(a?) 1 **=**

(b?) (-) 2 **=**

(c?) (-) 1 **=**

(d?) 2 **=**

(x1 = 2) \blacktriangledown

(x2 = -1) \blacktriangledown

(x3 = 1)

- If a result is a complex number, the real part of the first solution appears first. This is indicated by the "R \leftrightarrow I" symbol on the display. Press **SHIFT** **Re \leftrightarrow Im** to toggle the display between the real part and imaginary part of a solution.

$$x1 = 0.25$$



$$x1 = 0.75i$$

- **Example 2:** To solve the equation $8x^2 - 4x + 5 = 0$ ($x = 0.25 \pm 0.75i$)

(Degree?)	2
(a?)	8 =
(b?)	$(-)$ 4 =
(c?)	5 =
(x1 = 0.25 + 0.75i)	∇
(x2 = 0.25 - 0.75i)	

■ Simultaneous Equations

Simultaneous Linear Equations with Two Unknowns:

$$a_1x + b_1y = c_1$$

$$a_2x + b_2y = c_2$$

Simultaneous Linear Equations with Three Unknowns:

$$a_1x + b_1y + c_1z = d_1$$

$$a_2x + b_2y + c_2z = d_2$$

$$a_3x + b_3y + c_3z = d_3$$

Entering the EQN Mode displays the initial simultaneous equation screen.

$$\begin{array}{cc} \text{Unknowns?} & \rightarrow \\ 2 & 3 \end{array}$$

Use this screen to specify 2 or 3 as the number of unknowns, and input values for each of the coefficients.

Coefficient name


$$\begin{array}{|c|} \hline a1? \\ \hline 0. \\ \hline \end{array}$$

Arrow indicates direction you should scroll to view other elements.

Element value

- Any time until you input a value for the final coefficient (c_2 for two unknowns, d_3 for three unknowns), you can use the \blacktriangle and \blacktriangledown keys to move between coefficients on the screen and make changes, if you want.
- Note that you cannot input complex numbers for coefficients.

Calculation starts and one of the solutions appears as soon as you input a value for the final coefficient.

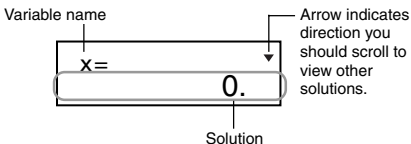

Press the \blacktriangledown key to view other solutions. Use \blacktriangle and \blacktriangledown to scroll between all of the solutions for the equation. Pressing the **AC** key at this point returns to the coefficient input screen.

- **Example:** To solve the following simultaneous equations

$$2x + 3y - z = 15$$

$$3x - 2y + 2z = 4$$

$$5x + 3y - 4z = 9 \quad (x = 2, y = 5, z = 4)$$

(Unknowns?) 3

($a_1?$) ($d_1?$) 2 = 3 = (-) 1 = 15 =

($a_2?$) ($d_2?$) 3 = (-) 2 = 2 = 4 =

($a_3?$) ($d_3?$) 5 = 3 = (-) 4 = 9 =

($x = 2$) \blacktriangledown

($y = 5$) \blacktriangledown

($z = 4$)

Statistical Calculations

SD

REG

Standard Deviation

SD

Use the $\boxed{\text{MODE}}$ key to enter the SD Mode when you want to perform statistical calculations using standard deviation.

SD $\boxed{\text{MODE}}$ $\boxed{2}$ (fx-95MS)
 $\boxed{\text{MODE}}$ $\boxed{\text{MODE}}$ $\boxed{1}$ (Other Models)

- Always start data input with $\boxed{\text{SHIFT}}$ $\boxed{\text{CLR}}$ $\boxed{1}$ (Scl) $\boxed{=}$ to clear statistical memory.
- Input data using the key sequence shown below.
 $\langle x\text{-data} \rangle$ $\boxed{\text{DT}}$
- Input data is used to calculate values for n , Σx , Σx^2 , \bar{x} , σ_n and σ_{n-1} , which you can recall using the key operations noted nearby.

To recall this type of value:	Perform this key operation:
Σx^2	$\boxed{\text{SHIFT}}$ $\boxed{\text{S-SUM}}$ $\boxed{1}$
Σx	$\boxed{\text{SHIFT}}$ $\boxed{\text{S-SUM}}$ $\boxed{2}$
n	$\boxed{\text{SHIFT}}$ $\boxed{\text{S-SUM}}$ $\boxed{3}$
\bar{x}	$\boxed{\text{SHIFT}}$ $\boxed{\text{S-VAR}}$ $\boxed{1}$
σ_n	$\boxed{\text{SHIFT}}$ $\boxed{\text{S-VAR}}$ $\boxed{2}$
σ_{n-1}	$\boxed{\text{SHIFT}}$ $\boxed{\text{S-VAR}}$ $\boxed{3}$

- **Example:** To calculate σ_{n-1} , σ_n , \bar{x} , n , Σx , and Σx^2 for the following data : 55, 54, 51, 55, 53, 53, 54, 52

In the SD Mode:

$\boxed{\text{SHIFT}}$ $\boxed{\text{CLR}}$ $\boxed{1}$ (Scl) $\boxed{=}$ (Stat clear)

55 $\boxed{\text{DT}}$ $\boxed{n=}$ SD 1.

Each time you press $\boxed{\text{DT}}$ to register your input, the number of data input up to that point is indicated on the display (n value).

54 $\boxed{\text{DT}}$ 51 $\boxed{\text{DT}}$ 55 $\boxed{\text{DT}}$
 53 $\boxed{\text{DT}}$ $\boxed{\text{DT}}$ 54 $\boxed{\text{DT}}$ 52 $\boxed{\text{DT}}$

Sample Standard Deviation (σ_{n-1}) = 1.407885953

$\boxed{\text{SHIFT}}$ $\boxed{\text{S-VAR}}$ $\boxed{3}$ $\boxed{=}$

Population Standard Deviation (σ_n) = **1.316956719**

SHIFT S-VAR 2 =

Arithmetic Mean (\bar{x}) = **53.375**

SHIFT S-VAR 1 =

Number of Data (n) = **8**

SHIFT S-SUM 3 =

Sum of Values ($\sum x$) = **427**

SHIFT S-SUM 2 =

Sum of Squares of Values ($\sum x^2$) = **22805**

SHIFT S-SUM 1 =

Data Input Precautions

- **DT** **DT** inputs the same data twice.
- You can also input multiple entries of the same data using **SHIFT** **:**. To input the data 110 ten times, for example, press 110 **SHIFT** **:** 10 **DT**.
- You can perform the above key operations in any order, and not necessarily that shown above.
- While inputting data or after inputting data is complete, you can use the **▲** and **▼** keys to scroll through data you have input. If you input multiple entries of the same data using **SHIFT** **:** to specify the data frequency (number of data items) as described above, scrolling through data shows both the data item and a separate screen for the data frequency (Freq).
- You can then edit the displayed data, if you want. Input the new value and then press the **=** key to replace the old value with the new one. This also means that if you want to perform some other operation (calculation, recall of statistical calculation results, etc.), you should always press the **AC** key first to exit data display.
- Pressing the **DT** key instead of **=** after changing a value on the display registers the value you input as a new data item, and leaves the old value as it is.
- You can delete a data value displayed using **▲** and **▼** by pressing **SHIFT** **CL**. Deleting a data value causes all values following it to be shifted up.
- Data values you register are normally stored in calculator memory. The message "Data Full" appears and you will not be able to input any more data if there is no memory left for data storage. If this happens, press the **=** key to display the screen shown below.

Ed i tOFF ESC
1 2

Press **[2]** to exit data input without registering the value you just input.

Press **[1]** if you want to register the value you just input, without saving it in memory. If you do this, however, you will not be able to display or edit any of the data you have input.

- To delete data you have just input, press **[SHIFT]** **[CL]**.
- After inputting statistical data in the SD Mode or REG Mode, you will be unable to display or edit individual data items any longer after perform either the following operations.

Changing to another mode

Changing the regression type (Lin, Log, Exp, Pwr, Inv, Quad)

Regression Calculations

REG

Use the **[MODE]** key to enter the REG Mode when you want to perform statistical calculations using regression.

REG **[MODE]** **[3]** (fx-95MS)
[MODE] **[MODE]** **[2]** (Other Models)

- Entering the REG Mode displays screens like the ones shown below.

Lin	Log	Exp	→
1	2	3	



←Pwr	Inv	Quad
1	2	3

- Press the number key (**[1]**, **[2]**, or **[3]**) that corresponds to the type of regression you want to use.

[1] (Lin): Linear regression

[2] (Log): Logarithmic regression

[3] (Exp): Exponential regression

▶ **[1]** (Pwr): Power regression

▶ **[2]** (Inv): Inverse regression

▶ **[3]** (Quad): Quadratic regression

- Always start data input with **SHIFT CLR 1** (Scl) **⏏** to clear statistical memory.
- Input data using the key sequence shown below.
 $\langle x\text{-data} \rangle$ **▢** $\langle y\text{-data} \rangle$ **DT**
- The values produced by a regression calculation depend on the values input, and results can be recalled using the key operations shown in the table below.

To recall this type of value:	Perform this key operation:
Σx^2	SHIFT S-SUM 1
Σx	SHIFT S-SUM 2
n	SHIFT S-SUM 3
Σy^2	SHIFT S-SUM ▶ 1
Σy	SHIFT S-SUM ▶ 2
Σxy	SHIFT S-SUM ▶ 3
\bar{x}	SHIFT S-VAR 1
$x\sigma_n$	SHIFT S-VAR 2
$x\sigma_{n-1}$	SHIFT S-VAR 3
\bar{y}	SHIFT S-VAR ▶ 1
$y\sigma_n$	SHIFT S-VAR ▶ 2
$y\sigma_{n-1}$	SHIFT S-VAR ▶ 3
Regression coefficient A	SHIFT S-VAR ▶ ▶ 1
Regression coefficient B	SHIFT S-VAR ▶ ▶ 2
Regression calculation other than quadratic regression	
Correlation coefficient r	SHIFT S-VAR ▶ ▶ 3
\hat{x}	SHIFT S-VAR ▶ ▶ ▶ 1
\hat{y}	SHIFT S-VAR ▶ ▶ ▶ 2

- The following table shows the key operations you should use to recall results in the case of quadratic regression.

To recall this type of value:	Perform this key operation:
Σx^3	SHIFT S-SUM ▶ ▶ 1
Σx^2y	SHIFT S-SUM ▶ ▶ 2
Σx^4	SHIFT S-SUM ▶ ▶ 3
Regression coefficient C	SHIFT S-VAR ▶ ▶ 3
\hat{x}_1	SHIFT S-VAR ▶ ▶ ▶ 1
\hat{x}_2	SHIFT S-VAR ▶ ▶ ▶ 2
\hat{y}	SHIFT S-VAR ▶ ▶ ▶ 3

- The values in the above tables can be used inside of expressions the same way you use variables.

• Linear Regression

- The regression formula for linear regression is:

$$y = A + Bx.$$

- **Example:** Atmospheric Pressure vs. Temperature

Temperature	Atmospheric Pressure
10°C	1003 hPa
15°C	1005 hPa
20°C	1010 hPa
25°C	1011 hPa
30°C	1014 hPa

Perform linear regression to determine the regression formula terms and correlation coefficient for the data nearby. Next, use the regression formula to estimate atmospheric pressure at 18°C and temperature at 1000 hPa. Finally, calculate the coefficient of determination (r^2) and sample covariance $\left(\frac{\sum xy - n \cdot \bar{x} \cdot \bar{y}}{n - 1}\right)$.

In the REG Mode:

1 (Lin)

SHIFT CLR 1 (Scl) **=** (Stat clear)

10 **,** 1003 **DT**

n=	REG
	1.

Each time you press **DT** to register your input, the number of data input up to that point is indicated on the display (n value).

15 **,** 1005 **DT**

20 **,** 1010 **DT** 25 **,** 1011 **DT**

30 **,** 1014 **DT**

Regression Coefficient A = **997.4**

SHIFT S-VAR **▶▶** **1** **=**

Regression Coefficient B = **0.56**

SHIFT S-VAR **▶▶** **2** **=**

Correlation Coefficient r = **0.982607368**

SHIFT S-VAR **▶▶** **3** **=**

Atmospheric Pressure at 18°C = **1007.48**

18 **SHIFT S-VAR** **▶▶▶** **2** **=**

Temperature at 1000 hPa = **4.642857143**

1000

Coefficient of Determination = **0.965517241**

Sample Covariance = **35**

• Logarithmic, Exponential, Power, and Inverse Regression

- Use the same key operations as linear regression to recall results for these types of regression.
- The following shows the regression formulas for each type of regression.

Logarithmic Regression	$y = A + B \cdot \ln x$
Exponential Regression	$y = A \cdot e^{B \cdot x}$ ($\ln y = \ln A + Bx$)
Power Regression	$y = A \cdot x^B$ ($\ln y = \ln A + B \ln x$)
Inverse Regression	$y = A + B \cdot 1/x$

• Quadratic Regression

- The regression formula for quadratic regression is:
 $y = A + Bx + Cx^2$.

• Example:

x_i	y_i
29	1.6
50	23.5
74	38.0
103	46.4
118	48.0

Perform quadratic regression to determine the regression formula terms for the data nearby. Next, use the regression formula to estimate the values for \hat{y} (estimated value of y) for $x_i = 16$ and \hat{x} (estimated value of x) for $y_i = 20$.

In the REG Mode:

(Quad)

(Stat clear)

29 1.6 50 23.5
 74 38.0 103 46.4
 118 48.0

the display. Press **AC** to clear the error, or press **◀** or **▶** to display the calculation and correct the problem. See “Error Locator” for details.

Math ERROR

- **Causes**

- Calculation result is outside the allowable calculation range.
- An attempt to perform a function calculation using a value that exceeds the allowable input range.
- An attempt to perform an illogical operation (division by zero, etc.)

- **Action**

- Check your input values and make sure they are all within the allowable ranges. Pay special attention to values in any memory areas you are using.

Stack ERROR

- **Cause**

- The capacity of the numeric stack or operator stack is exceeded.

- **Action**

- Simplify the calculation. The numeric stack has 10 levels and the operator stack has 24 levels.
- Divide your calculation into two or more separate parts.

Syntax ERROR

- **Cause**

- An attempt to perform an illegal mathematical operation.

- **Action**

- Press **◀** or **▶** to display the calculation with the cursor located at the location of the error and make required corrections.

Arg ERROR

- **Cause**

- Improper use of an argument

• Action

- Press \blacktriangleleft or \blacktriangleright to display the location of the cause of the error and make required corrections.

■ Order of Operations

Calculations are performed in the following order of precedence.

- ① Coordinate transformation: Pol (x, y), Rec (r, θ)
Differentials: d/dx^*
Integrations: $\int dx^*$
Normal distribution: P(*, Q(*, R(*
- ② Type A functions:
With these functions, the value is entered and then the function key is pressed.
 $x^3, x^2, x^{-1}, x!, \circ, \prime$
Engineering symbols*
Normal distribution: $\rightarrow t^*$
 $\hat{x}, \hat{x}_1, \hat{x}_2, \hat{y}$
Angle unit conversions (DRG▶)
Metric conversions**
- ③ Powers and roots: $^{\wedge}(x^y), x^{\sqrt{\quad}}$
- ④ a^b/c
- ⑤ Abbreviated multiplication format in front of π, e (natural logarithm base), memory name, or variable name:
 $2\pi, 3e, 5A, \pi A$, etc.
- ⑥ Type B functions:
With these functions, the function key is pressed and then the value is entered.
 $\sqrt{\quad}, \sqrt[3]{\quad}, \log, \ln, e^x, 10^x, \sin, \cos, \tan, \sin^{-1}, \cos^{-1}, \tan^{-1}, \sinh, \cosh, \tanh, \sinh^{-1}, \cosh^{-1}, \tanh^{-1}, (-)$
 $d^*, h^*, b^*, o^*, \text{Neg}^*, \text{Not}^*, \text{Det}^{**}, \text{Trn}^{**}, \text{arg}^*, \text{Abs}^*, \text{Conjg}^*$
- ⑦ Abbreviated multiplication format in front of Type B functions: $2\sqrt{3}, \text{Alog}2$, etc.
- ⑧ Permutation and combination: nPr, nCr
 \angle^*
- ⑨ Dot (\cdot)**
- ⑩ \times, \div
- ⑪ $+, -$
- ⑫ and*
- ⑬ $\text{xnor}^*, \text{xor}^*, \text{or}^*$

* fx-100MS/fx-115MS/fx-570MS/fx-991MS only.

** fx-570MS/fx-991MS only.

- Operations of the same precedence are performed from right to left. $e^x \ln \sqrt{} 120 \rightarrow e^x \{ \ln(\sqrt{} 120) \}$
- Other operations are performed from left to right.
- Operations enclosed in parentheses are performed first.
- When a calculation contains an argument that is a negative number, the negative number must be enclosed within parentheses. The negative sign (–) is treated as a Type B function, so particular care is required when the calculation includes a high-priority Type A function, or power or root operations.

Example: $(-2)^4 = 16$

$$-2^4 = -16$$


■ Stacks

This calculator uses memory areas, called “stacks,” to temporarily store values (numeric stack) and commands (command stack) according to their precedence during calculations. The numeric stack has 10 levels and the command stack has 24 levels. A stack error (Stack ERROR) occurs whenever you try to perform a calculation that is so complex that the capacity of a stack is exceeded.

- Matrix calculations use up to two levels of the matrix stack. Squaring a matrix, cubing a matrix, or inverting a matrix uses one stack level. (fx-570MS, fx-991MS only)

• **Example:**

$$2 \times ((3 + 4 \times (5 + 4) \div 3) \div 5) + 8 =$$



Numeric Stack

①	2
②	3
③	4
④	5
⑤	4
⋮	

Command Stack

1	×
2	(
3	(
4	+
5	×
6	(
7	+
⋮	

- Calculations are performed in sequence according to “Order of Operations.” Commands and values are deleted from the stack as the calculation is performed.

■ Input Ranges

Internal digits: 12

Accuracy*: As a rule, accuracy is ± 1 at the 10th digit.

Functions	Input Range	
$\sin x$	DEG	$0 \leq x \leq 4.499999999 \times 10^{10}$
	RAD	$0 \leq x \leq 785398163.3$
	GRA	$0 \leq x \leq 4.999999999 \times 10^{10}$
$\cos x$	DEG	$0 \leq x \leq 4.500000008 \times 10^{10}$
	RAD	$0 \leq x \leq 785398164.9$
	GRA	$0 \leq x \leq 5.000000009 \times 10^{10}$
$\tan x$	DEG	Same as $\sin x$, except when $ x = (2n-1) \times 90$.
	RAD	Same as $\sin x$, except when $ x = (2n-1) \times \pi/2$.
	GRA	Same as $\sin x$, except when $ x = (2n-1) \times 100$.
$\sin^{-1}x$	$0 \leq x \leq 1$	
$\cos^{-1}x$		
$\tan^{-1}x$	$0 \leq x \leq 9.999999999 \times 10^{99}$	
$\sinh x$	$0 \leq x \leq 230.2585092$	
$\cosh x$		
$\sinh^{-1}x$	$0 \leq x \leq 4.999999999 \times 10^{99}$	
$\cosh^{-1}x$	$1 \leq x \leq 4.999999999 \times 10^{99}$	
$\tanh x$	$0 \leq x \leq 9.999999999 \times 10^{99}$	
$\tanh^{-1}x$	$0 \leq x \leq 9.999999999 \times 10^{-1}$	
$\log x / \ln x$	$0 < x \leq 9.999999999 \times 10^{99}$	
10^x	$-9.999999999 \times 10^{99} \leq x \leq 99.99999999$	
e^x	$-9.999999999 \times 10^{99} \leq x \leq 230.2585092$	

Functions	Input Range
\sqrt{x}	$0 \leq x < 1 \times 10^{100}$
x^2	$ x < 1 \times 10^{50}$
$1/x$	$ x < 1 \times 10^{100}; x \neq 0$
$\sqrt[3]{x}$	$ x < 1 \times 10^{100}$
$x!$	$0 \leq x \leq 69$ (x is an integer)
nPr	$0 \leq n < 1 \times 10^{10}, 0 \leq r \leq n$ (n, r are integers) $1 \leq \{n!/(n-r)!\} < 1 \times 10^{100}$
nCr	$0 \leq n < 1 \times 10^{10}, 0 \leq r \leq n$ (n, r are integers) $1 \leq [n!/\{r!(n-r)!\}] < 1 \times 10^{100}$
Pol(x, y)	$ x , y \leq 9.999999999 \times 10^{49}$ $(x^2+y^2) \leq 9.999999999 \times 10^{99}$
Rec(r, θ)	$0 \leq r \leq 9.999999999 \times 10^{99}$ θ : Same as $\sin x$
° ”	$ a , b, c < 1 \times 10^{100}$ $0 \leq b, c$
↔ ”	$ x < 1 \times 10^{100}$ Decimal ↔ Sexagesimal Conversions $0^\circ 0' 0'' \leq x \leq 999999^\circ 59'$
$\wedge(x^y)$	$x > 0: -1 \times 10^{100} < y \log x < 100$ $x = 0: y > 0$ $x < 0: y = n, \frac{1}{2n+1}$ (n is an integer) However: $-1 \times 10^{100} < y \log x < 100$
$x \sqrt{y}$	$y > 0: x \neq 0$ $-1 \times 10^{100} < 1/x \log y < 100$ $y = 0: x > 0$ $y < 0: x = 2n+1, \frac{1}{n}$ ($n \neq 0; n$ is an integer) However: $-1 \times 10^{100} < 1/x \log y < 100$
a^b/c	Total of integer, numerator, and denominator must be 10 digits or less (including division marks).
SD (REG)	$ x < 1 \times 10^{50}$ $ y < 1 \times 10^{50}$ $ n < 1 \times 10^{100}$ $x\sigma_n, y\sigma_n, \bar{x}, \bar{y}: n \neq 0$ $x\sigma_{n-1}, y\sigma_{n-1}, A, B, r: n \neq 0, 1$

- * For a single calculation, calculation error is ± 1 at the 10th digit. (In the case of exponential display, calculation error is ± 1 at the last significant digit.) Errors are cumulative in the case of consecutive calculations, which can also cause them to become large. (This is also true of internal consecutive calculations that are performed in the case of $^x(x^y)$, $^x\sqrt{y}$, $x!$, $^3\sqrt{\quad}$, nPr , nCr , etc.) In the vicinity of a function's singular point and point of inflection, errors are cumulative and may become large.

Power Supply (fx-95MS only)

Users of other models should refer to the "User's Guide 2 (Additional Functions)."


This calculator is powered by a single AA-size battery.

Replacing the Battery

Dim figures on the display of the calculator indicate that battery power is low. Continued use of the calculator when the battery is low can result in improper operation. Replace the battery as soon as possible when display figures become dim.

To replace the battery

- ① Press **SHIFT** **OFF** to turn power off.
- ② Remove the six screws that hold the back cover in place and then remove the back cover.
- ③ Remove the old battery.
- ④ Load a new battery into the unit with its positive \oplus and negative \ominus ends facing correctly.
- ⑤ Replace the back cover and secure it in place with the six screws.
- ⑥ Press **ON** to turn power on.

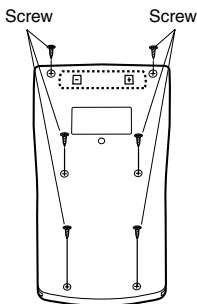

● Auto Power Off

Calculator power automatically turns off if you do not perform any operation for about six minutes. When this happens, press **ON** to turn power back on.

Specifications (fx-95MS only)

Users of other models should refer to the "User's Guide 2 (Additional Functions)."

Power Supply: Single AA-size battery (R6P (SUM-3))

Battery Life: Approximately 17,000 hours continuous display of flashing cursor.
Approximately 2 years when left with power turned off.

Dimensions: 19.5 (H) × 78 (W) × 155 (D) mm
3/4" (H) × 3 1/16" (W) × 6 1/8" (D)

Weight: 130 g (4.6 oz) including battery

Power Consumption: 0.0002 W

Operating Temperature: 0°C to 40°C (32°F to 104°F)

Important notice for fx-912MS owners

The names fx-912MS (Japan domestic model name) and fx-115MS (international model name) apply to the same model. Owners of the fx-912MS should refer to the description of fx-115MS.

CASIO®

CASIO COMPUTER CO., LTD.

6-2, Hon-machi 1-chome
Shibuya-ku, Tokyo 151-8543, Japan