Synchronous-Rectified Buck MOSFET Drivers

General Description


The RT9619/A is a high frequency, dual MOSFET driver specifically designed to drive two power N-Channel MOSFETs in a synchronous-rectified buck converter topology. This driver combined with Richtek's series of Multi-Phase Buck PWM controller form a complete corevoltage regulator solution for advanced micro-processors.

The RT9619/A drives both the lower/upper gate in a synchronous-rectifier bridge with 12V. This drive-voltage flexibility provides the advantage of optimizing applications involving trade-offs between switching losses and conduction losses.

RT9619A has longer UGATE/LGATE deadtime which can drive the MOSFETs with large gate RC value, avoiding the shoot-through phenomenon. RT9619 is targeted to drive low gate RC MOSFETs and performs better efficiency.

The output drivers in the RT9619/A can efficiently switch power MOSFETs at frequency up to 500kHz. Switching frequency above 500kHz has to take into account the thermal dissipation of SOP-8 package. RT9619/A is capable to drive a 3nF load with a 30ns rise time. RT9619/A implements bootstrapping on the upper gate with an external capacitor and an embedded diode. This reduces implementation complexity and allows the use of higher performance, cost effective N-Channel MOSFETs. Adaptive shoot-through protection is integrated to prevent both MOSFETs from conducting simultaneously.

Pin Configurations

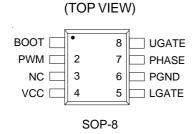


Features

- Drives Two N-Channel MOSFETs
- Adaptive Shoot-Through Protection
- Embedded Boot Strapped Diode
- Supports High Switching Frequency
- Fast Output Rise Time
- Small SOP-8 Package
- Tri-State Input for Bridge Shutdown
- Supply Under Voltage Protection
- Upper MOSFET Direct Shorted Protection
- RoHS Compliant and 100% Lead (Pb)-Free

Applications

- Core Voltage Supplies for Desktop, Motherboard CPU
- High Frequency Low Profile DC-DC Converters
- High Current Low Voltage DC-DC Converters

Ordering Information

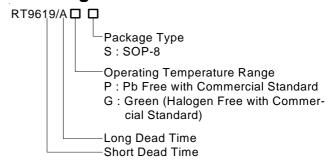


Note:

RichTek Pb-free and Green products are :

- ▶RoHS compliant and compatible with the current requirements of IPC/JEDEC J-STD-020.
- ▶Suitable for use in SnPb or Pb-free soldering processes.
- ▶100% matte tin (Sn) plating.



Typical Application Circuit

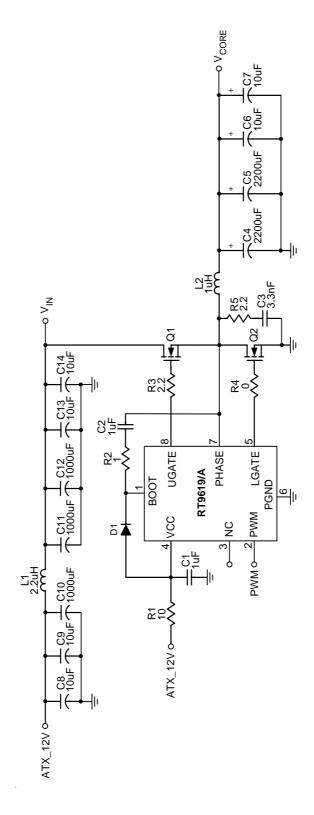


www.richtek.com




Functional Pin Description

Pin No.	Pin Name	Pin Function
1	воот	Floating bootstrap supply pin for upper gate drive.
2	PWM	Input PWM signal for controlling the driver.
3	NC	No Connection Pin.
4	VCC	+12V Supply Voltage.
5	LGATE	Lower Gate Drive Output. Connected to gate of low-side power N-Channel MOSFET.
6	PGND	Common Ground.
7	PHASE	Connected this pin to the source of the high-side MOSFET and the drain of the low-side MOSFET.
8	UGATE	Upper Gate Drive Output. Connected to gate of high-side power N-Channel MOSFET.

Function Block Diagram

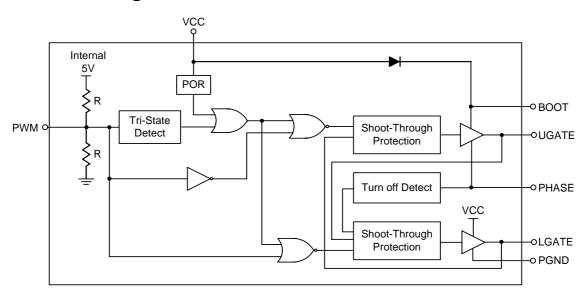

Timing Diagram

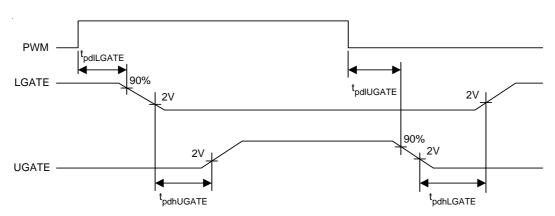



Absolute Maximum Ratings (Note 1)

Supply Voltage, V _{CC}	–0.3V to 15V
BOOT to PHASE	0.3V to 15V
BOOT to GND	
DC	0.3V to V _{CC} + 15V
< 200ns	0.3V to 42V
PHASE to GND	
DC	–5V to 15V
< 200ns	10V to 30V
• LGATE	
DC	GND $- 0.3V$ to $V_{CC} + 0.3V$
< 200ns	$-2V$ to $V_{CC} + 0.3V$
• UGATE	$V_{PHASE} - 0.3V$ to $V_{BOOT} + 0.3V$
< 200ns	$V_{PHASE} - 2V$ to $V_{BOOT} + 0.3V$
• PWM Input Voltage	GND – 0.3V to 7V
• Power Dissipation, P _D @ T _A = 25°C	
• SOP-8	0.625W
Package Thermal Resistance (Note 4)	
SOP-8, θ _{JA}	160°C/W
• Lead Temperature (Soldering, 10 sec.)	260°C
Storage Temperature Range	
ESD Susceptibility (Note 2)	
HBM (Human Body Mode)	2kV
MM (Machine Mode)	200V

Recommended Operating Conditions (Note 3)

• Supply Voltage, V _{CC}	12V ±10%
Junction Temperature Range	0°C to 125°C
Ambient Temperature Range	0°C to 70°C

Electrical Characteristics

(Recommended Operating Conditions, T_A = 25°C unless otherwise specified)

Parameter	Symbol	Test Conditions	Min	Тур	Max	Units		
V _{CC} Supply Voltage								
Power Supply Voltage	V _{CC}		7.3		13.5	V		
V _{CC} Supply Current								
Power Supply Current	I _{VCC}	V _{BOOT} = 12V, PWM = 0V		1	2.5	mA		
Power-On Reset								
POR Threshold	V _{VCCrth}	V _{CC} Rising	5.5	6.4	7.3	V		
Hysteresis	V _{VCChys}			2.2		V		

To be continued





Parameter		Symbol	Test Conditions	Min	Тур	Max	Units
PWM Input			•				
Maximum Input Current		I _{PWM}	PWM = 0V or 5V		300		μΑ
PWM Floating Voltage		V _{PWMfl}	V _{CC} = 12V		2.4		V
PWM Rising Threshold		V _{PWMrth}		3.2	3.6	3.9	V
PWM Falling Threshol	d	V_{PWMfth}		1.1	1.3	1.5	V
Timing			•				
UGATE Rise Time		t _{rUGATE}	V _{CC} = 12V, 3nF load		27	35	ns
UGATE Fall Time		t _{fUGATE}	V _{CC} = 12V, 3nF load		32	45	ns
LGATE Rise Time		t _{rLGATE}	V _{CC} = 12V, 3nF load		35	45	ns
LGATE Fall Time		t _{fLGATE}	V _{CC} = 12V, 3nF load		27	38	ns
	RT9619	t _{pdhUGATE}	V _{BOOT} – V _{PHASE} = 12V See Timing Diagram		20	-	ns
	RT9619A				90		
Propagation Delay	RT9619/A	t _{pdl} UGATE	3 3		15		
		t _{pdhLGATE}	See Timing Diagram		20		
		t _{pdlLGATE}			8		
Shutdown Window				1.5		3.2	V
Output							
UGATE Drive Source		RUGATEsr	V _{BOOT} – V _{PHASE} = 12V		1.9	3	Ω
UGATE Drive Sink		R _{UGATEsk}	V _{BOOT} – V _{PHASE} = 12V		1.4	3	Ω
LGATE Drive Source		R _{LGATEsr}	V _{CC} = 12V		1.9	3	Ω
LGATE Drive Sink		R _{LGATEsk}	V _{CC} = 12V		1.1	2.2	Ω


- **Note 1.** Stresses listed as the above "Absolute Maximum Ratings" may cause permanent damage to the device. These are for stress ratings. Functional operation of the device at these or any other conditions beyond those indicated in the operational sections of the specifications is not implied. Exposure to absolute maximum rating conditions for extended periods may remain possibility to affect device reliability.
- Note 2. Devices are ESD sensitive. Handling precaution recommended.
- **Note 3.** The device is not guaranteed to function outside its operating conditions.
- Note 4. θ_{JA} is measured in the natural convection at $T_A = 25^{\circ}C$ on a low effective thermal conductivity test board of JEDEC 51-3 thermal measurement standard.





Typical Operating Characteristics

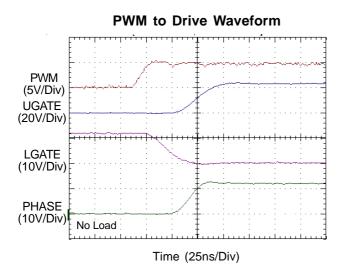


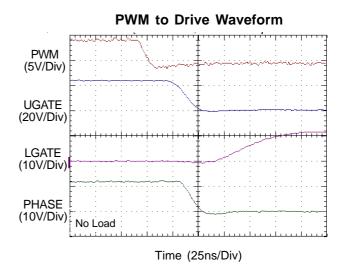

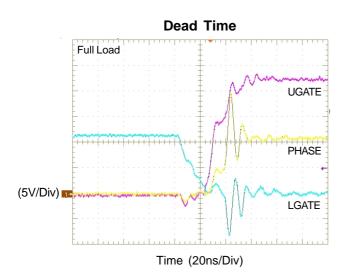


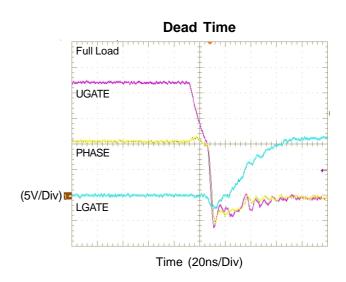


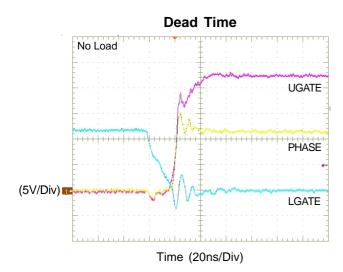

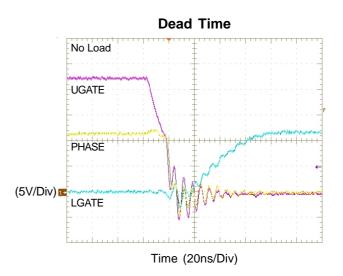



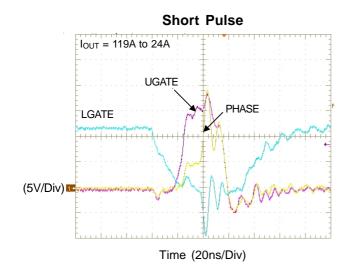

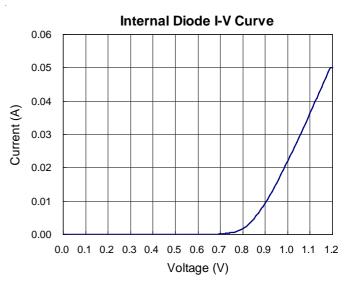



Application Information

The RT9619/A is designed to drive both high side and low side N-Channel MOSFET through externally input PWM control signal. It has power-on protection function which held UGATE and LGATE low before VCC up across the rising threshold voltage. After the initialization, the PWM signal takes the control. The rising PWM signal first forces the LGATE signal turns low then UGATE signal is allowed to go high just after a non-overlapping time to avoid shoot-through current. The falling of PWM signal first forces UGATE to go low. When UGATE and PHASE signal reach a predetermined low level, LGATE signal is allowed to turn high.

The PWM signal is acted as "High" if above the rising threshold and acted as "Low" if below the falling threshold. Any signal level enters and remains within the shutdown window is considered as "tri-state", the output drivers are disabled and both MOSFET gates are pulled and held low. If left the PWM signal floating, the pin will be kept around 2.4V by the internal divider and provide the PWM controller with a recognizable level.

The RT9619/A typically operates at frequency of 200kHz to 500kHz. It shall be noted that to place a 1N4148 or schottky diode between the VCC and BOOT pin as shown in the typical application circuit for ligher efficiency.

Non-overlap Control

To prevent the overlap of the gate drives during the UGATE turn low and the LGATE turn high, the non-overlap circuit monitors the voltages at the PHASE node and high side gate drive (UGATE-PHASE). When the PWM input signal goes low, UGATE begins to turn low (after propagation delay). Before LGATE can turn high, the non-overlap protection circuit ensures that the monitored voltages have gone below 1.2V. Once the monitored voltages fall below 1.2V, LGATE begins to turn high. For short pulse condtion, if the PHASE pin had not gone high after LGATE turns low, the LGATE has to wait for 200ns before turn high. By waiting for the voltages of the PHASE pin and high side gate drive to fall below 1.2V, the non-overlap protection circuit ensures that UGATE is low before LGATE turns high.

Also to prevent the overlap of the gate drives during LGATE turn low and UGATE turn high, the non-overlap circuit monitors the LGATE voltage. When LGATE go below 1.2V, UGATE is allowed to go high.

Driving Power MOSFETs

The DC input impedance of the power MOSFET is extremely high. When V_{gs} at 12V (or 5V), the gate draws the current only few nano-amperes. Thus once the gate has been driven up to "ON" level, the current could be negligible.

However, the capacitance at the gate to source terminal should be considered. It requires relatively large currents to drive the gate up and down 12V (or 5V) rapidly. It also required to switch drain current on and off with the required speed. The required gate drive currents are calculated as follows.

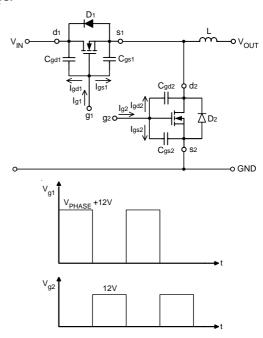


Figure 1. Equivalent Circuit and Associated Waveforms

In Figure 1, the current I_{g1} and I_{g2} are required to move the gate up to 12V. The operation consists of charging C_{gd} and C_{gs} . C_{gs1} and C_{gs2} are the capacitances from gate to source of the high side and the low side power MOSFETs, respectively. In general data sheets, the C_{gs} is referred as " C_{iss} " which is the input capacitance. C_{gd1} and C_{gd2} are the capacitances from gate to drain of the high side and the

low side power MOSFETs, respectively and referred to the data sheets as " C_{rss} " the reverse transfer capacitance. For example, t_{r1} and t_{r2} are the rising time of the high side and the low side power MOSFETs respectively, the required current I_{gs1} and I_{gs2} are showed below:

$$I_{gs1} = C_{gs1} \frac{dVg1}{dt} = \frac{C_{gs1} \times 12}{t_{r1}}$$
 (1)

$$I_{gs2} = C_{gs1} \frac{dVg2}{dt} = \frac{C_{gs1} \times 12}{t_{r2}}$$
 (2)

Before driving the gate of the high side MOSFET up to 12V (or 5V), the low side MOSFET has to be off; and the high side MOSFET is turned off before the low side is turned on. From Figure 1, the body diode " D_2 " had been turned on before high side MOSFETs turned on.

$$I_{gd1} = C_{gd1} \frac{dV}{dt} = C_{gd1} \frac{12V}{t_{r1}}$$
 (3)

Before the low side MOSFET is turned on, the C_{gd2} have been charged to V_{IN} . Thus, as C_{gd2} reverses its polarity and g_2 is charged up to 12V, the required current is

$$I_{gd2} = C_{gd2} \frac{dV}{dt} = C_{gd2} \frac{Vi + 12V}{t_{r2}}$$
 (4)

It is helpful to calculate these currents in a typical case. Assume a synchronous rectified buck converter, input voltage $V_{IN}=12V$, $V_{g1}=V_{g2}=12V$. The high side MOSFET is PHB83N03LT whose $C_{iss}=1660pF$, $C_{rss}=380pF$, and $t_r=14ns$. The low side MOSFET is PHB95N03LT whose $C_{iss}=2200pF$, $C_{rss}=500pF$ and $t_r=30ns$, from the equation (1) and (2) we can obtain

$$I_{gs1} = \frac{1660 \times 10^{-12} \times 12}{14 \times 10^{-9}} = 1.428 \text{ (A)}$$

$$I_{gs2} = \frac{2200 \times 10^{-12} \times 12}{30 \times 10^{-9}} = 0.88 \quad (A)$$
 (6)

from equation. (3) and (4)

$$I_{gd1} = \frac{380 \times 10^{-12} \times 12}{14 \times 10^{-9}} = 0.326 \text{ (A)}$$
 (7)

$$I_{gd2} = \frac{500 \times 10^{-12} \times (12 + 12)}{30 \times 10^{-9}} = 0.4 \quad (A)$$

the total current required from the gate driving source is

$$I_{g1} = I_{gs1} + I_{gd1} = (1.428 + 0.326) = 1.754$$
 (A) (9)

$$l_{g2} = l_{gs2} + l_{gd2} = (0.88 + 0.4) = 1.28 \text{ (A)}$$
 (10)

By a similar calculation, we can also get the sink current required from the turned off MOSFET.

Select the Bootstrap Capacitor

Figure 2 shows part of the bootstrap circuit of RT9619/A. The V_{CB} (the voltage difference between BOOT and PHASE on RT9619/A) provides a voltage to the gate of the high side power MOSFET. This supply needs to be ensured that the MOSFET can be driven. For this, the capacitance C_B has to be selected properly. It is determined by following constraints.

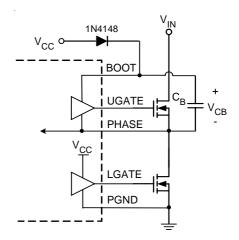


Figure 2. Part of Bootstrap Circuit of RT9619/A

In practice, a low value capacitor C_B will lead the overcharging that could damage the IC. Therefore to minimize the risk of overcharging and reducing the ripple on V_{CB} , the bootstrap capacitor should not be smaller than $0.1\mu F$, and the larger the better. In general design, using $1\mu F$ can provide better performance. At least one low-ESR capacitor should be used to provide good local de-coupling. Here, to adopt either a ceramic or tantalum capacitor is suitable.

Power Dissipation

For not exceeding the maximum allowable power dissipation to drive the IC beyond the maximum recommended operating junction temperature of 125°C, it is necessary to calculate power dissipation appro-priately.



This dissipation is a function of switching frequency and total gate charge of the selected MOSFET. Figure 3 shows the power dissipation test circuit. C_L and C_U are the UGATE and LGATE load capacitors, respectively. The bootstrap capacitor value is $1\mu F$.

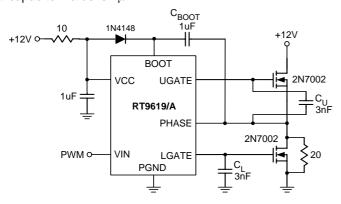


Figure 3. Test Circuit

Figure 4 shows the power dissipation of the RT9619/A as a function of frequency and load capacitance. The value of the C_U and C_L are the same and the frequency is varied from 100kHz to 1MHz.

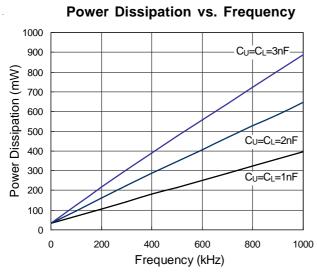


Figure 4. Power Dissipation vs. Frequency

The operating junction temperature can be calculated from the power dissipation curves (Figure 4). Assume VCC=12V, operating frequency is 200kHz and the C_U=C_L=1nF which emulate the input capacitances of the high side and low side power MOSFETs. From Figure 4, the power dissipation is 100mW. For RT9619/A, the package thermal resistance θ_{JA} is 160°C/W, the operating junction temperature is calculated as :

$$T_J = (160^{\circ}C/W \times 100mW) + 25^{\circ}C = 41^{\circ}C$$
 (11)

where the ambient temperature is 25°C.

The method to improve the thermal transfer is to increase the PCB copper area around the RT9619/A first. Then, adding a ground pad under IC to transfer the heat to the peripheral of the board.

Over-Voltage Protection Function at Power-On

An unique feature of the RT9619/A driver is the addition of over-voltage protection in the event of upper MOSFET direct shorted before power-on. The RT9619/Adetects the fault condition during initial start-up, the internal power-on OVP sense circuitry will rapidly drive the output lower MOSFET on before the multi-phase PWM controller takes control.

Figure 5 shows the measured waveforms with the high side MOSFET directly shorted to 12V.

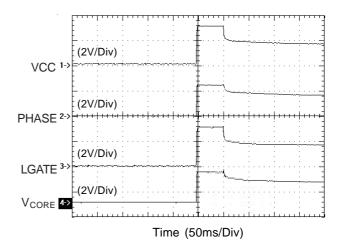


Figure 5. Waveforms at High Side MOSFET Shorted

Please note that the VCC trigger point to RT9619/A is at 3V, and the clamped level on PHASE pin is at about 2.4V. Obviously since the PHASE pin voltage increases during initial start-up, the V_{CORE} increases correspondingly, but it would quickly drop-off followed by LGATE and VCC decreased.

Layout Consideration

Figure 6 shows the schematic circuit of a two-phase synchronous buck converter to implement the RT9619/A. The converter operates from 5V to 12V of $V_{\rm IN}$.

www.richtek.com DS9619/A-04 March 2007

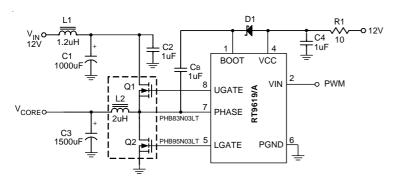



Figure 6. Two-Phase Synchronous Buck Converter Circuit

When layout the PCB, it should be very careful. The power-circuit section is the most critical one. If not configured properly, it will generate a large amount of EMI. The junction of Q1, Q2, L2 should be very close.

Next, the trace from UGATE, and LGATE should also be short to decrease the noise of the driver output signals. PHASE signals from the junction of the power MOSFET, carrying the large gate drive current pulses, should be as heavy as the gate drive trace. The bypass capacitor C4 should be connected to PGND directly. Furthermore, the bootstrap capacitors (C_B) should always be placed as close to the pins of the IC as possible.



Outline Dimension

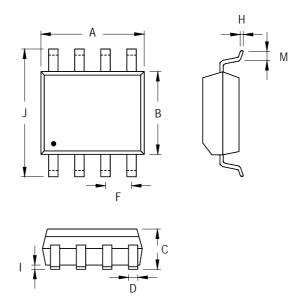

Cumbal	Dimensions I	n Millimeters	Dimensions In Inches		
Symbol	Min	Max	Min	Max	
А	4.801	5.004	0.189	0.197	
В	3.810	3.988	0.150	0.157	
С	1.346	1.753	0.053	0.069	
D	0.330	0.508	0.013	0.020	
F	1.194	1.346	0.047	0.053	
Н	0.170	0.254	0.007	0.010	
I	0.050	0.254	0.002	0.010	
J	5.791	6.200	0.228	0.244	
М	0.400	1.270	0.016	0.050	

8-Lead SOP Plastic Package

Richtek Technology Corporation

Headquarter

5F, No. 20, Taiyuen Street, Chupei City

Hsinchu, Taiwan, R.O.C.

Tel: (8863)5526789 Fax: (8863)5526611

Richtek Technology Corporation

Taipei Office (Marketing)

8F, No. 137, Lane 235, Paochiao Road, Hsintien City

Taipei County, Taiwan, R.O.C.

Tel: (8862)89191466 Fax: (8862)89191465

Email: marketing@richtek.com