

# R2J20702NP

# Peak Current Mode Synchronous Buck Controller with Power MOS FETs

REJ03G1782-0401 Rev.4.01 Jun 17, 2010

#### **Description**

This all-in-one SiP for POL (point-of-load) applications is a multi-chip module incorporating a high-side MOS FET, low-side MOS FET, and PWM controller in a single QFN package. The on and off timing of the power MOS FET is optimized by the built-in driver circuit, making this device suitable for large-current high-efficiency buck converters.

In a simple peak-current mode topology, stable operation is obtained in a closed power loop, and a fast converter is easily realized with the addition of simple components. Furthermore, the same topology can be applied to realize converters for parallel synchronized operation with current sharing, and two-phase operation.

The package also incorporates a high-side bootstrap Schottky barrier diode (SBD), eliminating the need for an external SBD for this purpose.


#### **Features**

- Three chips in one package for high-efficiency and space saving
- Large average output current (40 A)
- Wide input voltage range: 8 to 14 V
- 0.6 V reference voltage accurate to within 1%
- Wide programmable switching frequency: 200 kHz to 1 MHz
- Fast response by peak-current-mode topology.
- Simple current sharing (up to five modules in parallel)
- Two-phase operation in parallel operation
- Built-in SBD for boot strapping
- On/off control
- · Hiccup operation under over load condition
- Tracking function
- Thin small package: 56-pin QFN (8 mm × 8 mm)
- Terminal Pb-free/Halogen-free


#### **Applications**

- Network equipment
- Telecommunications equipment
- Servers
- POL modules


#### **Typical Characteristic Curve**

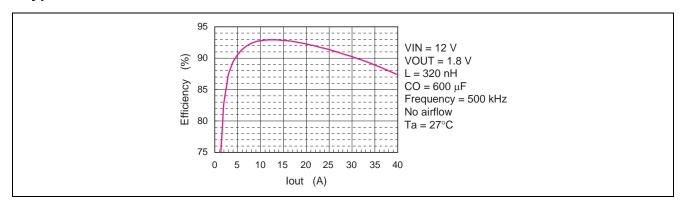


# **Application Circuit Example**

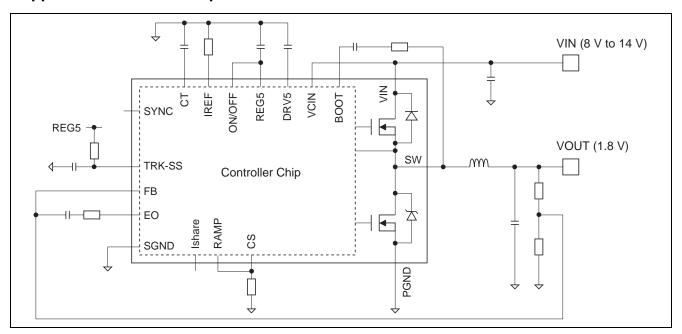

# **Block Diagram**

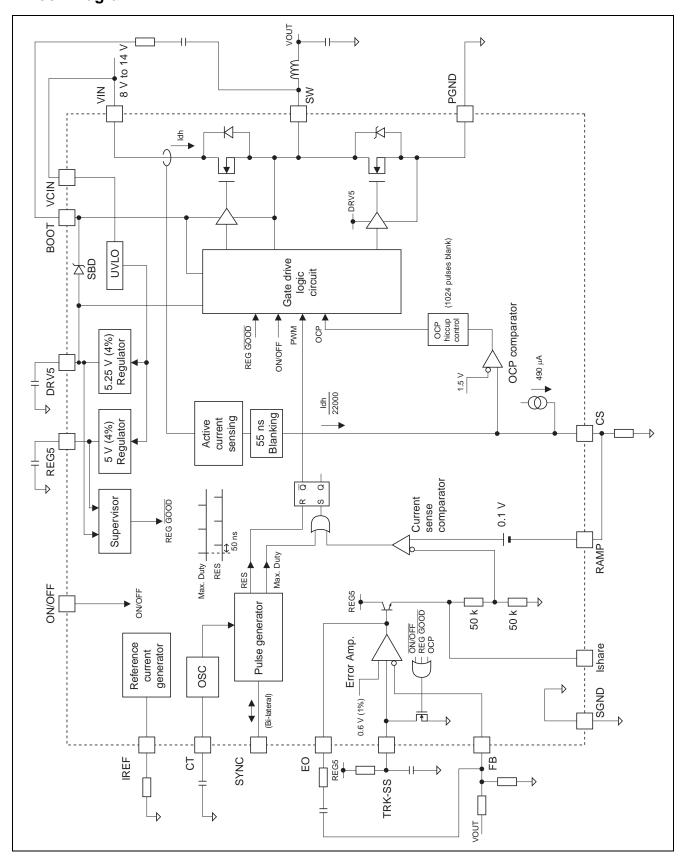

#### **Pin Arrangement**

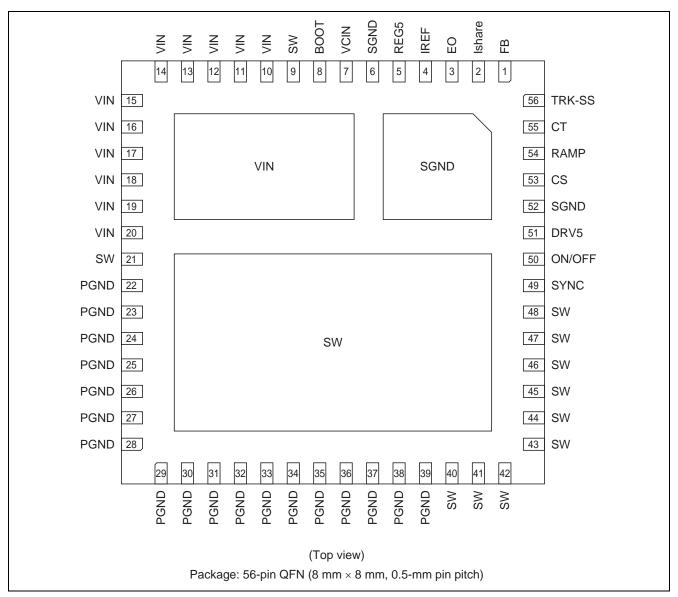

Note: All die-pads (three pads in total) should be soldered to PCB.

# **Pin Description**

Pin Name	Pin No.	Description	Remarks		
VIN	10 to 20	Input voltage for the buck converter.			
SW	9, 21, 40 to 48	Switching node. Connect a choke coil between the SW pin and dc output node of the converter.			
PGND	22 to 39	Ground of the power stage.	Should be externally connected to SGND.		
SGND	6, 52	Ground of the IC chip.	Should be externally connected to PGND.		
VCIN	7	Input voltage for the control circuit.	Should be externally connected to VIN.		
BOOT	8	Bootstrap voltage pin. A bootstrap capacitor should be connected between the BOOT and SW pin.	To be supplied +5 V through the internal SBD.		
REG5	5	+5 V logic power-supply output.	Requires decoupling from the GND plane by a capacitance 0.1 µF.		
ON/OFF	50	Signal disable pin.	Disabled when ON/OFF pin is in the low state.		
IREF	4	Reference current generator for the IC.	Should be connected via 27 k $\Omega$ to the SGND pin.		
СТ	55	Timing capacitor pin for the oscillator. This pin has a select function for operation in slave mode.	If the pin voltage is <1 V or >4 V, the IC operates in slave mode.		
SYNC	49	I/O pin for synchronous operation.			
TRK-SS	56	Start-up timing control input.			
FB	1	Feedback voltage input for the closed loop.	When IC works as a slave module in multiphase power supply, FB pin should connected to REG5 pin.		
EO	3	Error amplifier output pin.	Requires connection to an RC circuit for loop compensation.		
Ishare	2	For current-sharing bus.	Simply connect the Ishare pins of all devices to get balanced current.		
RAMP	54	RAMP signal input pin for peak current mode PWM control.			
CS	53	Current output pin of active current sensing circuit.	Appropriate resistance is required between CS and the GND plane.		
DRV5	51	+5.25 V generator output for driving power MOS FETs.	Requires decoupling from the GND plane by a capacitance from 0.1 $\mu F$ to 1.0 $\mu F$ .		


# **Absolute Maximum Ratings**

 $(Ta = 25^{\circ}C)$ 

Item	Symbol	Rating	Unit	Note
Power dissipation	Pt(25)	25	W	1
	Pt(110)	8	]	1
Average output current	lout	40	Α	
Input voltage	Vin (dc), Vcin (dc)	-0.3 to +16	V	2
	Vin (ac), Vcin (ac)	20		2, 4
Switch node voltage	Vsw (dc)	16	V	2
	Vsw (ac)	20		2, 4
BOOT pin voltage	Vboot (dc)	22	V	2
	Vboot (ac)	25		2, 4
ON/OFF pin voltage	Von/off	-0.3 to VIN	V	2
SYNC pin voltage	Vsync	-0.3 to +5.5	V	2
Voltage on other pins	Vic	-0.3 to (REG5 + 0.3)	V	2
REG5 current	Ireg5	-10 to 0	mA	3
Ishare current	Ishare	-500 to 0	μΑ	3
TRK-SS dc current	ltrk	0 to 1	mA	3
IREF current	Iref	-120 to 0	μΑ	3
EO sink current	leo	0 to 2	mA	3
Operating junction temperature	Tj-opr	-40 to +150	°C	
Storage temperature	Tstg	-55 to +150	°C	

Notes: 1. Pt(25) represents a PCB temperature of 25°C, and Pt(110) represents 110°C.

- 2. Rated voltages are relative to voltages on the SGND and PGND pins.
- 3. For rated current, (+) indicates inflow to the chip and (-) indicates outflow.
- 4. Ratings for which "ac" is indicated are limited to within 100 ns.

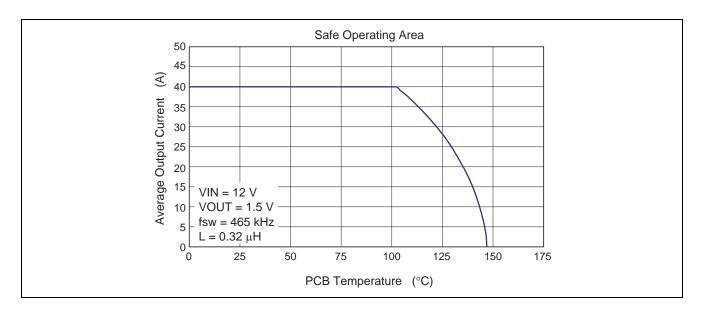

# **Electrical Characteristics**

(Ta = 25°C, VIN = VCIN = 12 V, unless otherwise specified)

Item		Symbol	Min	Тур	Max	Unit	Test Conditions
Supply	VIN start threshold	VH	6.8	7.2	7.6	V	
	VIN shutdown threshold	VL	6.45	6.85	7.25	V	
	UVLO hysteresis	dUVL	_	0.35 * <sup>1</sup>	_	V	
	Input bias current	lin	20	50	80	mA	CT = 68 pF, Duty cycle = 50%
	Input shutdown current	Isd	1.3	2.3	3.3	mA	On/off = 0 V
5-V	Output voltage	Vreg	4.8	5.0	5.2	V	
regulator	Line regulation	Vreg-line	<b>-</b> 5	0	+5	mV	VIN = 10 to 16 V
	Load regulation	Vreg-load	-8	-3	+2	mV	Ireg = 0 to 10 mA
5.25-V regulator	Output voltage	Vdrv	5.04	5.25	5.46	V	
Remote	Disable threshold	Voff	1.0	1.3	1.6	V	
On/off	Enable threshold	Von	2.0	2.5	3.0	V	
	Input current	Ion/off	0.5	2.0	5.0	μΑ	Von/off = 1 V
Reference current generator	IREF pin voltage	VIref	2.6	2.7	2.8	V	Riref = 27 k $\Omega$
Oscillator	CT oscillating frequency	Fct	_	930 * <sup>1</sup>	_	kHz	CT = 68 pF
	SW switching frequency	Fsw	418	465	512	kHz	CT = 68 pF
	CT higher trip voltage	Vhct	_	3 * <sup>1</sup>	_	V	CT = 68 pF
	CT lower trip voltage	Vlct	_	2 *1	_	V	CT = 68 pF
	CT source current	lct-src	-176	-160	-144	μΑ	CT = 1.5 V
	CT sink current	lct-snk	144	160	176	μΑ	CT = 3.5 V
	CT threshold for two- phase operation	Vct-two	3.6	4.0	4.4	V	
	CT threshold for synchronous operation	Vct-one	0.8	1.0	1.2	V	
SYNC and	SYNC frequency	Fsync	418	465	512	kHz	CT = 68 pF
pulse	SYNC high voltage	Vh-sync	4.0	5.0	_	V	Rsync = 51 k $\Omega$ to GND
generator	SYNC low voltage	VI-sync	0	_	1.0	V	Rsync = 51 k $\Omega$ to REG5
	SYNC input threshold	Vsync	1.0	2.0	3.0	V	CT = 0 V or 5 V
Error	Feedback voltage	Vfb	594	600	606	mV	TRK-SS = 1 V
amplifier	Input bias current	Ifb	-0.1	0	+0.1	μΑ	FB = 0.6 V
	Output source current	lo-src	150	200	250	μΑ	EO = 4 V, FB = 0 V
	Output sink transient current	lo-snk	5.0	10.6	19.0	mA	EO = 1 V, FB = 1 V
	Voltage gain	Av	_	80 * <sup>1</sup>	_	dB	
	Band width	BW	_	15 * <sup>1</sup>	_	MHz	
	Resistance connected to the Ishare pin	Rshare	70	100	130	kΩ	EO = 0 V. Ishare = 1 V

Note: 1. These are reference values for design and have not been 100% tested in production.

 $(Ta = 25^{\circ}C, VIN = VCIN = 12 V, unless otherwise specified)$ 

Item		Symbol	Min	Тур	Max	Unit	Test Conditions
Current	CS current ratio	Idh/Ics	_	22000 * <sup>1</sup>	_	_	
sense	Leading edge blanking time	TLD	_	55 * <sup>1</sup>	_	ns	
	CS comparator delay to output	Td-cs	_	50 * <sup>1</sup>	-	ns	
	OCP comparator threshold on CS pin	Vocp	1.43	1.5	1.57	V	
	Hiccup interval	Тоср	1.98	2.20	2.42	ms	CT = 68 pF
	RAMP offset voltage	Vramp-dc	79	94	109	mV	
	CS offset current	Ics-dc	_	490 * <sup>1</sup>	_	μА	CS = 0 V

Note: 1. These are reference values for design and have not been 100% tested in production.

#### **Description of Operation**

#### **Peak Current Control**

The control IC operates in a current-programmed control mode, in which the output of the converter is controlled by the choice of the peak current from the high-side MOS FET. The current from this MOS FET is sensed by an active current-sensing circuit (ACS), the output current of which is 1/22000 (54 ppm) of the MOS FET current. The ACS current is then converted to a certain voltage by the external resistor on the CS pin. The CS voltage is fed to the RAMP pin by an external connection, then compared with the current-control signal which is determined from the error amplifier output voltage (EO) via an NPN transistor and resistor network.

To start with, the RES pulse from the pulse generator resets a latch, then the high-side MOS FET is turned on. The latch output (Q bar) is toggled when the voltage on RAMP reaches the level of the current-control signal on EO, the high-side MOS FET is turned off, and the low-side MOS FET is turned off after a certain dead-time interval. The IC remains in this state until the arrival of the next RES pulse.

Since current information is used in the control loop, loop compensation design for the converter is simple and easy.

#### **Maximum Duty-Cycle Limitation**

If the current-sense comparator output is not toggled 50-ns prior to the arrival of the next RES pulse, an internal maximum duty pulse is generated and forces toggling of the SR latch. So, the duty cycle of the high-side MOS FET is limited by the maximum duty period.

The maximum duty period of the high-side MOS FET depends on its switching frequency.

Maximum duty period =  $1 - 50 \text{ ns} \times \text{Fsw}$ 

#### **OCP Hiccup Operation**

Once the voltage of CS exceeds 1.5 V, OCP hiccup circuit disables switching operation of the IC and MOS FETs.

Internal circuitry also pulls the TRK-SS pin down to SGND. The IC is turned off for a period of 1024 RES pulses; after this has elapsed, switching operation of the IC is restarted from the soft-start state.

#### **UVLO and On/off Control**

When VIN (=Vcin) is below the start-up voltage, that is, is in the UVLO condition, functioning of the IC is disabled. The oscillator is turned off, both high- and low-side MOS FETs are turned off, and the TRK-SS pin is pulled down.

Furthermore, if the ON/OFF pin is in the low state or left open, functioning of the IC is disabled and both MOS FETs are turned off.

#### Relationship between FB Pin and a Pull-down MOS FET on TRK-SS Pin

When R2J20702NP works as a slave module in a multi-phase power supply, FB pin should be connected to REG5 pin. In this case, the pull-down MOS FET on TRK-SS pin does not be turned on.

#### **Oscillator and Pulse Generator**

The frequency of oscillation is set by the value of the external capacitor connected to the CT pin. This frequency is twice as high as the actual switching frequency. The frequencies are determined by the following equations:

Oscillator frequency; Fct = 160  $\mu$ A / {2 × (CT(F) + 18 pF) × 1 V} (in Hz)

Switching frequency;  $Fsw = 0.5 \times Fct$  (Hz)

When the chip is operating in standalone mode or as the master chip for parallel operation, it requires a capacitor on the CT pin. In this case, the SYNC pin outputs a synchronization signal with a frequency of Fsw.

In operation as a slave chip, the CT pin must be connected to SGND or REG5, after which it acts as an input pin for the synchronized operation by external clock. The internal circuit is synchronized its rising edge when CT<0.8 V, falling edge when CT>4.4 V. In two-phase operation in parallel configuration, the CT pin should be at a voltage over 4.4 V.

	Mode					
Item	Standalone	Master	Slave -0°	Slave –180°		
CT pin	Has a cap.	Has a cap.	< 0.8 V	> 4.4 V		
SYNC pin	Output mode	Output mode	Input mode	Input mode		
Synchronizing trigger	_	_	Rising	Falling		

The internal RES pulse and maximum duty-cycle-control pulses are produced from the signal at half the oscillator frequency in standalone and master operating modes. In slave mode, internal pulses are produced from the externally supplied input signal on the SYNC pin.

#### **Current Sharing**

It is easy to obtain balanced-current operation in a parallel configuration due to the application of peak current control.

To obtain current-sharing operation, simply tie the buffered error-amplifier outputs of all of the devices (Ishare pins) together.

No more than five devices can operate in parallel.

#### **Soft Start**

Both simple soft starting and tracking start-up can be realized with the setup of the TRK-SS pin provided for soft-starts. The error amplifier has three inputs, two of which are designed to give priority to low-level non-inverting inputs for the amplifier. All that is required to realize soft-start operation is to simply attach an RC charging circuit to the TRK-SS pin.


The soft-start period is determined by the following equation, with C and R as the values for the RC charging circuit attached to the TRK-SS pin.

$$Tss = -C \cdot R \cdot Ln (1 - 0.6 \text{ V / REG5}) \quad (s)$$

# **Application Example**


#### **Start-up Settings**

Case 1) Standalone or master chip in parallel operation
With the RC network on the TRK-SS pin, the voltage on the pin should ramp up slowly.

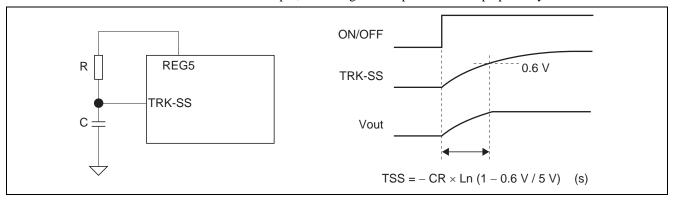

Case 2) Coincident tracking


The TRS-SS signal for channel two is the voltage from Vout1 after division by a resistor network. Vout1 must be greater than Vout2. Cross-talk is not generated between the channels.

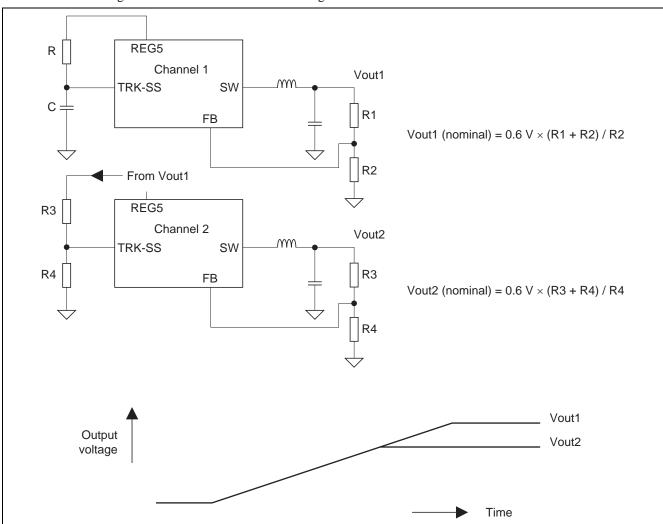

R2J20702NP Target Specification

Case 3) Retiometric tracking
The TRS-SS of channel two is tied to TRK-SS of channel 1.


No cross talk is observed between the channels.

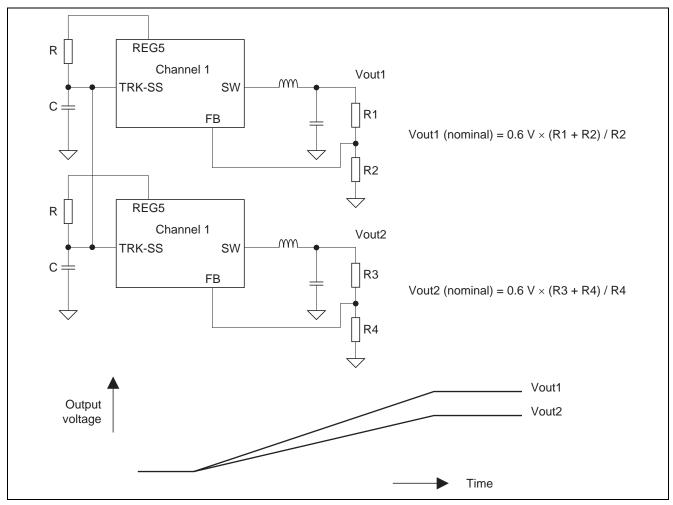

R2J20702NP Target Specification

#### Case 4) Current sharing or two-phase operation

In the case of master–slave operation, the TRK-SS pin on the master device should be attached to an RC network for soft starts. TRK-SS pins of slave devices should be tied to the master's TRK-SS pin. The error amplifiers on the slave devices can be disabled by pulling up the corresponding FB pins to REG5, and the slave devices do not require loop-compensation networks.

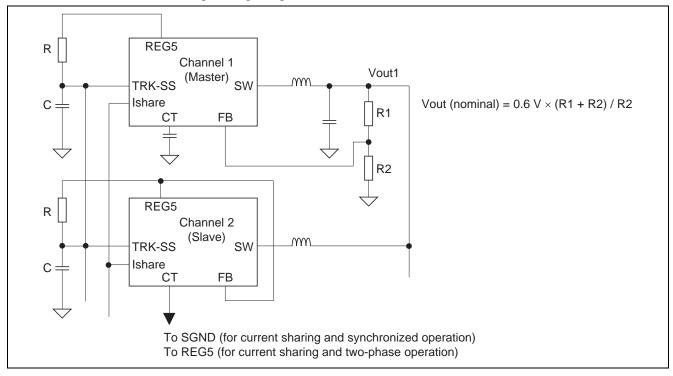

#### Choice of The Resistance of CS Pin

The CS pin is a current-output pin. A current 1/22000 of that of the high-side MOS FET flows through this pin, which also has a dc current offset of  $490 \,\mu\text{A}$ . The converter's maximum current is determined by the voltage on the CS pin, i.e.  $1.5 \, \text{V}$ , and by the value of the external resistor attached to this pin. The resistance is determined as shown below.

Current through the choke coil is

$$ILpp = (Vin - Vout) \times Vout / (L \times Vin \times Fsw) = 8.5 A (p-p)$$

Peak choke current is the current when Io is at its maximum, i.e.

$$Ilmax = Io(max) + 0.5 \times ILpp = 30A + 4.25A = 34.25 A$$

Maximum CS pin output current is;

$$lcsmax = llmax / 22000 + lcs-dc = 34.25 A / 22000 + 490 \mu A = 2.047 mA$$

The ideal resistance for attachment to the CS pin is


RCS = Vcl / lcsmax =1.5 V / 2.047 mA = 733 
$$\Omega$$

Therefore choose 750  $\Omega$  as the value of the resistor for attachment to the CS pin.

#### **Output Voltage Setting**

The error amplifier of the device has an accurate 0.6 V reference voltage. Feedback thus leads to a voltage of about 0.6 V on the FB pin once the converter system has stabilized, so the output voltage is


Vout = 
$$0.6 \text{ V} \times (\text{R1 + R2}) / \text{R2}$$

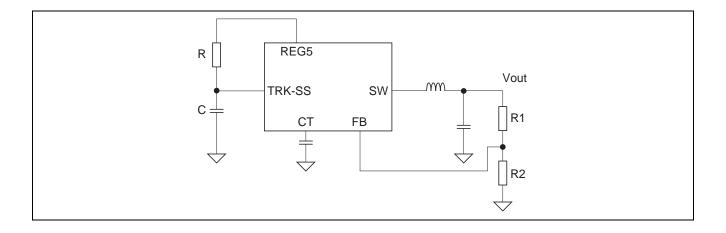

#### **Loop Compensation**

Peak-current control makes design in terms of phase margins easier than is the case with voltage control. This is because of differences between the characteristics of the PWM modulator and power stage in the two methods.

Figures 1 and 2 show the behavior of the PWM modulator and power stage in the cases of voltage control and peak current control, respectively.

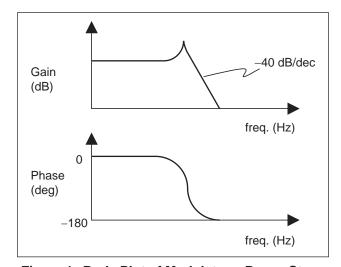

Gain (dB)

-20 dB/dec

freq. (Hz)

Phase (deg) -90

-180

freq. (Hz)

Figure 1 Bode Plot of Modulator + Power Stage (Voltage Mode)

Figure 2 Bode Plot of Modulator + Power Stage (Peak Curent Mode)

Feed-forward current to the modulator in the case of peak-current control means that the system is single pole, so we see a  $-20 \, \text{dB/decade}$  cutoff and phase margin of  $90^\circ$  in the Bode plot. In voltage control, the system configures a two-pole pole system. That is why rather complicated loop compensation of the error amplifier is required, such as type-III compensation.

The design of effective compensation is thus much simpler in the case of peak-current control (refer to figure 3).

Figure 3 Error Amplifier Compensation

Design example

Specification: L=360 nH, Co=600  $\mu F$ , Fsw=500 kHz, Vin=12 V, Vout=1.8 V, R1=2 k $\Omega$ , RCS=750  $\Omega$ 

1. Flat-band gain of error amplifier

The flat-band gain is; Af = Rf / (R1 // R2) / 
$$2 \times \{R2 / (R1 + R2)\}$$
  
Hence, Rf =  $2 \times Af \times R1 \dots (1)$ 

In the Bode plot, the total gain should be less than 1 (0 dB) at the switching frequency.

The total gain at Fsw (= Asw) depends on the flat-band gain, so Af should be expressed as follows.

Af = Asw 
$$\times$$
 2  $\pi$   $\times$  Fsw  $\times$  Co  $\times$  RCS / Nt .....(2)  
Here, Nt = Idh / Ics = 22000

In the typical way, the value chosen for Asw is in the range from 0.1 to 0.5, since this produces a stable control loop. The transient response will be faster if a larger Asw is adopted ,but the system might be unstable. We choose 0.25 for Asw in the example below.

Af = 
$$0.25 \times 2 \pi \times 500 \text{ kHz} \times 600 \mu\text{F} \times 750 \Omega / 22000 = 16.06$$
  
Rf =  $2 \times 16.06 \times 2 \text{ k}\Omega = 64.240 \text{ k}\Omega$ 

Therefore, we select a value of  $62 \text{ k}\Omega$  for Rf.

2. Selecting the Cf value to determine the frequency of the zero

The frequency of the zero established by Cf and Rf is about ten times the frequency of the pole for the power stage and modulator.

We must start with the dc gain of the power stage and modulator.

$$A0 = \frac{2 \times Nt / RCS \times L \times Vin \times Fsw}{SQRT \{Vin^2 - 8 \times L \times Vin \times Fsw \times (VCS0 \times Nt / RCS)\}} \quad .....(3)$$

Here VCS0 is the peak ac voltage on the CS pin when the load current is zero, thus

VCS0 = 
$$0.5 \times RCS \times (Vin - Vout) \times Vout / (L \times Vin \times Fsw) / 22000 \dots (4)$$
  
=  $0.5 \times 750 \Omega \times (12 \text{ V} - 1.8 \text{ V}) \times 1.8 \text{ V} / (360 \text{ nH} \times 12 \text{ V} \times 500 \text{ kHz}) / 22000$   
=  $0.145 \text{ V}$ 

$$0 = \frac{2 \times \text{Nt / RCS} \times \text{L} \times \text{Vin} \times \text{Fsw}}{\text{SQRT {Vin}^2 - 8} \times \text{L} \times \text{Vin} \times \text{Fsw} \times (\text{VCS0} \times \text{Nt / RCS})} \dots (3)$$

$$= \frac{2 \times 22000 / 750 \Omega \times 360 \text{ nH} \times 12 \text{ V} \times 500 \text{ kHz}}{\text{SQRT {12 V}^2 - 8} \times 360 \text{ nH} \times 12 \text{ V} \times 500 \text{ kHz} \times (0.145 \text{ V} \times 22000 / 750 \Omega)}$$

$$= \frac{126.72}{\text{SQRT {70.502}}}$$

$$= 15.092$$

The frequency of the pole established by the power stage and modulator is

$$F0 = Nt / (2 \pi \times Co \times RCS \times A0) \dots (5)$$

Thus,

F0 = 22000 / (2 
$$\pi \times 600 \mu F \times 750 \Omega \times 15.092$$
) = 516 kHz

Therefore, the frequency of the zero established by Cf and Rf is

Fzero = 
$$10 \times F0 = 5.16 \text{ kHz}$$

Cf = 
$$(2 \pi \times Fzero \times Rf)^{-1}$$
 =  $(2 \pi \times 5.16 \text{ kHz} \times 62 \text{ k}\Omega)^{-1}$  = 497 pF

Therefore, we select the value 510 pF for Cf.

Basically, the transient response is faster when Cf is smaller, but too small a value will make the system-loop unstable.

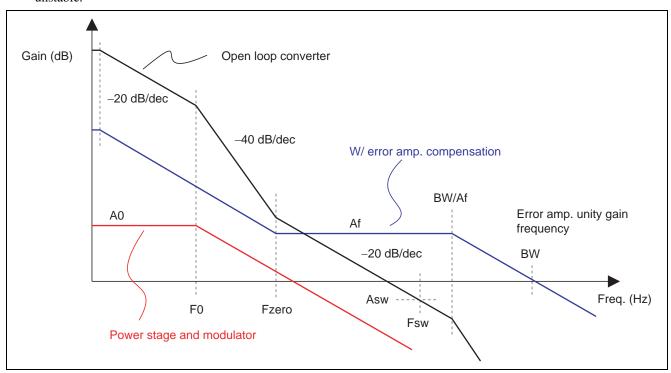



Figure 4

#### Study of Vout Accuracy

The nominal output voltage is calculated as

$$Vout = VFB \times (R1 + R2) / R2 \dots (6)$$

Here, the typical feedback voltage is 0.6 V.

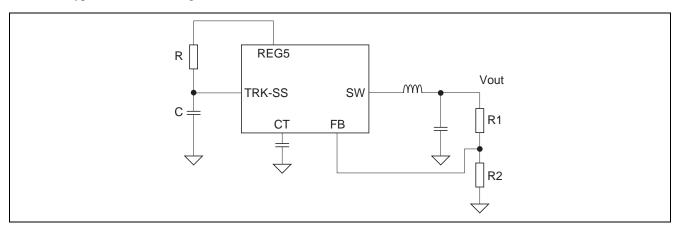

The accuracy of Vout is strongly dependent on the variation of VFB, R1 and R2. VFB has a variation of 1% and resistance intrinsically has a certain variation. When we take the variation in resistance into account, equation (6) is extended to produce equation (7).

$$Vout = \frac{R1 \times K1 + R2 \times K2}{R2 \times K2} \times VFB$$
$$= \frac{R1 \times K1 / K2 + R2}{R2} \times VFB \dots (7)$$

Here, K1 and K2 are coefficients. Both are 1.00 in the ideal case.

By equation (6), R1 is chosen as

$$R1 = \left[\frac{\text{Vout (typical)}}{\text{VFB (typical)}} - 1\right] \times R2 \qquad \dots (8)$$

Substituting this expression for R1 into equation (7) yields the following.

Vout = VFB 
$$\times \left\{ \left[ \frac{\text{Vout (typical)}}{\text{VFB (typical)}} - 1 \right] \times \frac{\text{K1}}{\text{K2}} + 1 \right\} \dots (9)$$

Therefore, variation in Vout is expressed as

$$\frac{\text{Vout}}{\text{Vout (typical)}} = \left[\frac{\text{VFB}}{\text{Vout (typical)}} \times \left\{ \left[\frac{\text{Vout (typical)}}{\text{VFB (typical)}} - 1\right] \times \frac{\text{K1}}{\text{K2}} + 1\right\} - 1\right] \times 100 \text{ (\%)} \dots (10)$$

R2J20702NP Target Specification

The accuracy of Vout can be estimated by using equation (10).

For example, if Vout (typical) = 1.8 V, resistance variation is 1% (i.e. K1, K2 = 1.01 and 0.99), and VFB = 594 mV to 606 mV:

$$\frac{\text{Vout}}{\text{Vout (typical)}} = \frac{\text{VFB}}{\text{Vout (typical)}} \times \left\{ \frac{\text{Vout (typical)}}{\text{VFB (typical)}} - 1 \times \frac{\text{K1}}{\text{K2}} + 1 \right\} - 1 \times 100 \text{ (\%)} \dots (10)$$

$$= \frac{606 \text{ mV}}{1.8 \text{ V}} \times \left\{ \frac{1.8 \text{ V}}{600 \text{ mV}} - 1 \times \frac{1.01}{0.99} + 1 \right\} - 1 \times 100 \text{ (\%)}$$

$$= 2.36\%$$
or
$$= \frac{594 \text{ mV}}{1.8 \text{ V}} \times \left\{ \frac{1.8 \text{ V}}{600 \text{ mV}} - 1 \times \frac{0.99}{1.01} + 1 \right\} - 1 \times 100 \text{ (\%)}$$

$$= -2.31\%$$

Therefore, the output accuracy will be  $\pm 2.3\%$  under the above conditions.

Figure 5 shows the relationship between the accuracy of the resistance and the accuracy of the output voltage. The resistor value must have an accuracy of 0.5% if the variation in output voltage from the system is to be kept within two percent across the voltage range from 0.6 to 3.3 V.



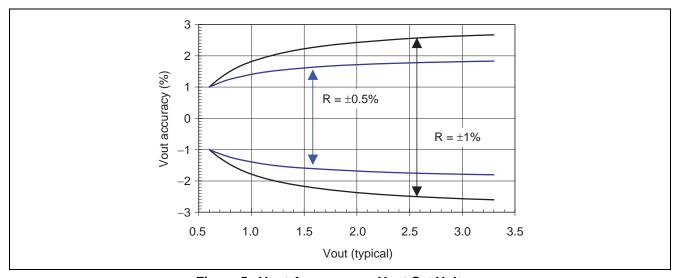


Figure 5 Vout Accuracy vs. Vout Set Voltage


### **Current Sharing**

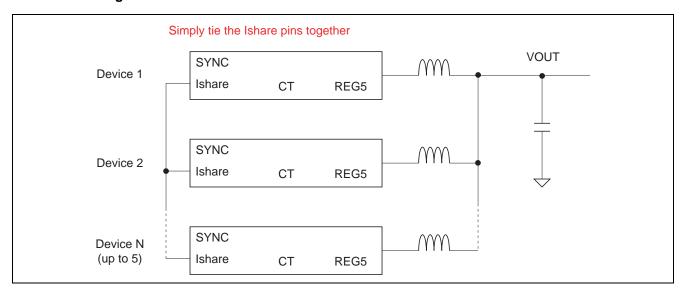


#### **External Synchronization**

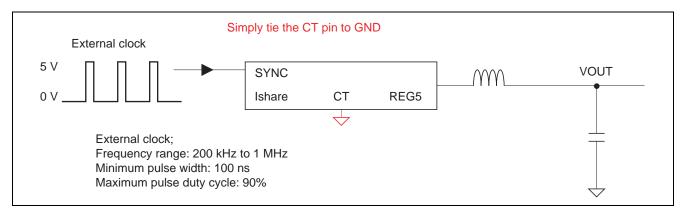

#### **Current Sharing and Synchronization**

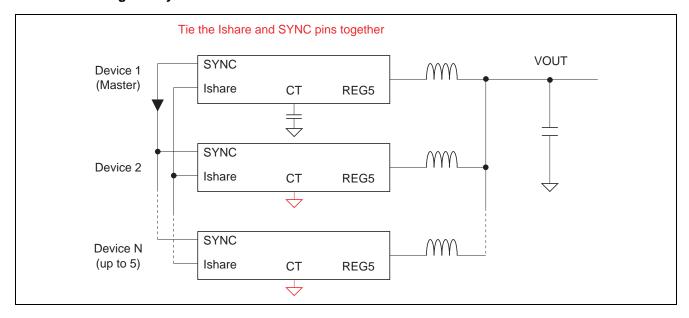


#### **Two-Phase Operation**

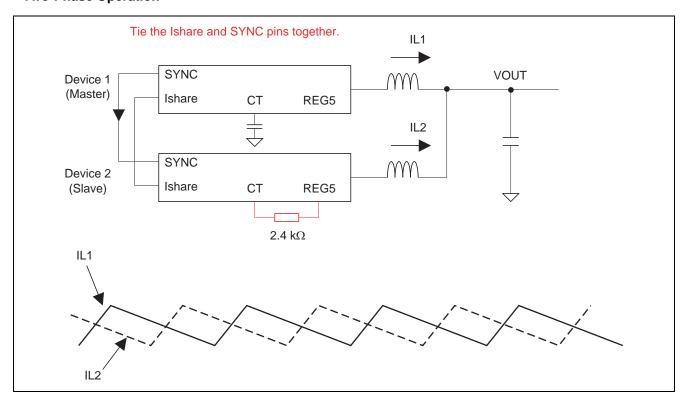

# **Timing Chart**


#### **Peak Current Control**

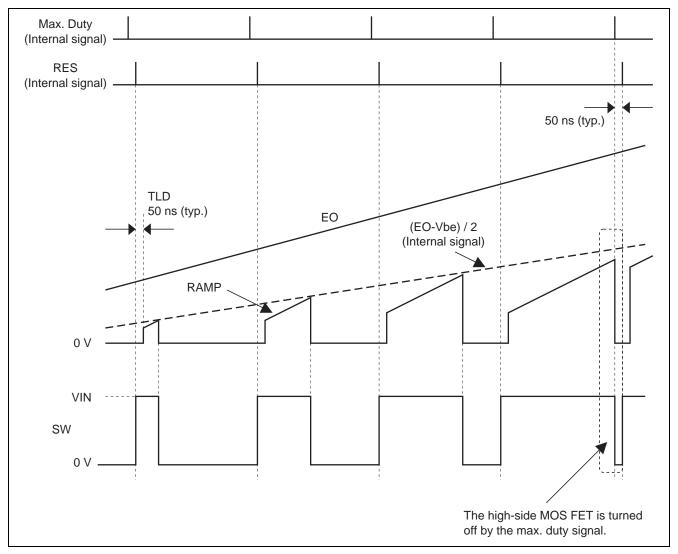

Note: Propagation delay is ignored.

#### **Oscillator and Pulse Generator**

1. Standalone operation or operation as the master chip in a parallel configuration with other chips.

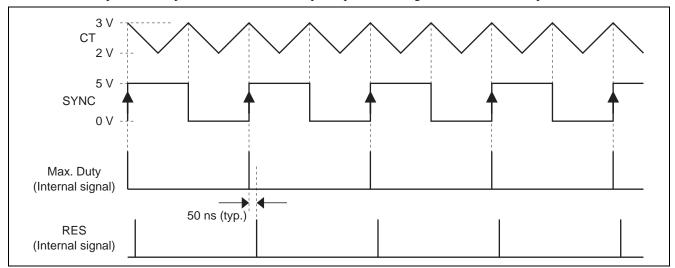

Note: Propagation delay is ignored.

Frequency of oscillation for CT:


Fct = 
$$\frac{160 \mu A}{2 \times (CT(F) + 18 pF) \times 1 V}$$
 (Hz)

Switching frequency

$$Fsw = 0.5 \times Fct$$
 (Hz)


Frequency setting range (for Fsw): 200 kHz to 1 MHz (i.e. 400 kHz to 2 MHz for Fct)

2. Operation as a slave chip (simple synchronous operation)

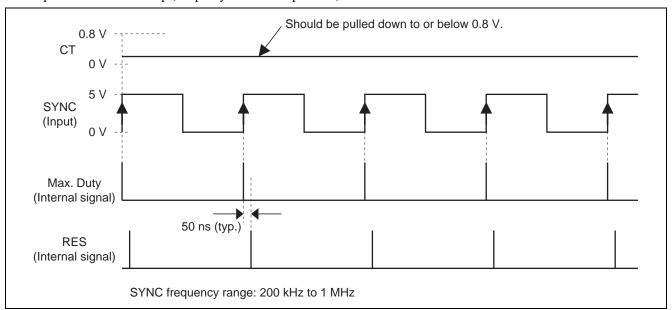


Note: Propagation delay is ignored.

3. Operation as a slave chip in a parallel configuration (two-phase operation)

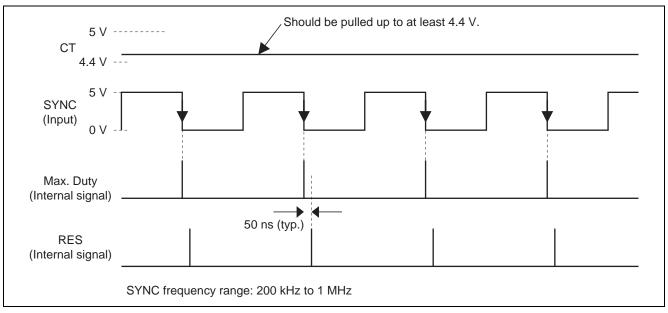


Note: Propagation delay is ignored.

# Hiccup Operation when the Over-Current Limit (OCL) is Reached

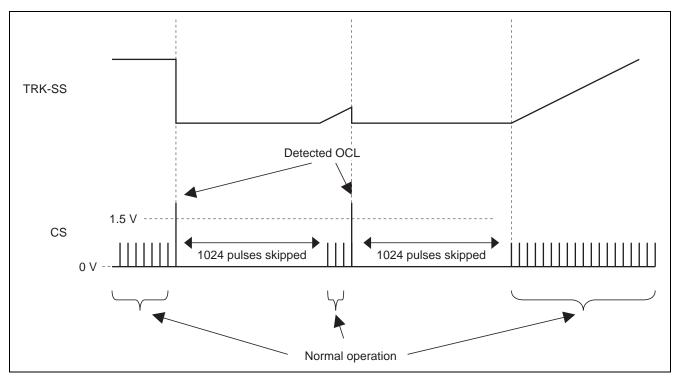


Note: Propagation delay is ignored.


#### **Main Characteristics**

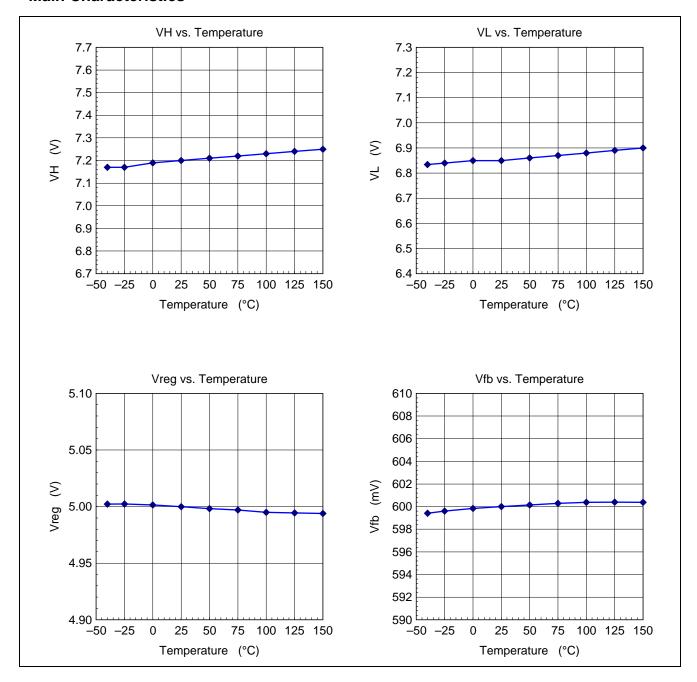

R2J20702NP Target Specification

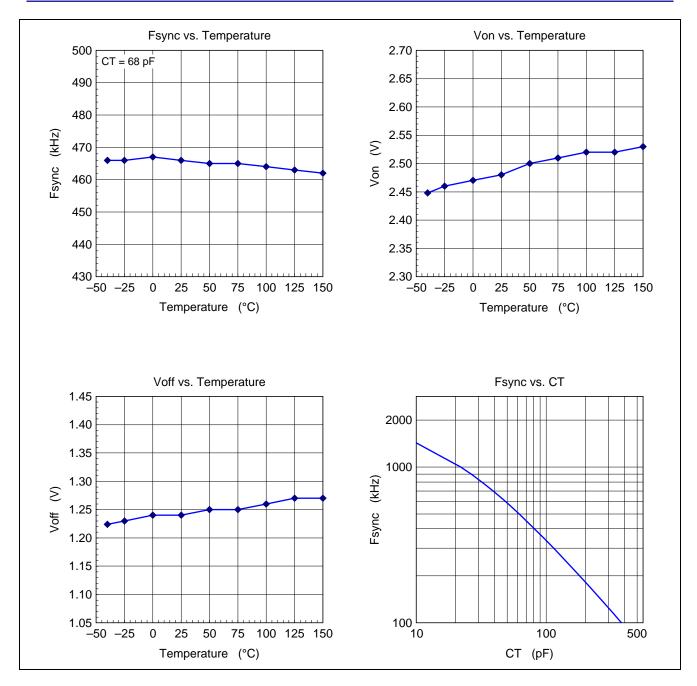

### **Package Dimensions**

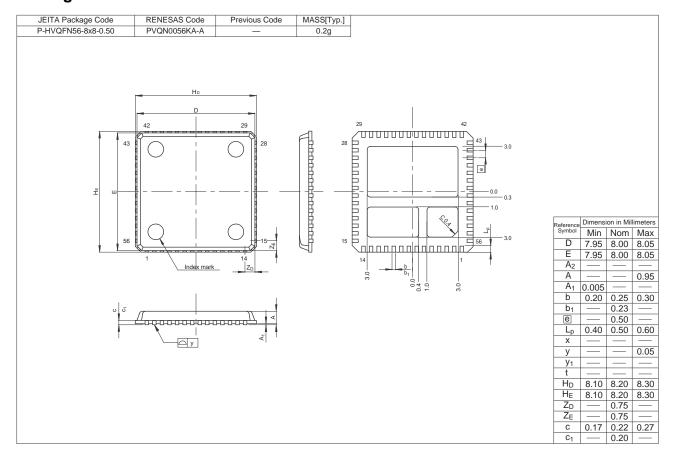

# **Ordering Information**

Part Name	Quantity	Shipping Container	
R2J20702NP#G3	2500 pcs	Taping Reel	

#### Notice

- 1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
- 2. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or
- 3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
- 4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the
- 5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
- 6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
- 7. Renesas Electronics products are classified according to the following three quality grades: "Standard", "High Quality", and "Specific". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as "Specific" without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics product for any application for which it is not intended without the prior written consent of Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for an application categorized as "Specific" or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electron The quality grade of each Renesas Electronics product is "Standard" unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.
  - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools personal electronic equipment; and industrial robots.
  - "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; safety equipment; and medical equipment not specifically designed for life support.
- "Specific": Aircraft: aerospace equipment: submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.
- 8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
- 9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
- 10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
- 11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics
- 12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries. (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.
- (Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics



#### **SALES OFFICES**

#### Renesas Electronics Corporation

http://www.renesas.com

Refer to "http://www.renesas.com/" for the latest and detailed information

Renesas Electronics America Inc. 2880 Scott Boulevard Santa Clara, CA 95050-2554, U.S.A. Tel: +1-408-588-6000, Fax: +1-408-588-6130

Renesas Electronics Canada Limited 1101 Nicholson Road, Newmarket, Ontario L3Y 9C3, Canada Tel: +1-905-898-5441, Fax: +1-905-898-3220

Renesas Electronics Europe Limited
Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K
Tel: +44-1628-585-100, Fax: +44-1628-585-900

Renesas Electronics Europe GmbH Arcadiastrasse 10, 40472 Düsseldorf, Germany Tel: +49-211-65030, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd.
7th Floor, Quantum Plaza, No.27 ZhiChunLu Haidian District, Beijing 100083, P.R.China
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.
Unit 204, 205, AZIA Center, No.1233 Lujiazui Ring Rd., Pudong District, Shanghai 200120, China Tel: +86-21-5877-1818, Fax: +86-21-6887-7858 / -7898

เพลายอย อเชียงเทเชง **ทยายู nong Limited** Unit 1601-1613, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong Tel: +852-2866-9318, Fax: +852-2866-9022/9044

Renesas Electronics Taiwan Co., Ltd.

7F, No. 363 Fu Shing North Road Taipei, Taiwar Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

Renesas Electronics Singapore Pte. Ltd.

1 harbourFront Avenue, #06-10, keppel Bay Tower, Singapore 098632
Tel: +65-6273-0200, Fax: +65-6278-8019
Renesas Electronics Malaysia Sdn.Bhd.

เพราะสอน เมราะเพราะเพราะสามารถ งสท.**ษกด.** Unit 906, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

Renesas Electronics Korea Co., Ltd. 11F., Samik Lavied' or Bldg., 720-2 Yeoksam-Dong, Kangnam-Ku, Seoul 135-080, Korea Tel: 482-2-588-3737, Fax: 482-2-588-5141